




SINGER®

9340

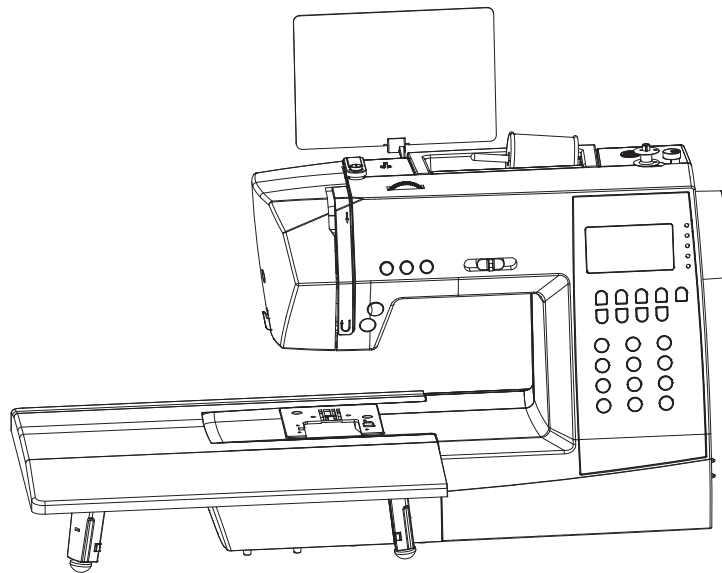


Liste de pièces
Lista de Piezas
Parts List


® A registered trademark of The Singer Company Ltd. or its affiliates.
® *Una marca registrada de The Singer Company Ltd. o sus afiliados.*
® *Une marca déposée de The Singer Company Ltd. ou ses filiales.*

<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	270 H1A0403000	ARM SHAFT SPROCKET
2	270 00742505M6	MOTOR DRIVE BELT
3	416498001	HAND WHEEL
4	270 00749402M5	MOTOR DRIVE BELT (2M)
6	416566601	PHOTO SENSOR PLATE CPL
#1	416484501	THREAD TAKE UP LEVER COMPLETE


B

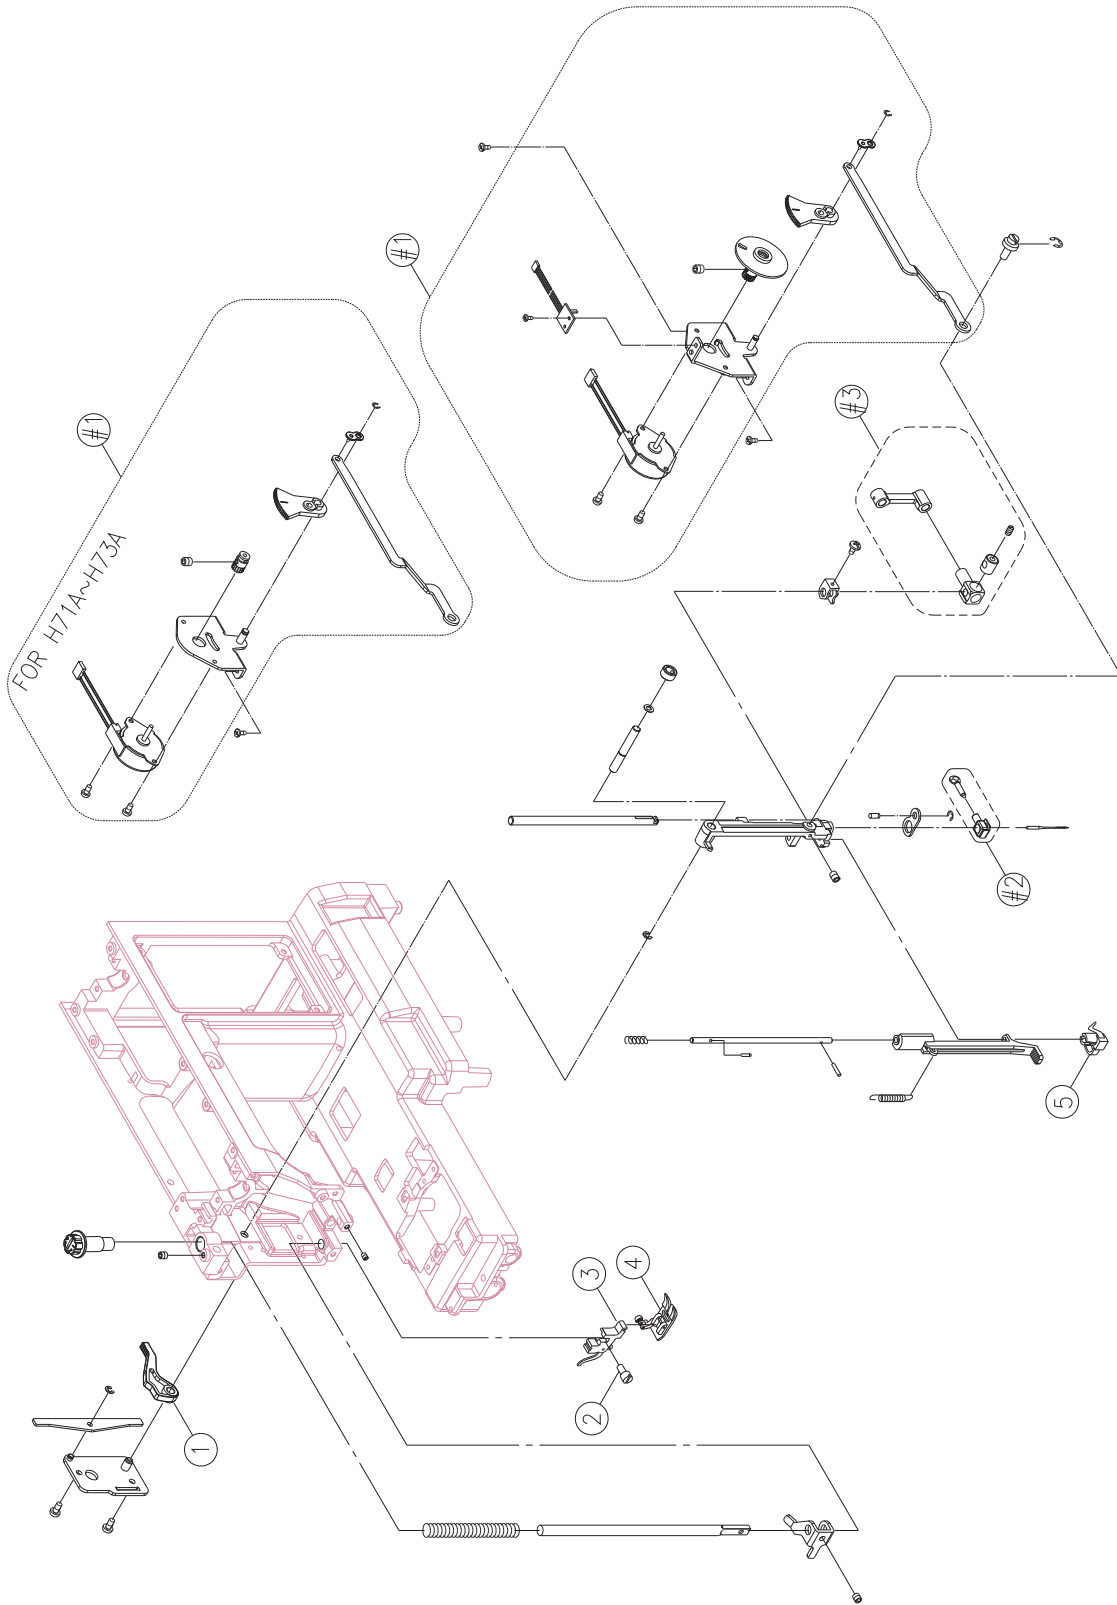


<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	270 H1A0073000	PRESSER BAR LIFTER LEVER
2	416184201	SET SCREW (9/64×40×7.5)
3	416128201	SHANK COMPLETE
4	270 006186008	ZIGZAG PRESSER FOOT
5	416145801	AUTO THREADER
#1	416498101	ZIGZAG PULSE MOTOR PLATE COMPLETE
#2	416245301	NEEDLE CLAMP COMPLETE
#3	416235801	NEEDLE BAR CRANK ROD COMPLETE

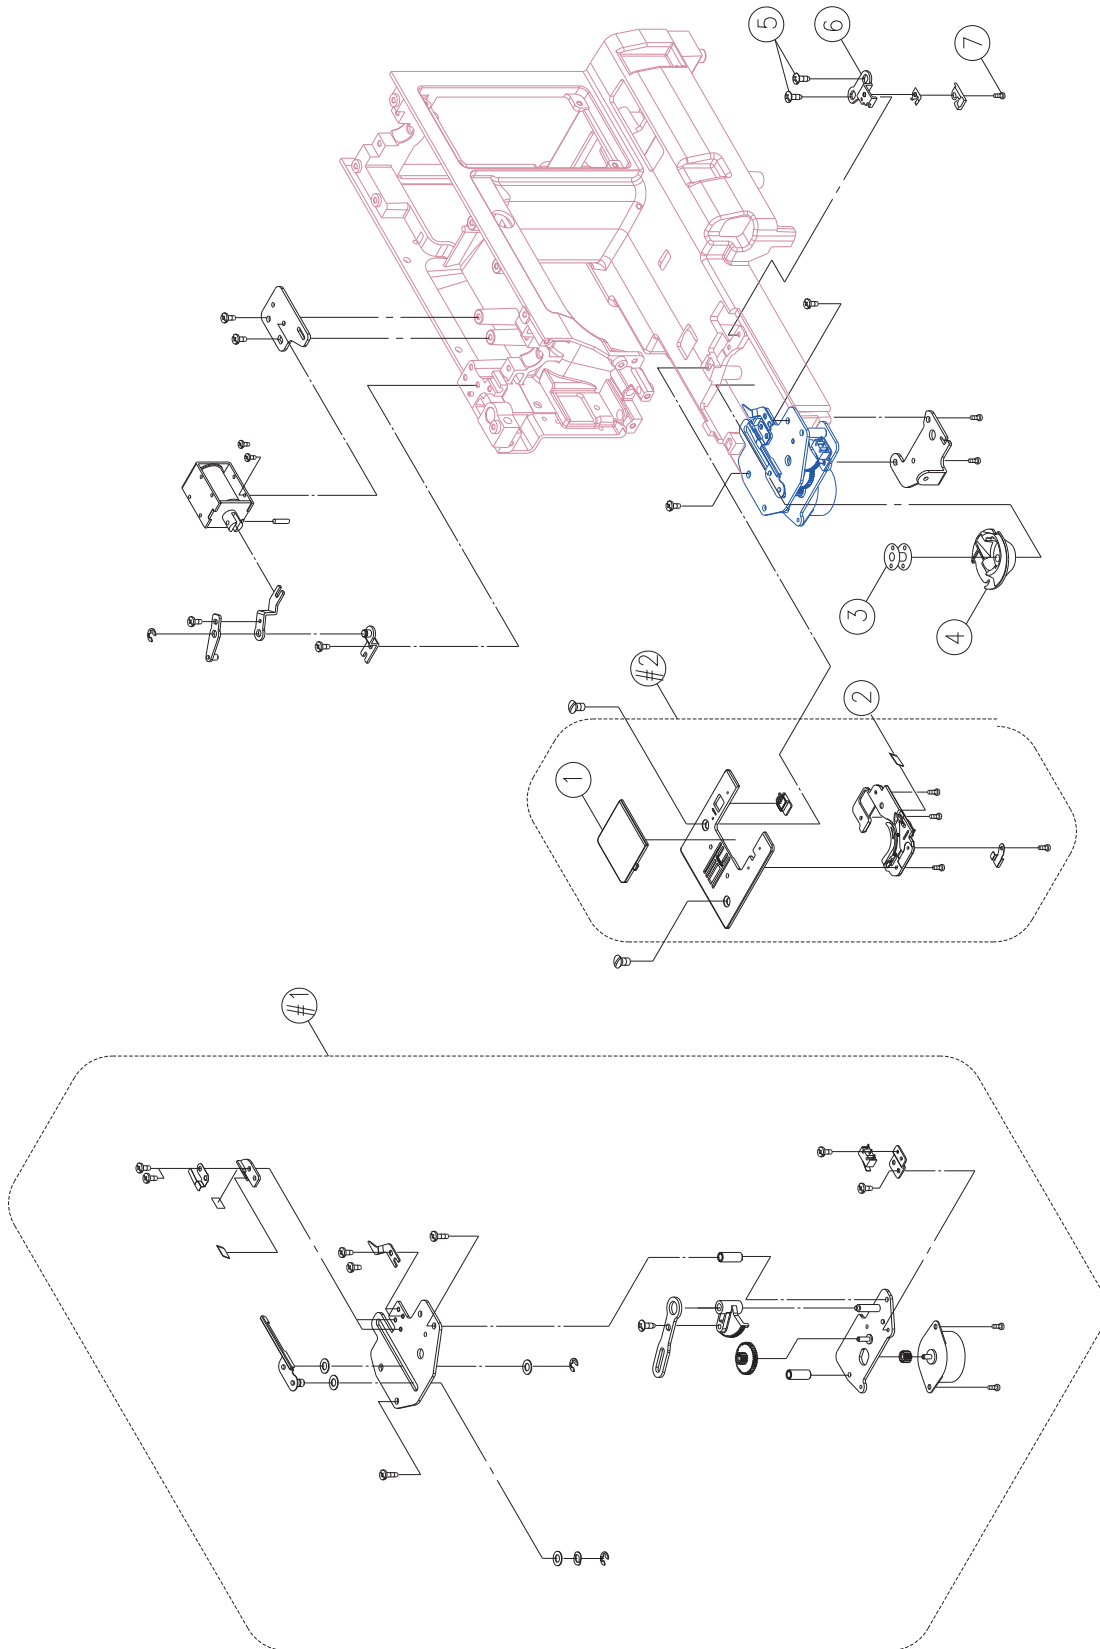


<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	416565401	NEEDLE PLATE COVER
2	416172501	THREAD CUTTER
3	68000175	BOBBIN
4	416568801	BOBBIN HOLDER ASSEMBLY
5	416121201	SET SCREW (M4×6 B)
6	416143901	ROTARY HOOK PLATE
7	416119001	SET SCREW (M2×2.5)
#1	416828601	AUTO CUTTER COMPLETE
#2	416828701	NEEDLE PLATE COMPLETE

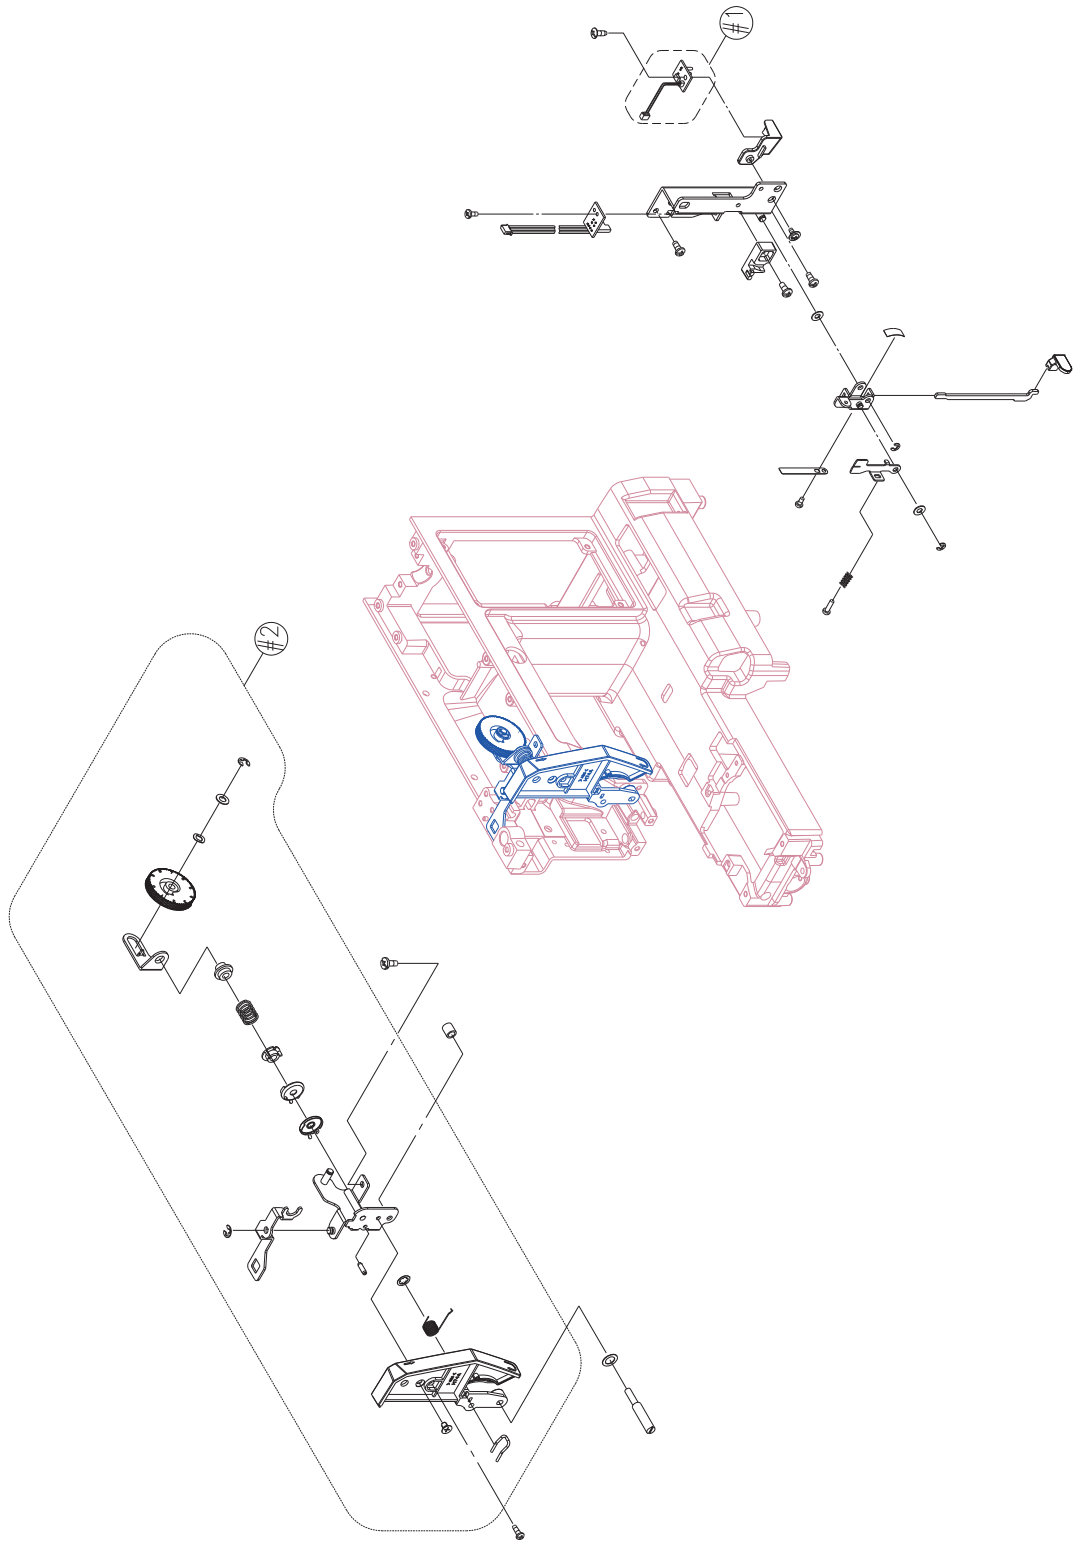


Pos	Part No	Description
#1	416595101	LED LIGHT LAMP COMPLETE
#2	416828901	DIAL TENSION COMPLETE

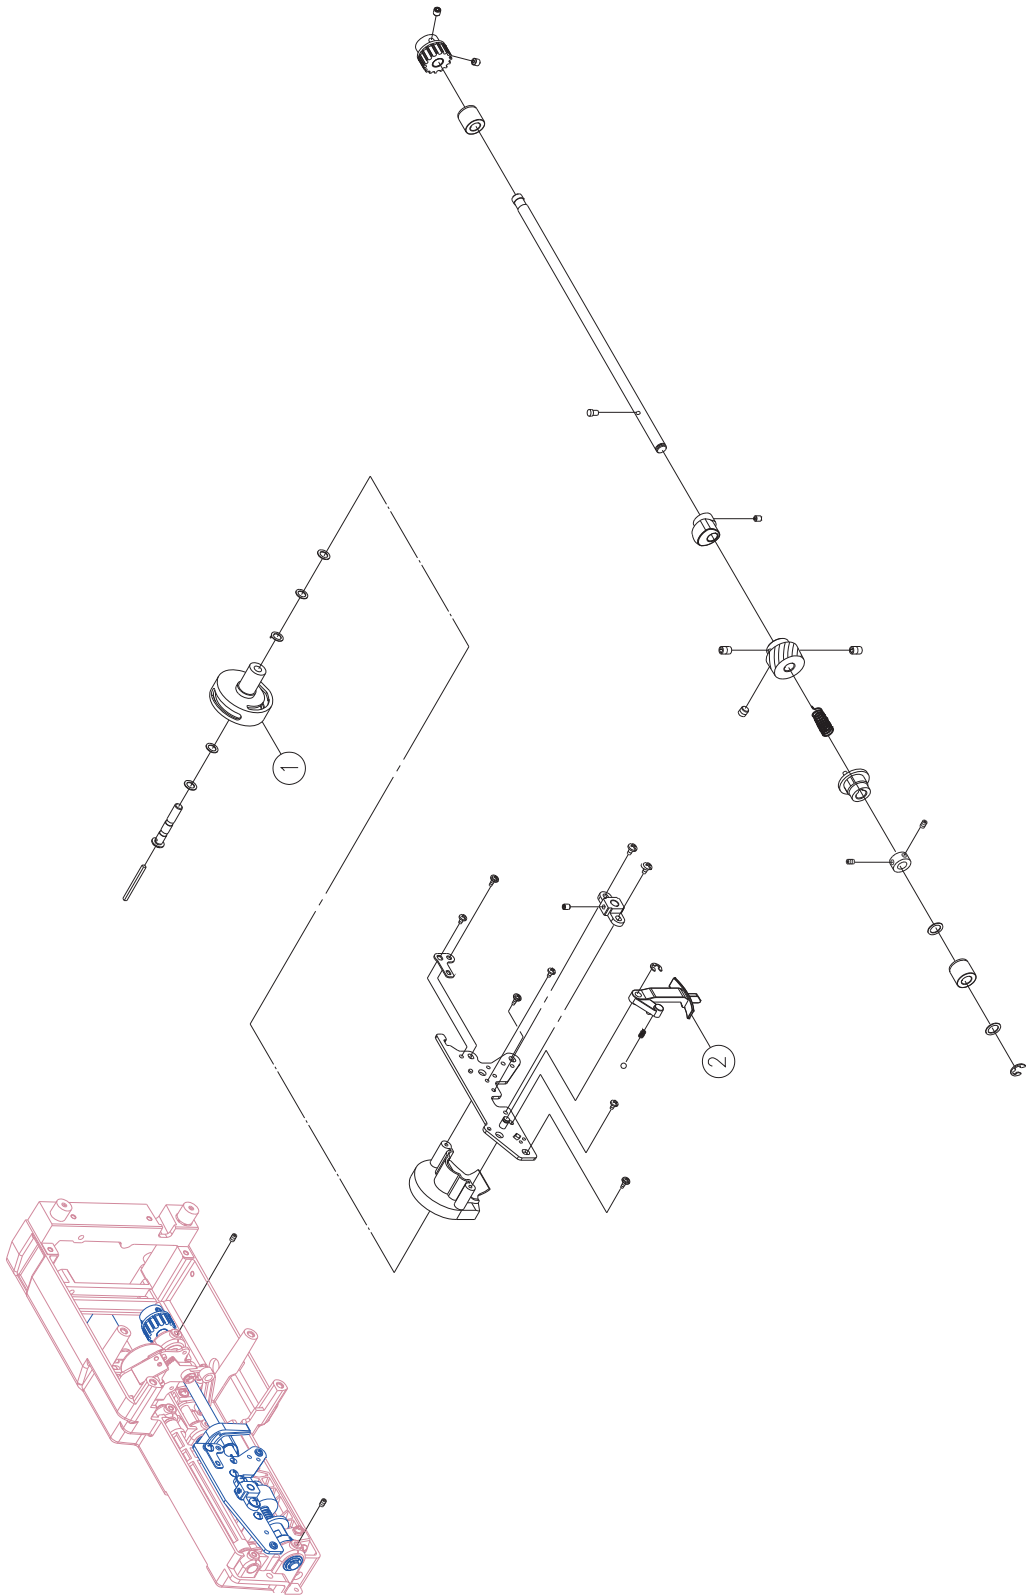

<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	416479801	SHUTTLE HOOK HOLDER
2	416498601	TOOTH LEVER ARM

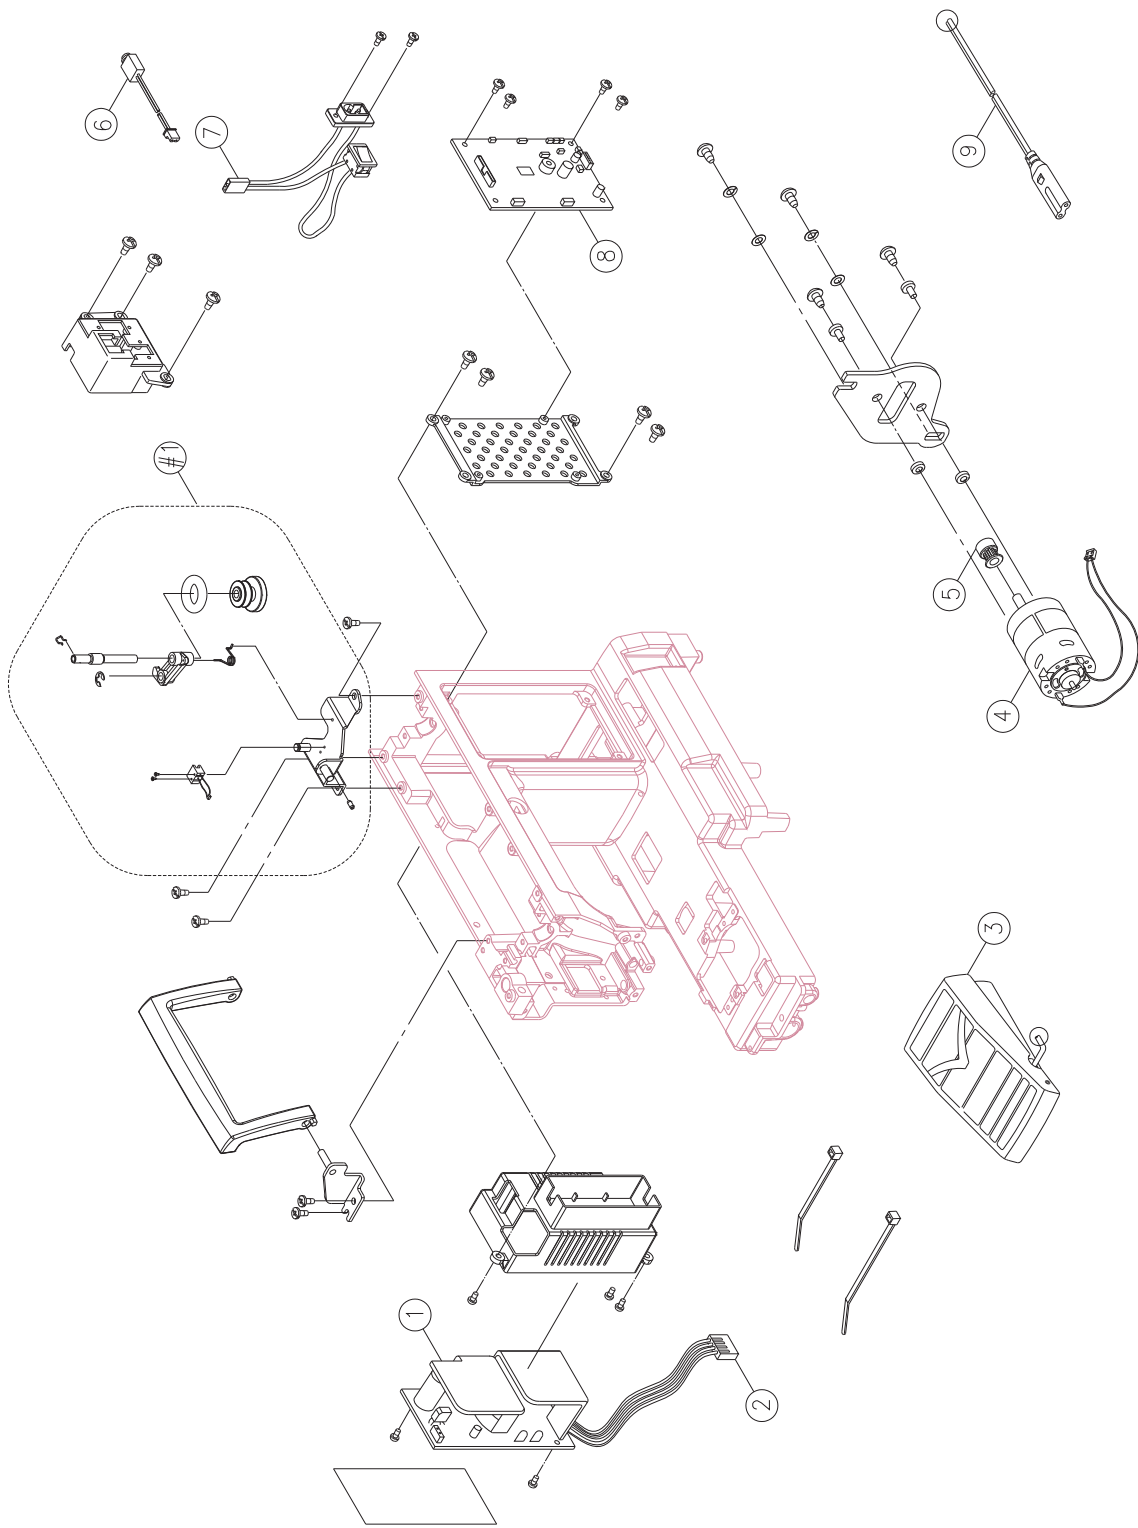


Pos	Part No	Description
1	416498801	HF TRANSFORMER COMPLETE (for 230V)
	416498701	HF TRANSFORMER COMPLETE (for 120V)
2	416498901	HF TRANSFORMER WIRE (FOR 120V) UL
	416499001	HF TRANSFORMER WIRE (FOR 230V) EU.
3	416113701	FOOT CONTROLLER (C-9000)
4	416417101	MAIN MOTOR
6	416499401	CONTROLLER RECEPTACLE (120V)
	416499501	CONTROLLER RECEPTACLE (230V)
7	416499201	SWITCH RECEPTACLE ASS'Y (120V)
	416499301	SWITCH RECEPTACLE ASS'Y (230V)
8	416829001	MAIN CIRCUIT BOARD
9	412157903	POWER CORD (FOR 120V) US
	412157801	POWER CORD (FOR 230V) EU
	412158101	POWER CORD (FOR 240V) AU
#1	416499601	BOBBIN WINDER COMPLETE

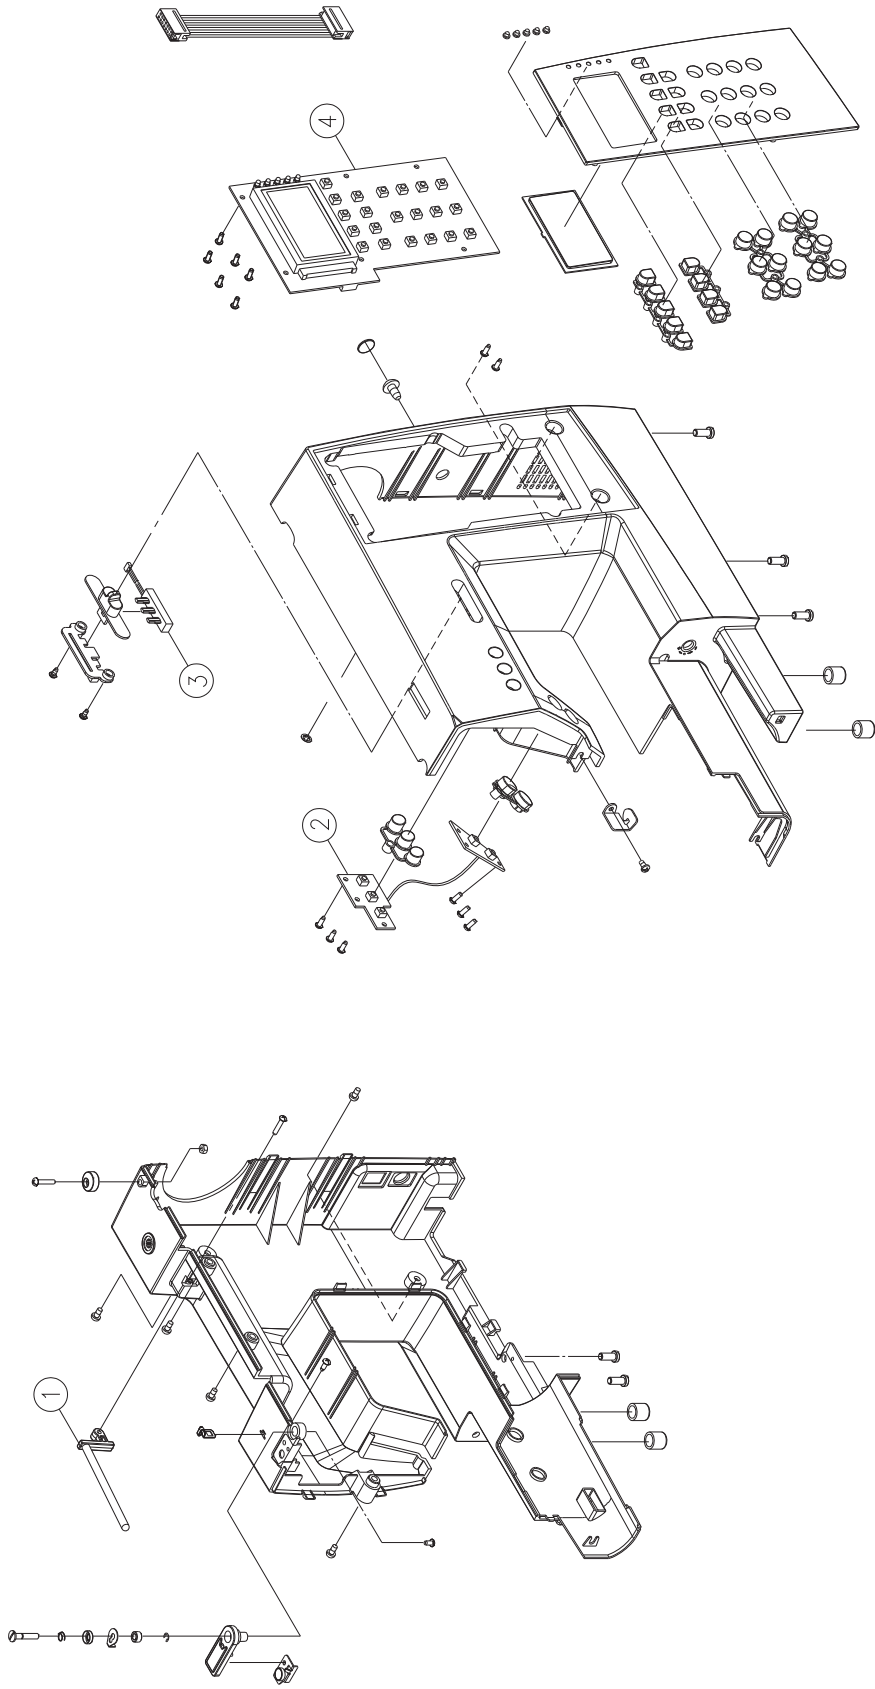


<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	416169401	SPOOL ROD
2	416499701	KEY PLATE
3	270 008P2C0009	SLIDE VOLUME
4	416499901	LCD KEY PLATE

Standard accessories

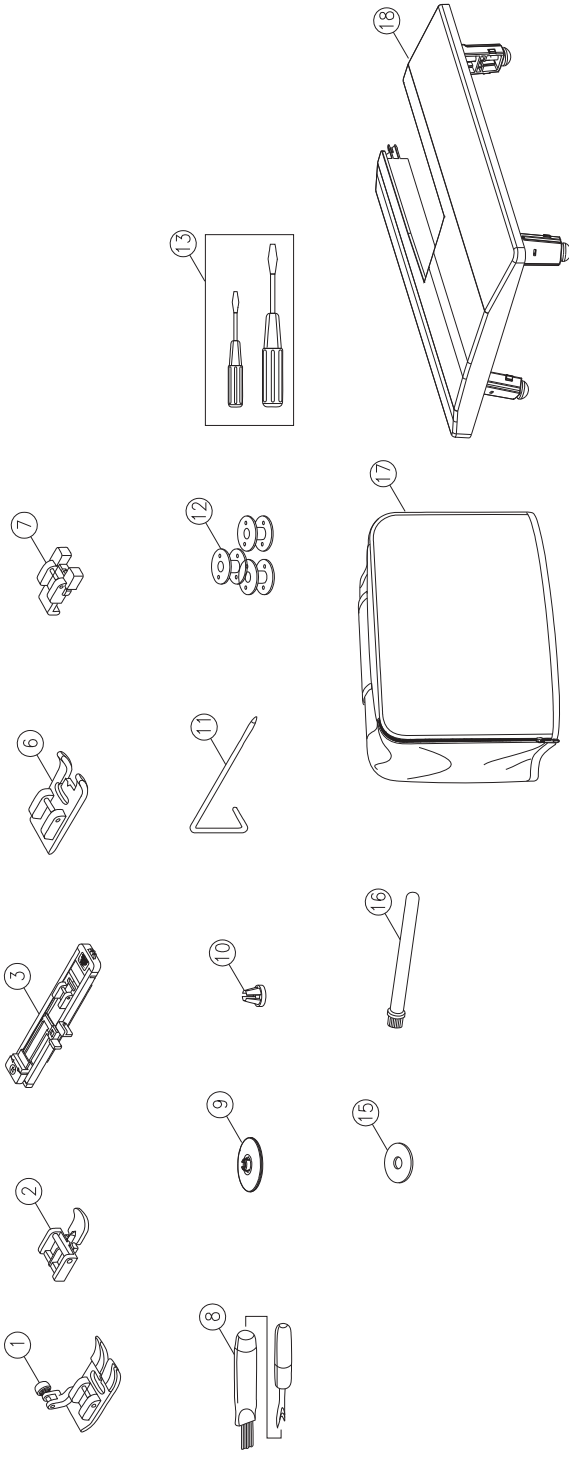

Optional accessories

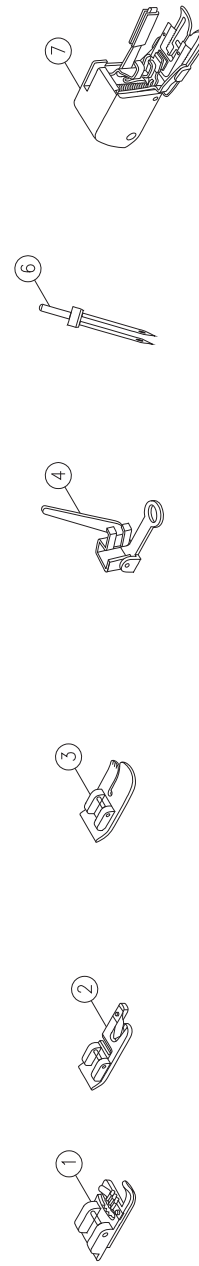

Pos	Part No	Description
1	270 006186008	ALL PURPOSE FOOT
2	416128701	ZIPPER FOOT (I)
3	270 006H1A0004	BUTTONHOLE FOOT
6	270 006172008	SATIN STITCH FOOT A
7	416284501	BUTTON SEWING FOOT
8	416127701	BRUSH & SEAM RIPPER
9	416500701	SPOOL HOLDER (LARGE)
10	416500801	SPOOL HOLDER (SMALL)
11	416127101	QUILTING GUIDE
12	68000175	BOBBIN
13	270 006012008	SCREWDRIVER (L & S)
15	416127301	SPOOL PIN FELT
16	416566201	AUXILIARY SPOOL PIN
17	416574101	SEWING MACHINE DUST COVER
18	416494901	EXTENSION TABLE
1	006813008.01	CORDING FOOT(M)
2	006900008.01	ROLLED HEM FOOT(K)
3	416129101	QUILTING FOOT (P)
4	416127401	EMBROIDERY FOOT
6	270 006020008	TWIN NEEDLE
7	416284301	WALKING FOOT