

Parts List



 
Designer I Exclusive Sensor System

 
Part No	Description	Page	Part No	Description	Page
411 72 10-01	Washer	G	412 42 37-01	Knife	A, B, D
411 75 00-08	Needle bar	K	412 44 40-02	Hook	E
411 75 03-02	Screw	K	412 44 44-01	Gear	E
411 75 04-01	Screw	K	412 44 68-01	Screw	R
411 78 10-03	Lamp	A, K	412 44 69-01	Grip 150x240	R
411 96 68-01	Screw	A, D, K, P, Q	412 44 83-45	Circuit board	C
411 96 68-03	Screw	A, B, K	412 44 87-01	Spring, bobbin winding	B
411 96 68-04	Screw	K	412 45 09-02	Touch board	A
411 96 68-05	Screw	A, M	412 45 11-01	Circuit board, push buttons left	A
411 96 68-07	Screw	P	412 45 23-01	Knife, compl	B
411 96 68-08	Screw	P	412 45 24-01	Knife holder	B
411 96 68-10	Screw	B	412 45 38-01	Circuit board, push buttons right	M
411 96 68-12	Screw	C	412 46 45-01	Screw	E
411 96 68-20	Screw	A	412 47 16-01	Thread tension	E
411 96 68-21	Screw	K	412 48 09-02	Protection-thread take up	A
411 96 68-24	Screw	K	412 49 17-01	Floppy disk drive	A
411 96 68-25	Screw PT 16*8	K, M	412 49 25-01	Foot control compl.	N
411 96 68-26	Screw	K	412 49 30-01	Control unit with winder	N
411 96 68-28	Screw PT 30*6	A	412 49 49-01	Distance	C
411 96 71-07	Screw	C	412 50 01-01	Sewing head, frame compl	K
411 96 72-04	Screw M 3*6	P	412 50 06-01	Bearing	K
411 96 73-06	Screw 25*6	R, Q	412 50 08-01	Gear segment	K
411 96 74-01	Screw	A	412 50 09-01	Spring	K
411 96 75-01	Washer	M	412 50 10-01	Spring	K
411 98 14-01	Washer	R	412 50 11-01	Link	K
412 00 13-01	Washer	E	412 50 15-01	Bearing	K
412 05 60-01	Screw	C	412 50 19-01	Back holder, needle threader	K
412 05 60-04	Screw	A, F, H, P	412 50 20-01	Front holder, needle threader	K
412 05 60-06	Screw	B, C, F, H, I, L	412 50 21-01	Needle threader	K
412 05 60-10	Screw	C, F	412 50 22-01	Setting plate	K
412 05 60-11	Screw	G, P, Q	412 50 23-02	Eccentric needle adjust.	K
412 05 60-12	Screw M 4*6	P, Q	412 50 24-01	Cross head compl.	K
412 15 27-01	Cog wheel	F	412 50 27-01	Calibration stop	K
412 15 78-01	Cord device 220 V	N	412 50 31-01	Rack compl.	K
412 15 79-02	Cord device Japan	N	412 50 34-01	Pressar bar lifter	K
412 15 79-03	Cord device 120 V	N	412 50 41-01	Spring	K
412 15 80-02	Cord device England	N	412 50 42-01	Connecting Board, sewing head	K
412 15 81-01	Cord device Australia	N	412 50 43-01	Lamp holder compl.	K
412 15 98-01	Spring	N	412 50 46-01	Wedge	K
412 18 45-01	Foot	N	412 50 47-01	Clamp ring	K
412 19 53-01	Washer	F	412 50 48-01	Clamp ring	K
412 21 14-03	Screw	K	412 50 52-01	Plate	K
412 21 14-04	Screw	K	412 50 55-01	Frame , lower	K
412 21 14-06	Screw	K	412 50 56-01	Step motor	K
412 21 14-14	Screw	C	412 50 60-01	Side feeding unit	F
412 21 14-20	Screw	G	412 50 63-01	Draw bar	F
412 22 98-01	Nut	H	412 50 64-01	Cog segment	F
412 28 19-02	Screw	G, K	412 50 65-01	Clamp	F
412 28 54-02	Presser bar	K	412 50 66-01	Draw bar	F
412 28 79-01	Screw	D	412 50 72-01	Spring	H
412 30 06-01	Driver	L	412 50 73-01	Eccentric	F
412 30 07-01	Spring	L	412 50 87-01	Spring	D
412 30 08-01	Pully	L	412 50 88-01	Damper	D
412 30 09-02	Handwheel	L	412 50 89-01	Thread cutter gearbox	D
412 30 30-01	Guide arm	K	412 50 97-01	Slide	D
412 30 50-01	Foot	C	412 51 01-01	Thread hook	D
412 30 55-01	Rubber ring	B	412 51 05-01	Cover, thread cutter	D
412 30 66-01	Shaft	E	412 51 28-01	Step motor compl.	D
412 31 69-01	Spring	K	412 51 31-01	Cable, thread sensor compl	D
412 31 60-49	Pin	R	412 51 33-01	Bobbin holder	D
412 31 79-01	Clutch	L	412 51 34-01	Bobbin hatch	D
412 31 81-01	Clamp	I	412 51 36-01	Feed unit	G
412 31 84-01	Bushing, feed dog	G	412 51 37-01	Guide compl. With carriger	G
412 32 27-04	Bobbin winding unit	B	412 51 43-01	Block, guide	G
412 32 33-02	Sealing washer	B	412 51 44-01	Feed carriage	G
412 32 34-08	Step motor compl. Z-Z	K	412 51 49-01	Spring	G
412 32 34-09	Step motor compl. Feeding	H	412 51 50-01	Feed dog compl.	G
412 33 62-01	Cog wheel	K	412 51 51-01	Feed dog	G
412 32 84-01	Clamp	I, L	412 51 53-01	Spring	G
412 33 75-01	Spring	F	412 51 54-01	Lever, Feed lift	G
412 33 93-01	Attachment, motor	C	412 51 55-01	Spring	G
412 33 94-01	Muffler, motor	C	412 51 56-01	Stop ring	G
412 33 97-01	Motor	C	412 51 63-01	Worm gear	I
412 34 26-01	Spring	B	412 51 64-01	Holder, stopright card	C
412 34 50-01	Eccentric	B	412 51 68-01	Lower shaft	I
412 34 51-01	Adjusting arm	B	412 51 69-01	Eccentric feed	I
412 34 54-01	Cog belt , motor	L	412 51 70-01	Distance	I
412 34 60-01	Stop ring	I	412 51 76-01	Accessory box	O
412 34 81-01	Spring	H	412 51 89-01	Nut	M
412 34 82-01	Screw	H	412 51 90-01	Housing, Thread tension	M
412 34 85-01	Joint cross	H	412 51 91-01	Sensor	M
412 34 88-01	Fastner	H	412 51 92-01	Spring	M
412 34 96-01	Cablage, motor	C	412 51 94-01	Adjusting sleeve	M
412 34 97-02	Cablage for PC Board	C	412 51 95-01	Push buttons	M
412 35 26-01	Washer	I	412 51 97-03	Thread tension cover	A, M
412 35 33-02	Driving wheel compl.	C	412 51 98-02	Thread guide	A
412 35 42-01	Pully	I	412 52 01-01	Sealing	A
412 35 62-01	Pin	B	412 52 05-01	Lamp comp.	A
412 36 83-03	Arm shaft compl.	L	412 52 08-01	Lamp guard	A
412 36 84-01	Cog belt	L	412 52 09-01	Thread holder	A
412 36 87-01	Pin	L	412 52 10-01	Reel pin	A
412 37 11-01	Thread real disc (Small)	A	412 52 14-01	Spring	M
412 37 11-02	Thread real disc (Big)	A	412 52 15-01	Heat protector	A
412 37 82-01	Nut	G	412 52 20-01	Hinge	A
412 38 42-02	Cog wheel	P, Q	412 52 23-01	Bushing	A
412 38 43-01	Washer	P, Q	412 52 25-02	Back cover, upper	B
412 39 09-26	Plastic bag with acc.	O	412 52 26-01	Handle	B
412 39 47-01	Washer, hook	E	412 52 28-01	Back cover, free arm	B
412 39 90-01	Nut	R	412 52 30-01	Cover plate, embroidery	B
412 40 97-01	Screw	K	412 52 33-01	Base plate, cover	C
412 41 12-02	Ankel	K			

Part No	Description	Page
412 52 34-01	Base plate	C
412 52 40-01	Step motor Y-unit compl	Q
412 52 42-01	Cable, embroidery unit	P
412 52 46-01	Cog wheel, large	P, Q
412 52 48-01	Holder, X-cog belt	P
412 52 49-01	Adjuster, belt tension	P
412 52 53-01	Holder, Y-cog belt	Q
412 52 54-02	Sensor	Q
412 52 55-01	Cog belt, Y-unit	P
412 52 61-01	Circuit board	Q
412 52 64-02	Frame Y-unit	Q
412 52 65-02	Button	Q
412 52 66-01	Spring	Q
412 52 67-01	Cog belt	Q
412 52 71-02	Embroidery hoop 150x240	R
412 52 77-01	Upper cover, X-unit	P
412 52 78-01	Lower cover, X-unit	P
412 52 79-01	Cover,Y-unit	Q
412 52 80-01	Step motor cover, Y-unit	P
412 52 83-01	Locker, Embroidery unit	P
412 52 84-01	Spring	P
412 52 85-01	Guide rail	P
412 52 92-01	Cover	O
412 52 97-01	Friction tape	P
412 53 03-01	Screen	I
412 53 30-01	Stitch plate	D
412 53 33-01	Push buttons	A
412 53 34-01	Guide, real pin	A
412 53 36-01	Link	A
412 53 37-01	Knob, feed dog lowering	A
412 53 74-01	Embroidery templet 100x100	R
412 53 75-01	Embroidery templet 150x240	R
412 53 78-01	Cable, floppy	A
412 53 80-01	Cable, display	A
412 53 80-02	Cable, lamp transformer	A
412 54 02-01	Feeding unit	H
412 54 06-01	Calibration stop	H
412 54 07-01	Damper	H
412 54 08-01	Cog wheel	H
412 54 10-01	Shaft	H
412 54 48-01	Thread guide	A, M
412 54 52-01	Cog segment	D
412 54 53-01	Lever	D
412 54 54-01	Fetcher	D
412 54 55-01	Knife slide	D
412 54 56-01	Spring	C
412 54 64-01	Calibration lever	P, Q
412 54 65-02	Holder	Q
412 54 66-01	Pin, feed dog lowering	P
412 54 67-01	Transformer compl.	A
412 54 69-01	Cable, conn card, sewing head	C
412 54 69-02	Cable, connection card- left	A
412 54 69-03	Cable, connection card- right	M
412 54 69-04	Cable, connection card, stop right	C
412 54 96-01	Holder	A
412 54 97-01	Tap, thread guard	M
412 54 98-01	Washer	M
412 55 01-01	Bobbin case compl.	E
412 55 39-02	Card holder	P
412 55 40-01	Frame	R
412 55 42-01	Cable holder	A
412 55 43-03	Cover, bobbin winding	A
412 55 48-01	Step motor, thread tension	M
412 55 57-01	Spring	Q
412 55 58-01	Holder	A
412 55 62-01	Step motor	F
412 55 79-01	Thread guide	A
412 55 80-01	Thread guide	A
412 55 81-01	Washer	M
412 55 82-01	Cable	C
412 55 83-01	Holder	Q
412 55 84-01	Damper	L
412 55 85-01	Connecting board	P
412 55 93-01	Circuit board, stop right	C
412 56 13-01	Cutter, thread brake	D
412 56 15-45	Bobbin 10 pack	E
412 56 18-01	Step motor comp.	P
412 56 22-01	Cable holder, arm shaft	A
412 56 31-01	Thread guide	A
412 56 39-01	Cover, X-unit	P
412 56 43-03	Transformer comp.	C
412 56 54-01	Accessories, Embroidery	R
412 56 85-01	Dust cover	E
412 56 86-01	Adjusting washer	E
412 56 97-01	Distance, back cover	B
412 57 75-03	Cable holder	C
412 57 78-01	ESD-cable	H
412 57 97-01	Grip 100x100	R
412 58 16-01	Protector, floppy	A
412 58 25-01	Screw	K
412 58 99-01	Distance	B
412 59 00-02	Cover	Q
412 59 01-01	Cog wheel	M
412 59 11-01	Cable	K
412 59 78-01	ESD-spring	C
412 60 01-01	Needle bar frame	K
412 60 02-01	Sewing head	K
412 60 03-01	Thread take up	K
412 60 04-01	Hook cover	D
412 60 05-02	Thread tension unit,	M


Part No	Description	Page
412 60 06-01	Washer set, thread tension	M
412 60 10-01	Distance, step motor	M
412 60 71-01	Embroidery disks	R
412 61 31-01	Spring	M
412 61 32-01	Heat protector,	A
412 61 33-01	Lever	M
412 61 41-02	Front cover cpl.	A
412 61 42-01	LCD	A
412 61 61-01	Pressar foot holder	K
412 61 92-01	Frame	Q
412 62 55-02	Mega hoop	
412 62 88-01	X-shaft	P
412 62 89-01	Y-shaft	P
412 62 90-01	Bearing	P
412 62 91-01	ESD-Cable, front cover	H
412 65 13-01	Thread Guide	A
412 66 32-01	Needle threader Compl.	K
412 69 34-01	Stylus	B
412 70 32-01	Hinge	A
412 70 34-01	Spring	A
412 70 35-01	Lid smotherer	A
412 70 36-01	Spring	A
412 70 37-01	Lower button	A
412 70 69-01	Upper button	A
412 70 90-01	Door, front cover	A
412 72 17-01	Holder	A
412 72 57-01	Cover spring	A
412 74 61-01	Foot control	N
412 74 62-01	Lidcover	A
721 41 69-70	Pin	H
721 41 87-70	Pin	I, L
721 42 10-10	Pin	I
724 11 89-01	Screw	A
725 52 20-05	Screw M3*6	H
725 52 28-05	Screw	K
725 52 85-05	Screw	K
728 52 17-05	Screw	F, H, K, M
728 52 18-05	Screw	K
728 52 22-05	Screw M3*8	K
728 52 83-05	Screw M4*4	G
728 52 85-05	Screw	K
728 52 87-05	Screw M4*8	E
728 53 20-05	Screw	L
728 82 83-05	Screw	I, L
728 73 20-01	Screw	L
728 73 64-05	Screw 6*10 mm	C
734 11 12-71	Washer	D
734 11 25-41	Washer	K
735 21 36-01	Washer	C
735 31 05-00	C-Washer	M
735 31 08-20	C-Washer	E, P, Q
735 31 10-20	C-Washer	P, Q
735 58 23-00	Washer	M
735 58 35-00	Locking washer	A
735 58 55-00	Washer	L
735 61 13-40	Washer	D
735 61 18-40	C-Washer	K
735 61 36-40	C-washer	F, K
735 61 53-40	C-Washer	K
ACCESSORIES		
401 53 99-01	Buttonhole knife	O
401 55 55-01	Brush	O
411 17 32-01	Clearance plate	O
412 08 38-47	Marking pen, neutral	O
412 56 15-45	Bobbins (10)	O
412 36 14-01	Stitch plate opener	O
412 38 15-01	Screw driver	O
412 39 77-01	Net	O
412 44 77-01	Siccor	O
412 49 06-01	Templet pencil	O
412 57 01-01	Sleeve, lamp	O
412 60 19-01	Guide	O
PRESSER FEET		
411 73 95-01	Edge guide G	O
411 85 30-01	Presser foot H	O
412 00 16-01	Presser foot, decorative stitches	
412 03 73-01	Presser foot A	O
412 34 65-01	Presser foot S	O
412 37 08-01	Quilting foot P	O
412 38 01-01	Presser foot B	O
412 38 02-01	Buttonhole foot C	O
412 38 04-01	Presser foot D	O
412 38 05-01	Zipper foot E	O
412 38 06-01	Presser foot J	O
412 40 80-01	Button hole meter, comp.	O
412 43 37-01	Presser foot R	O
USERS GUIDE		
412 73 10-01	Users guide Swe	O
412 73 10-06	Users guide Den	O
412 73 10-11	Users guide Fin	O
412 73 10-21	Users guide Nor	O
412 73 10-26	Users guide Eng	O
412 73 10-31	Users guide Fra	O
412 73 10-36	Users guide Dutch	O
412 73 10-41	Users guide Ita	O
412 73 10-46	Users guide Spa	O
412 73 10-51	Users guide Ger	O
412 73 10-56	Users guide Rus	O

A

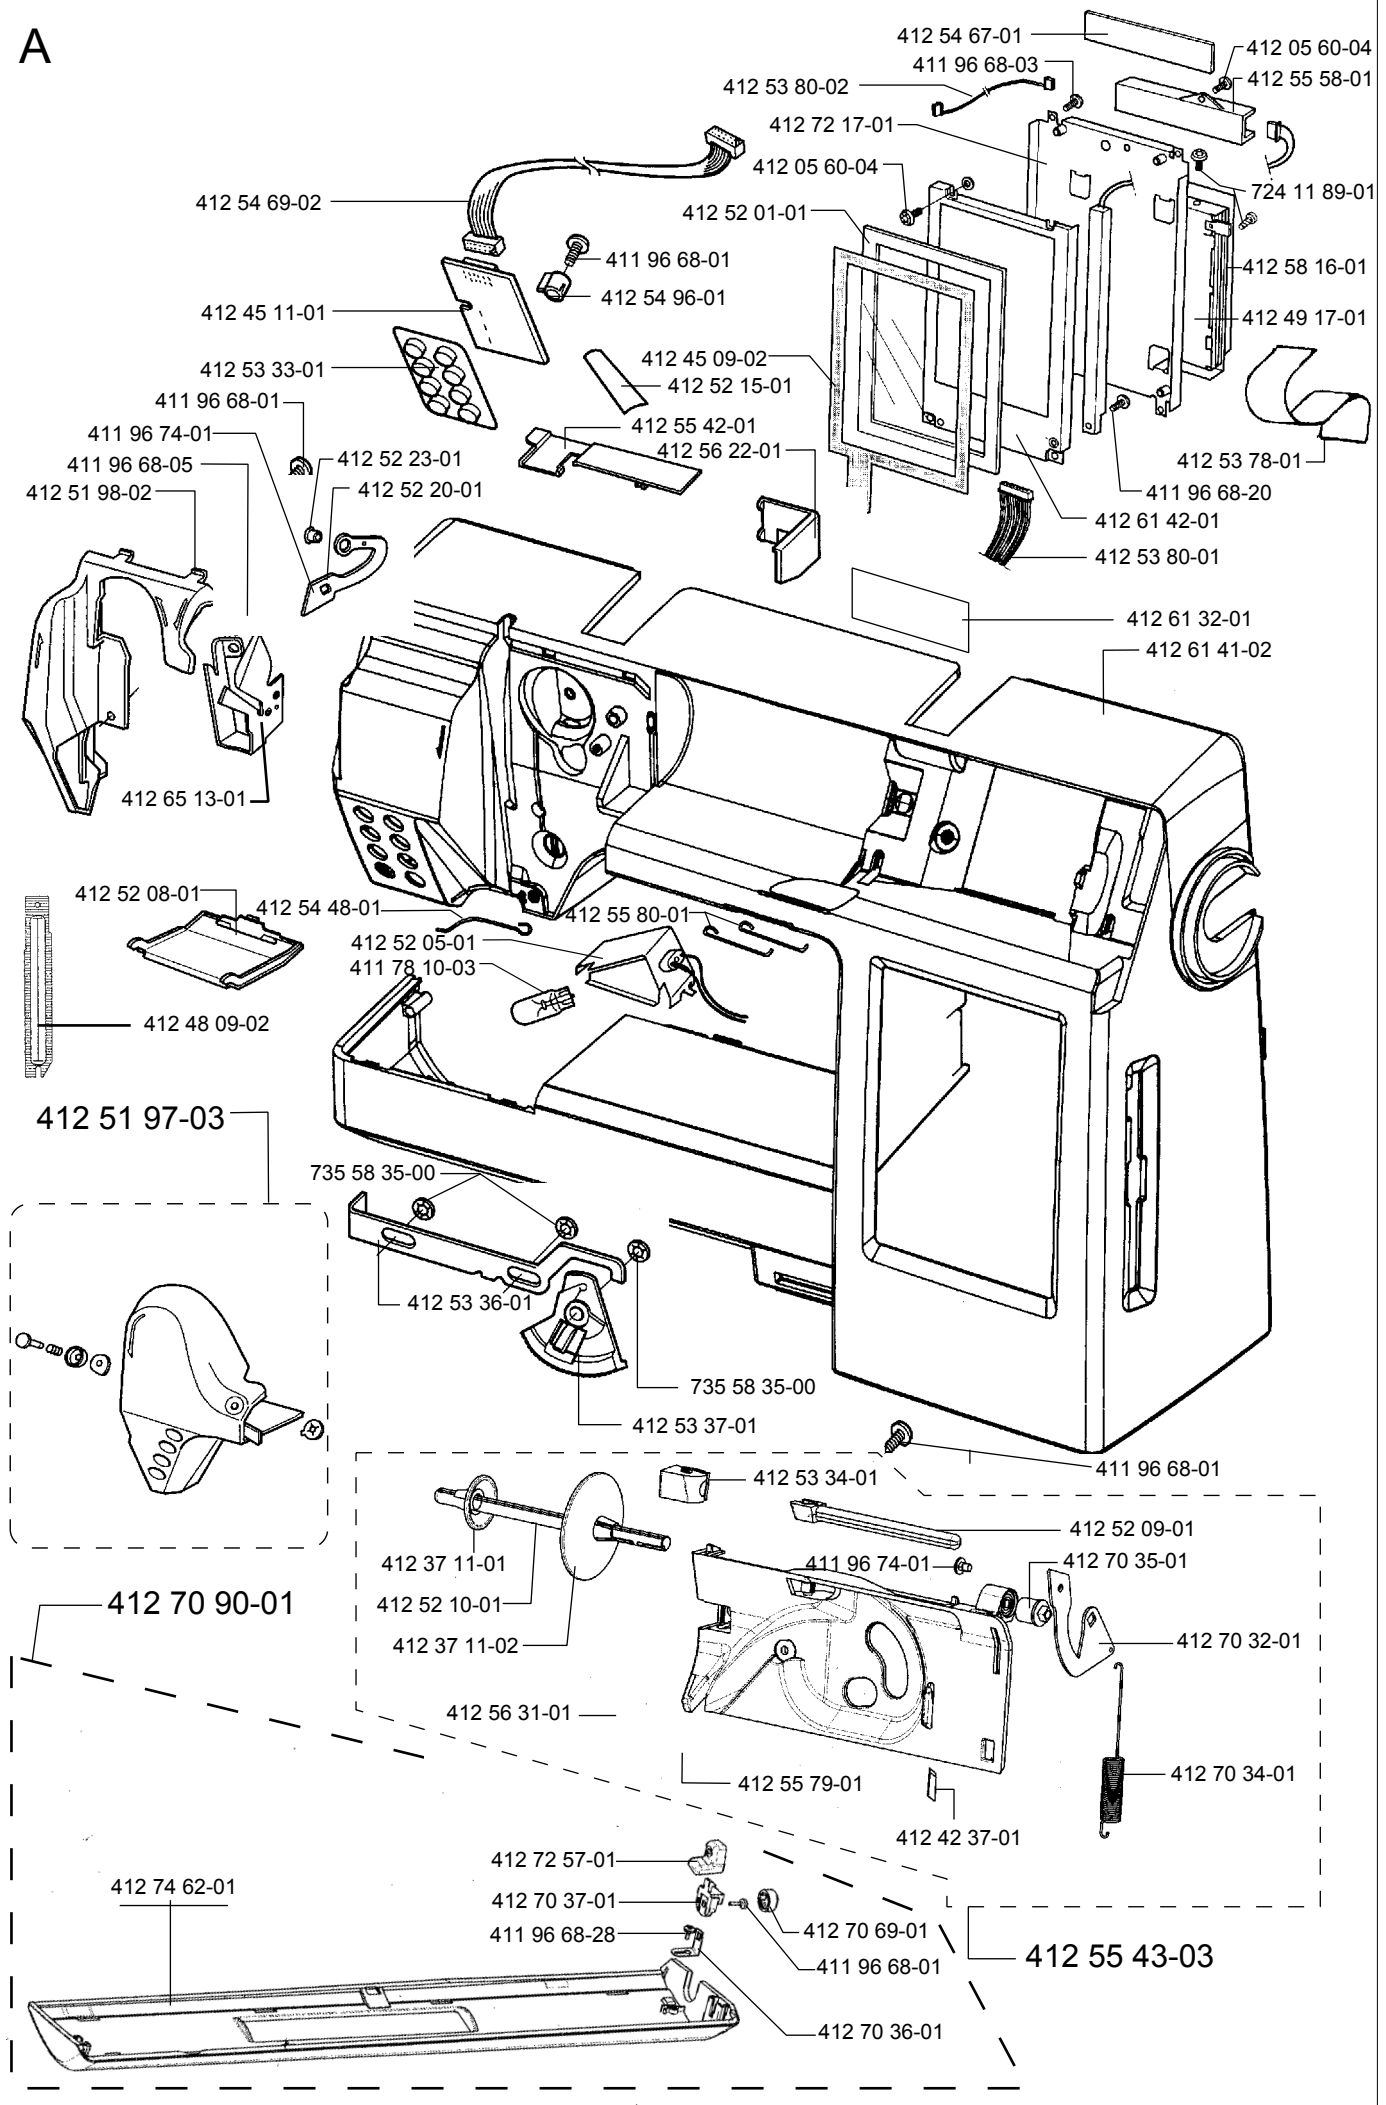


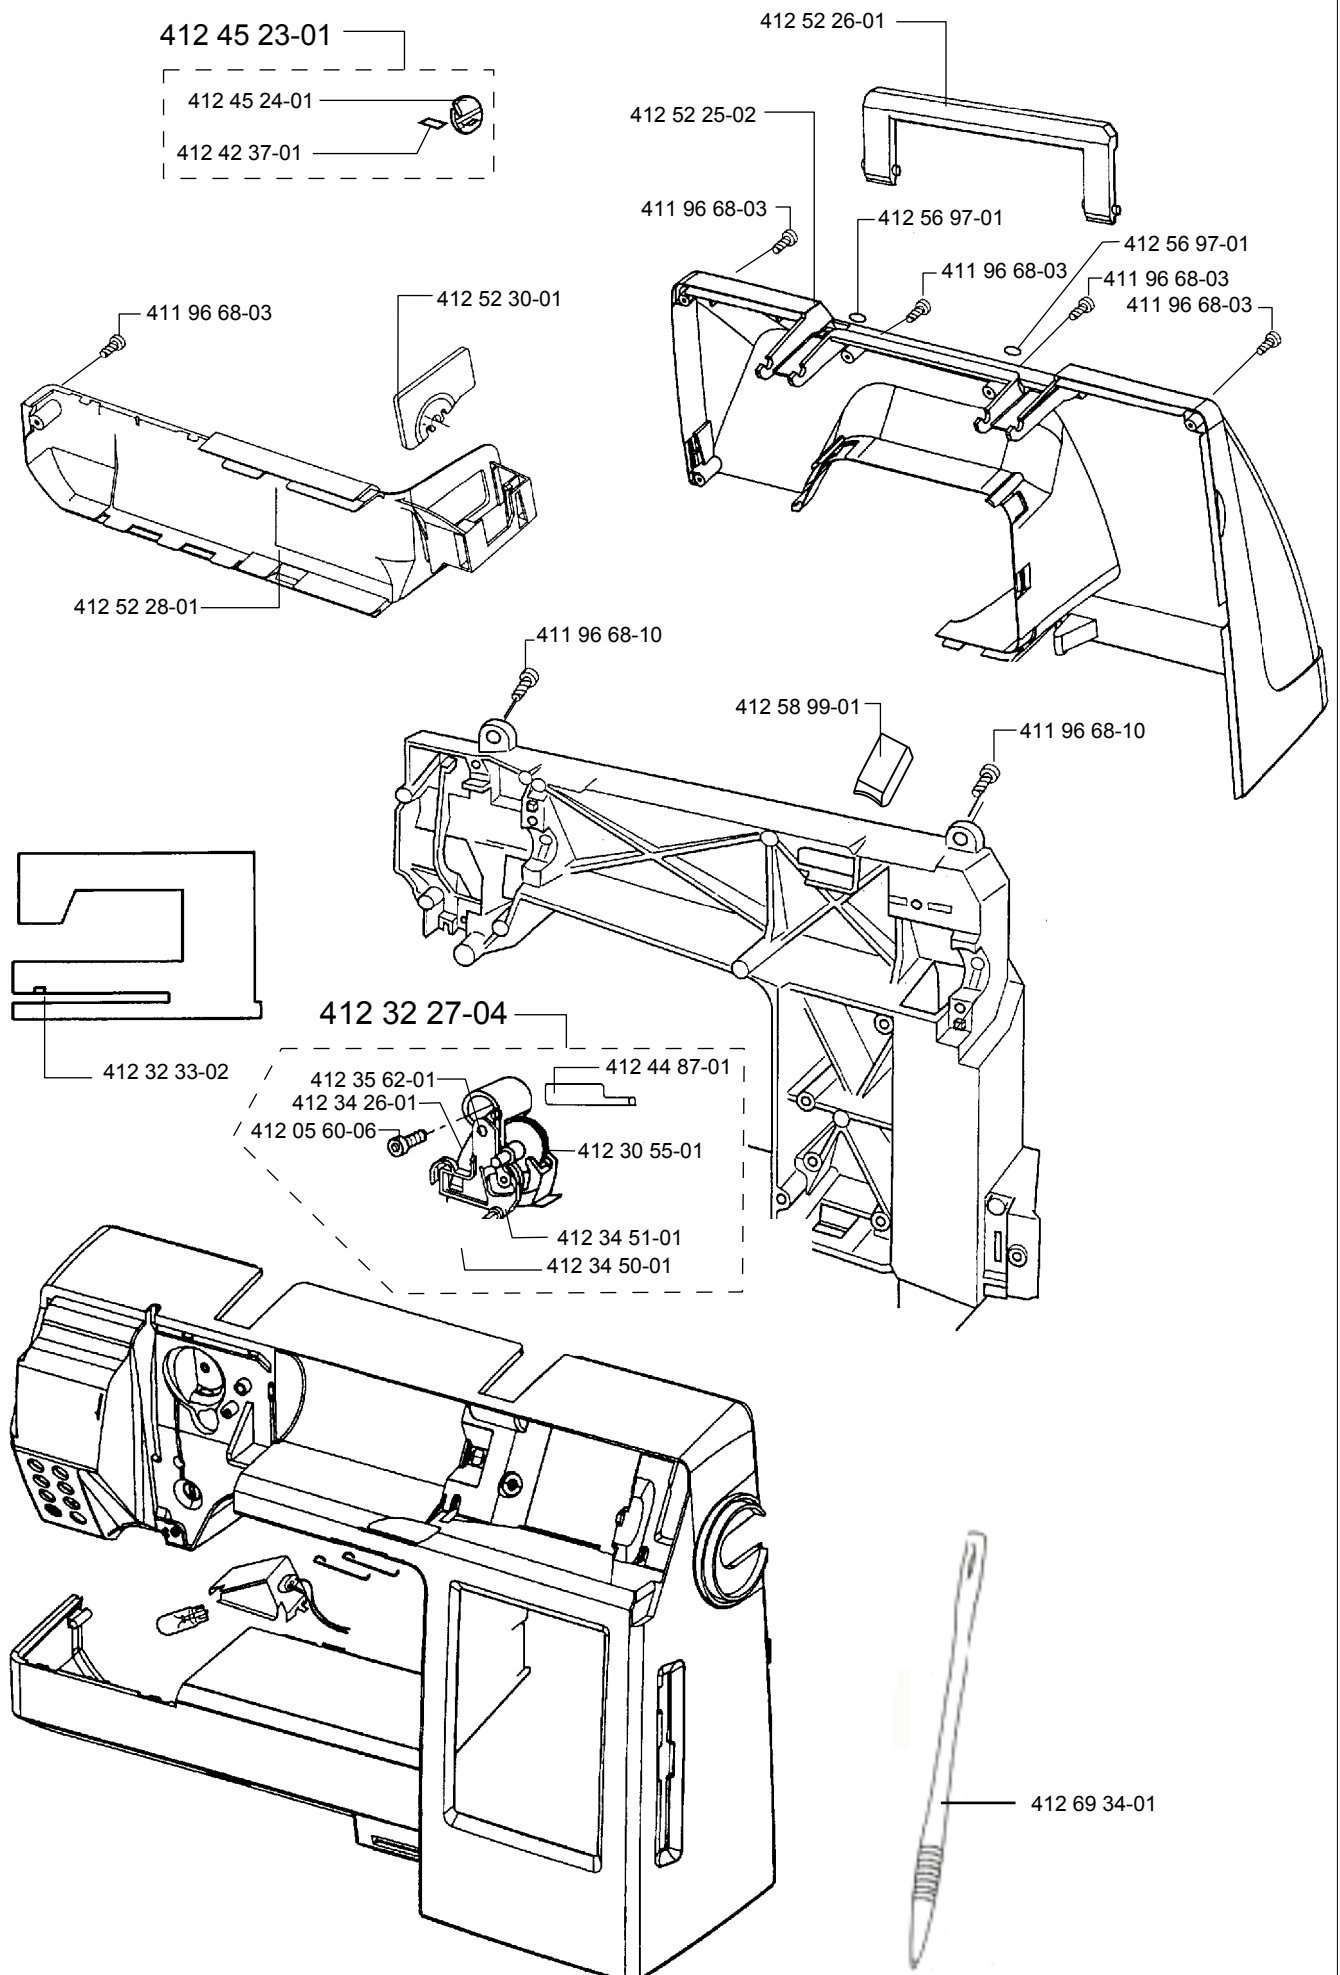


C

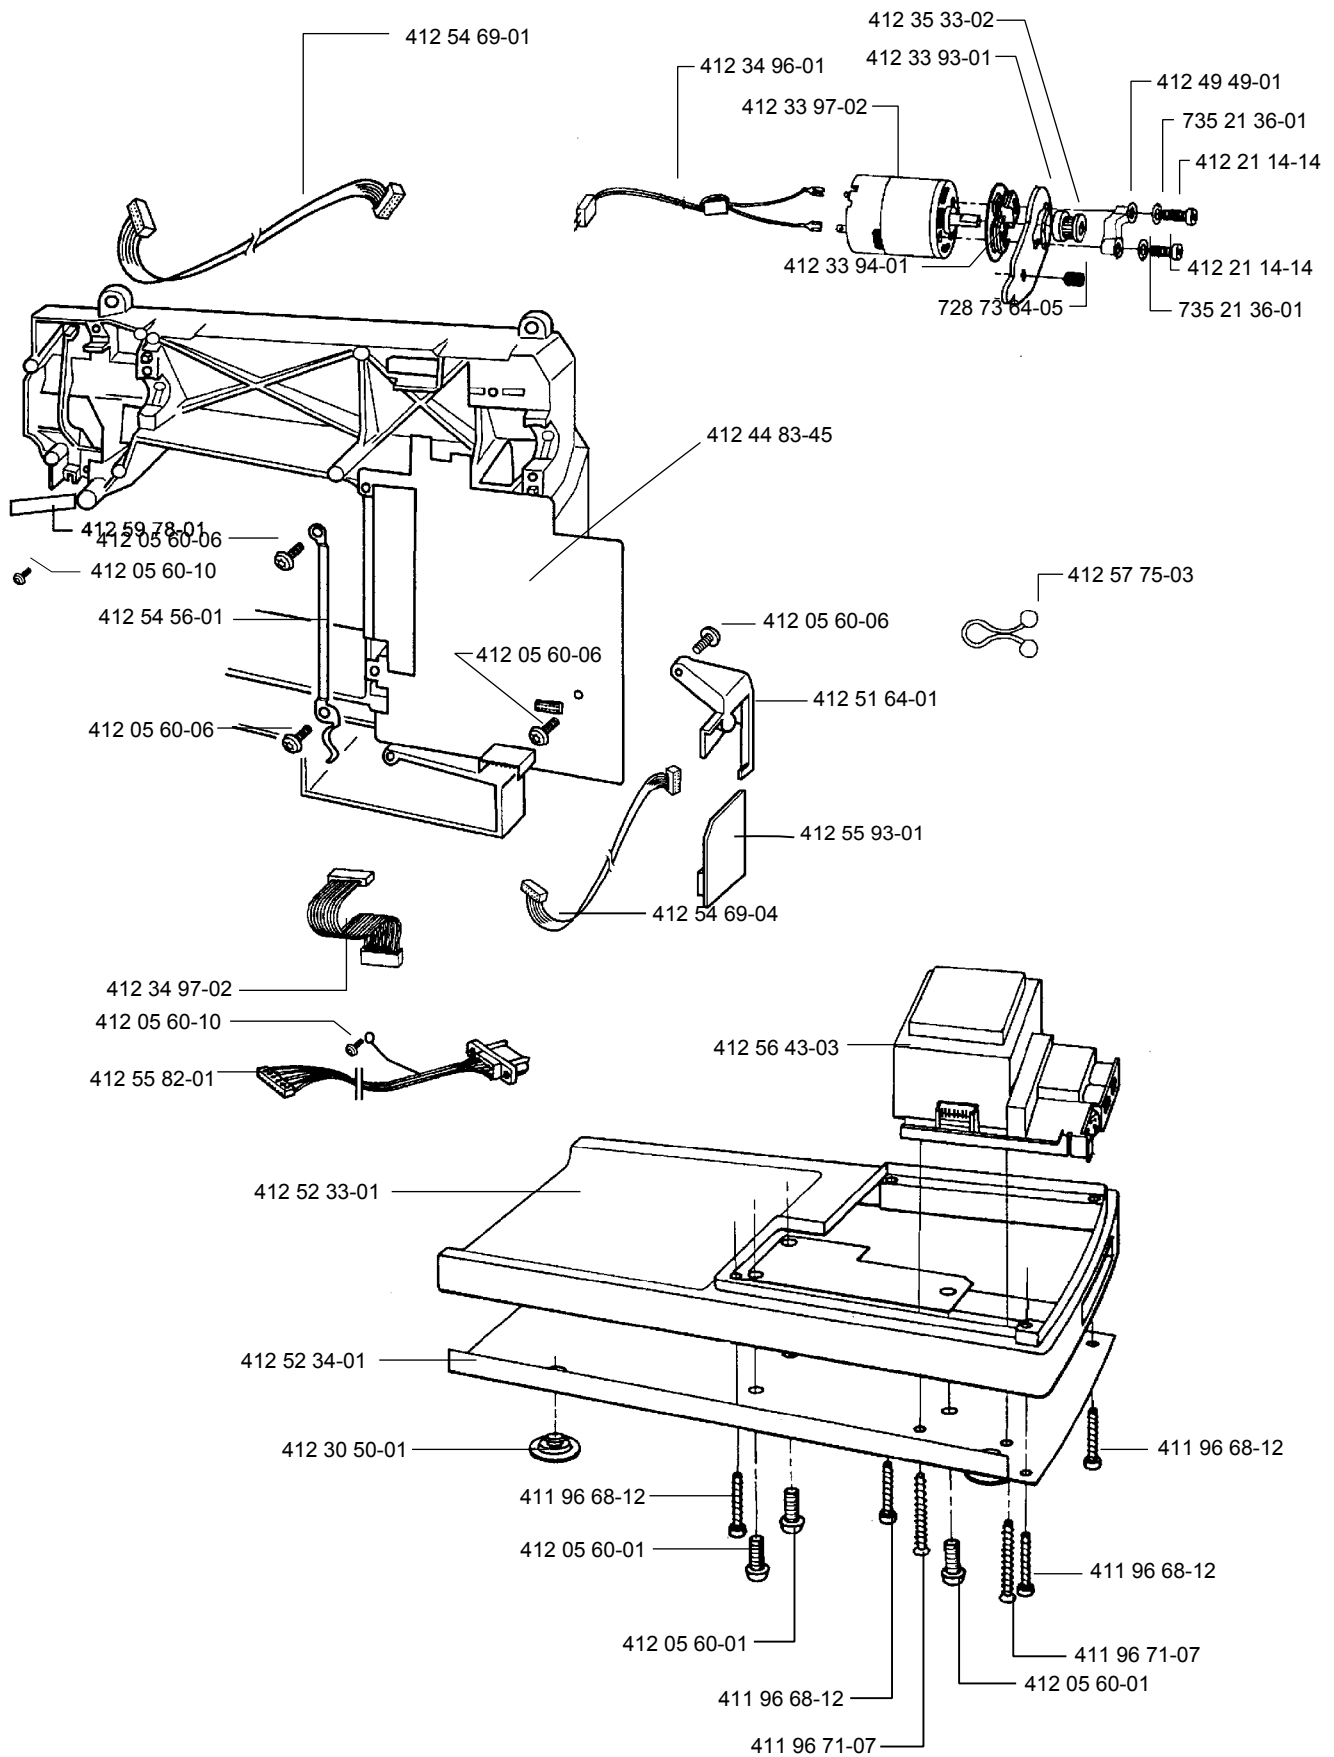 

D

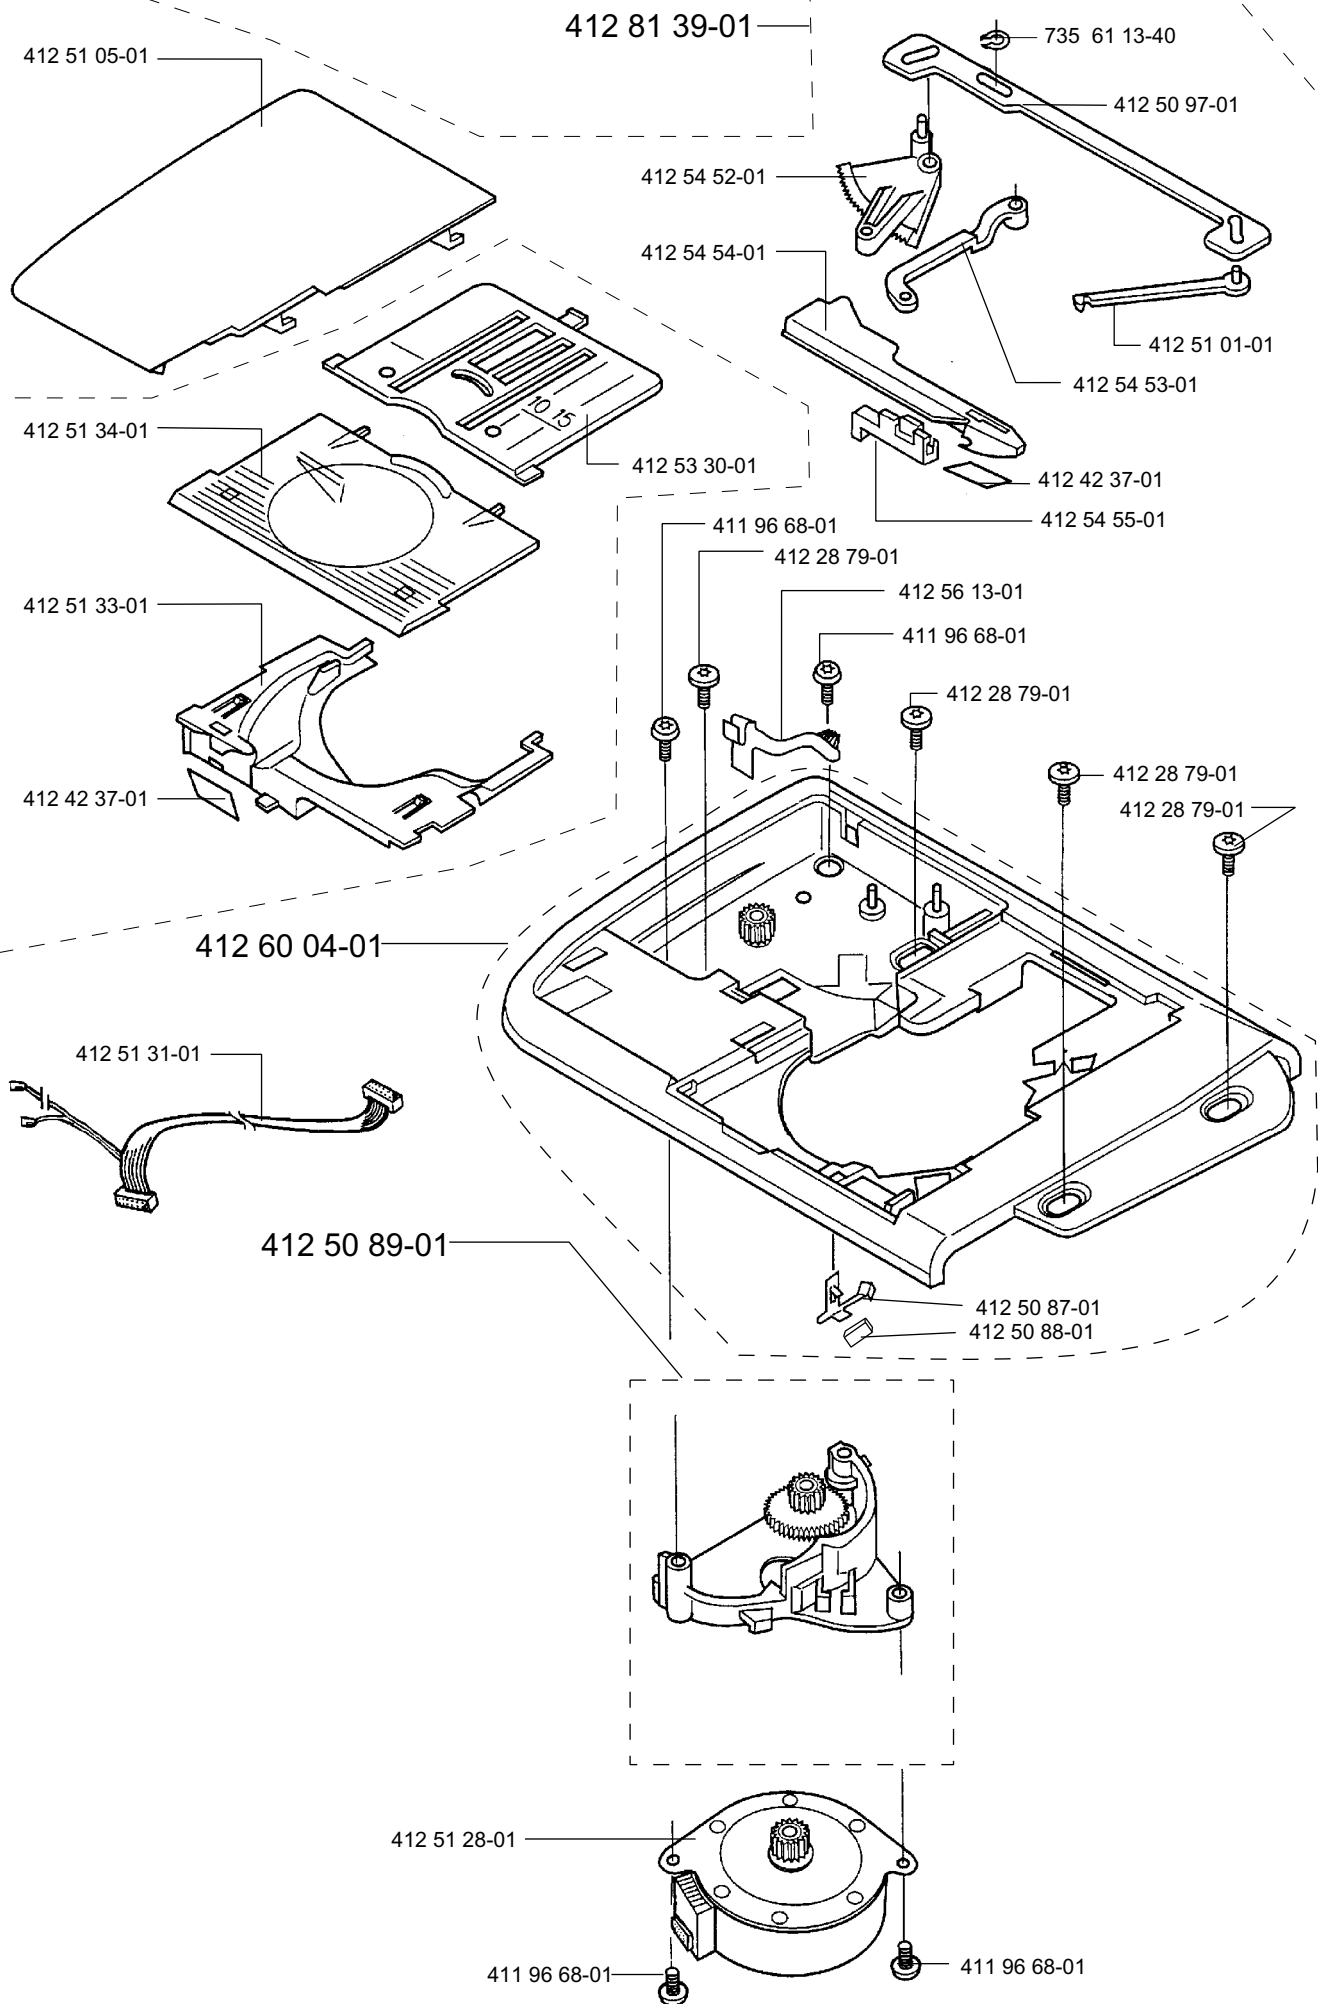 


E

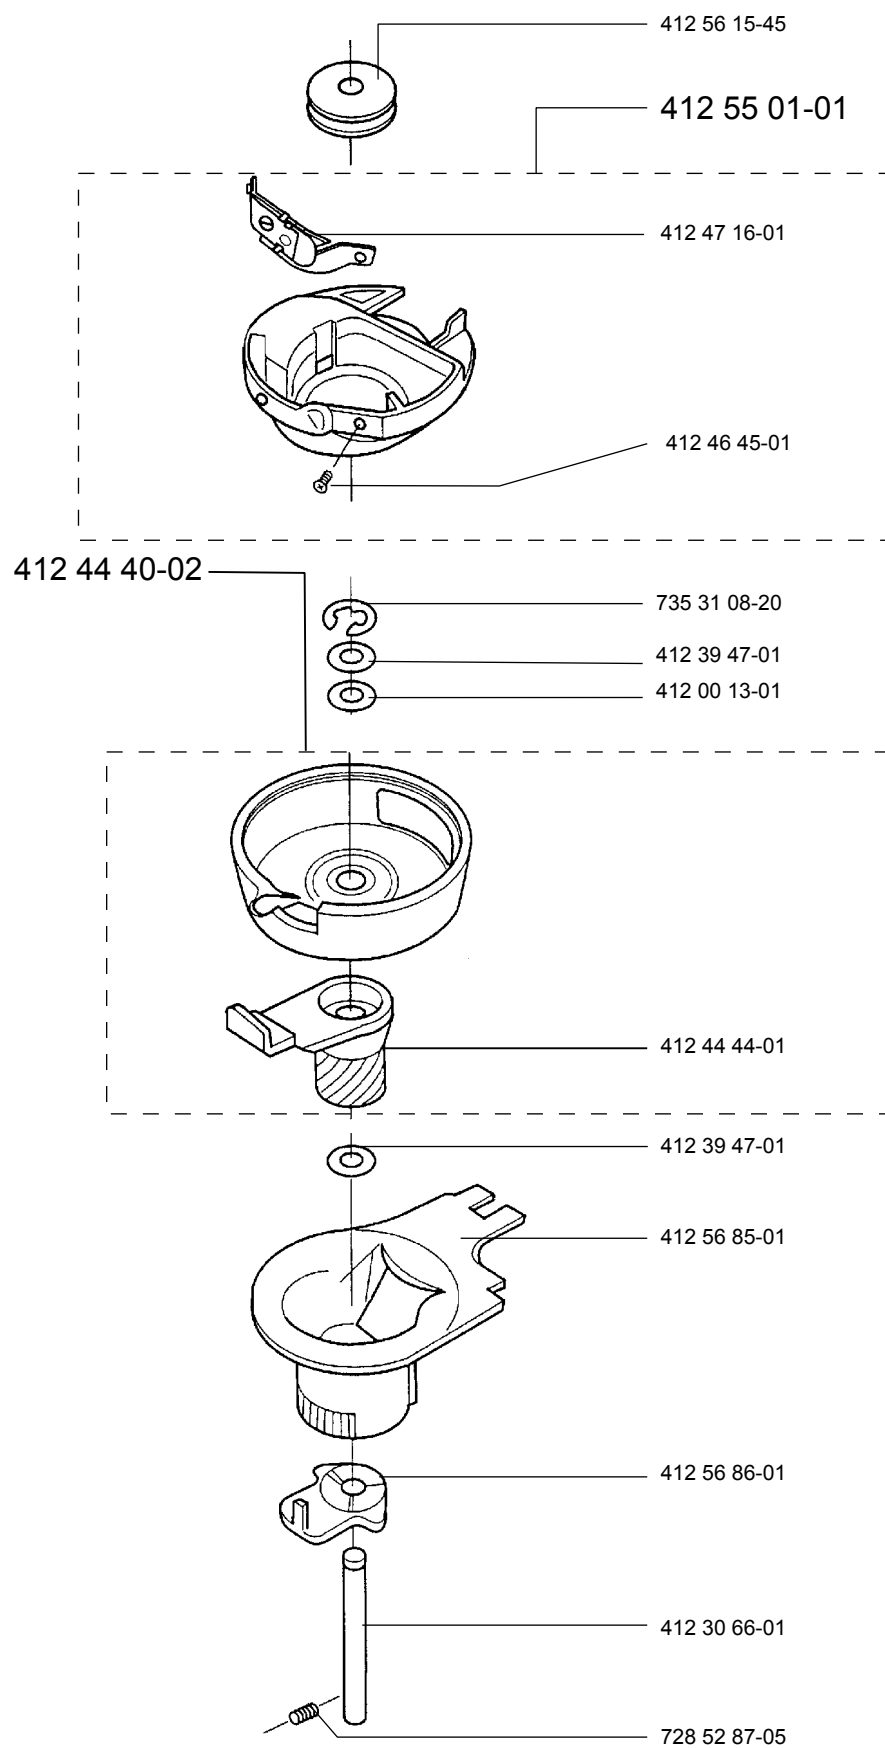 


F

 412 50 60-01

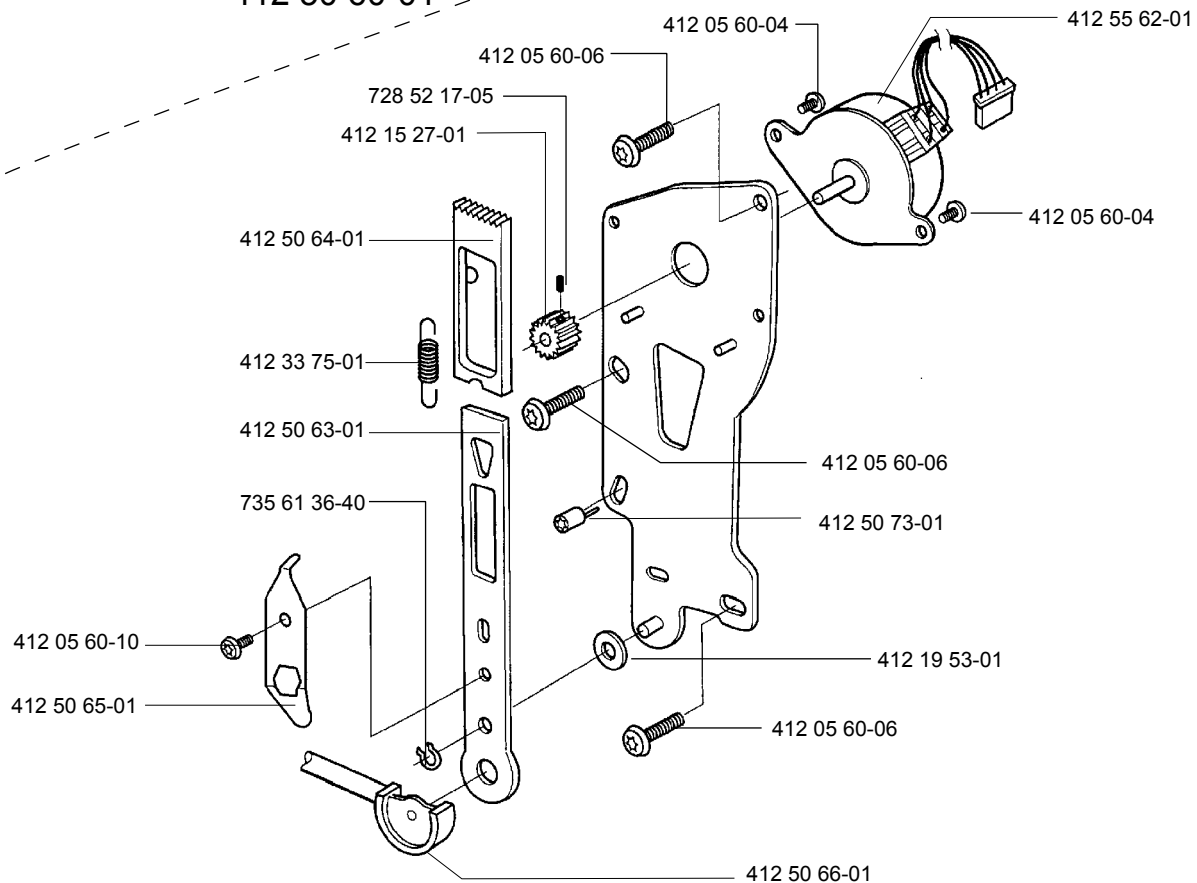


G

 
412 51 36-01

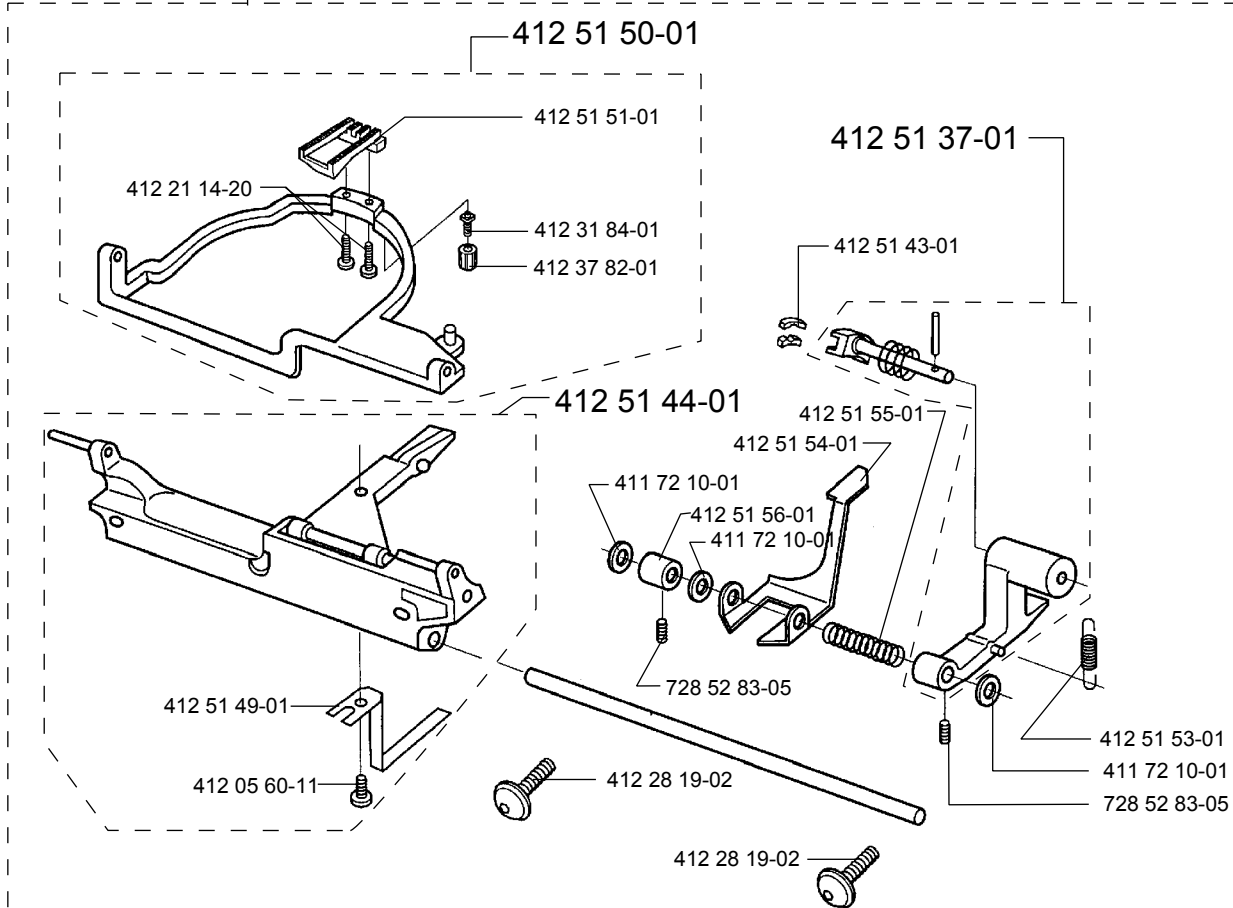


H

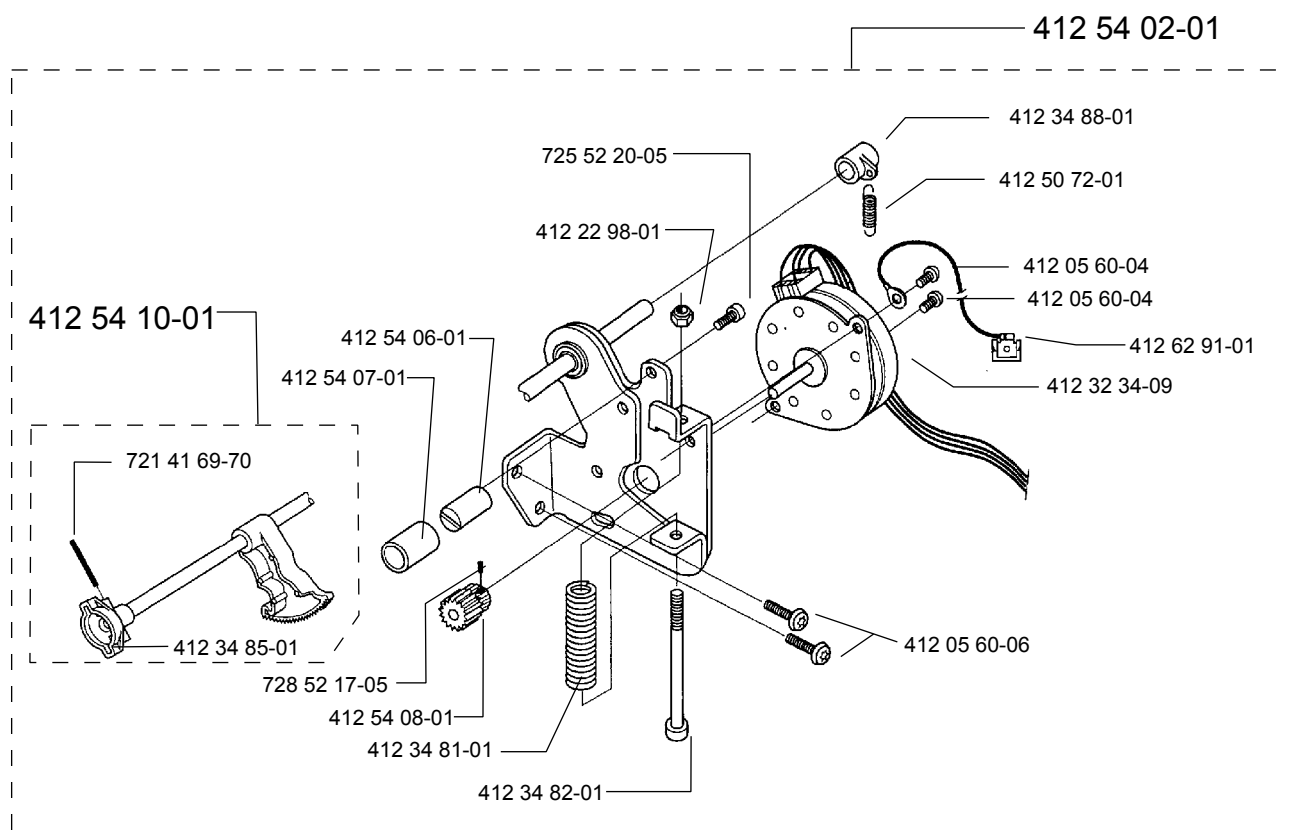 


I

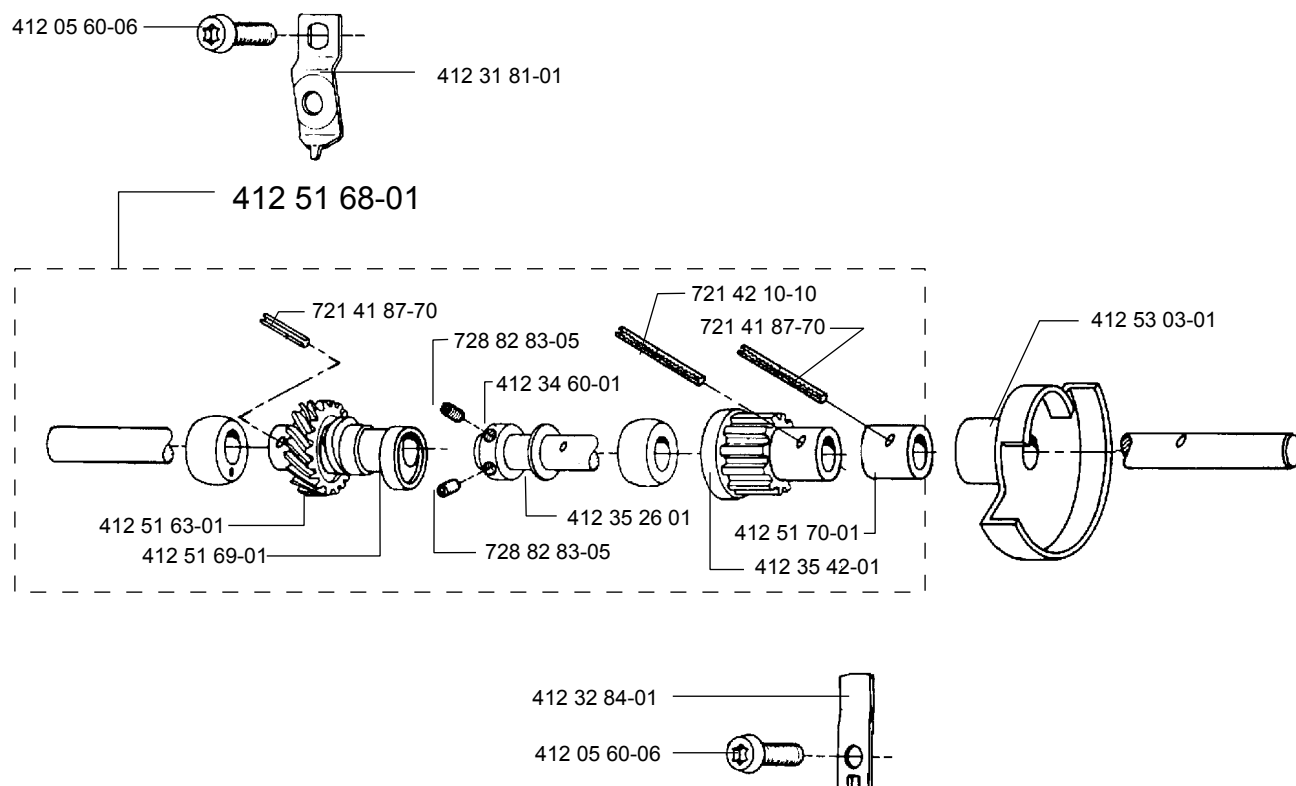 


L

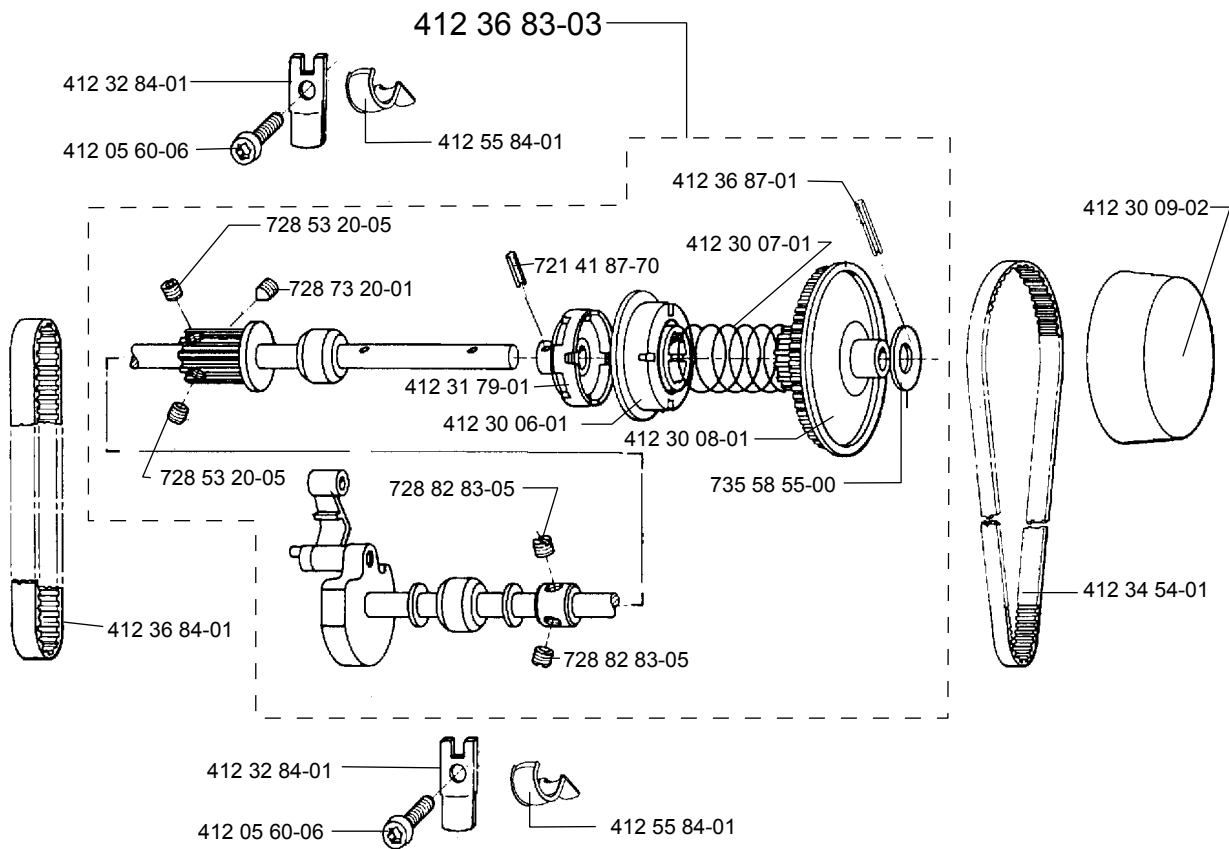 



M

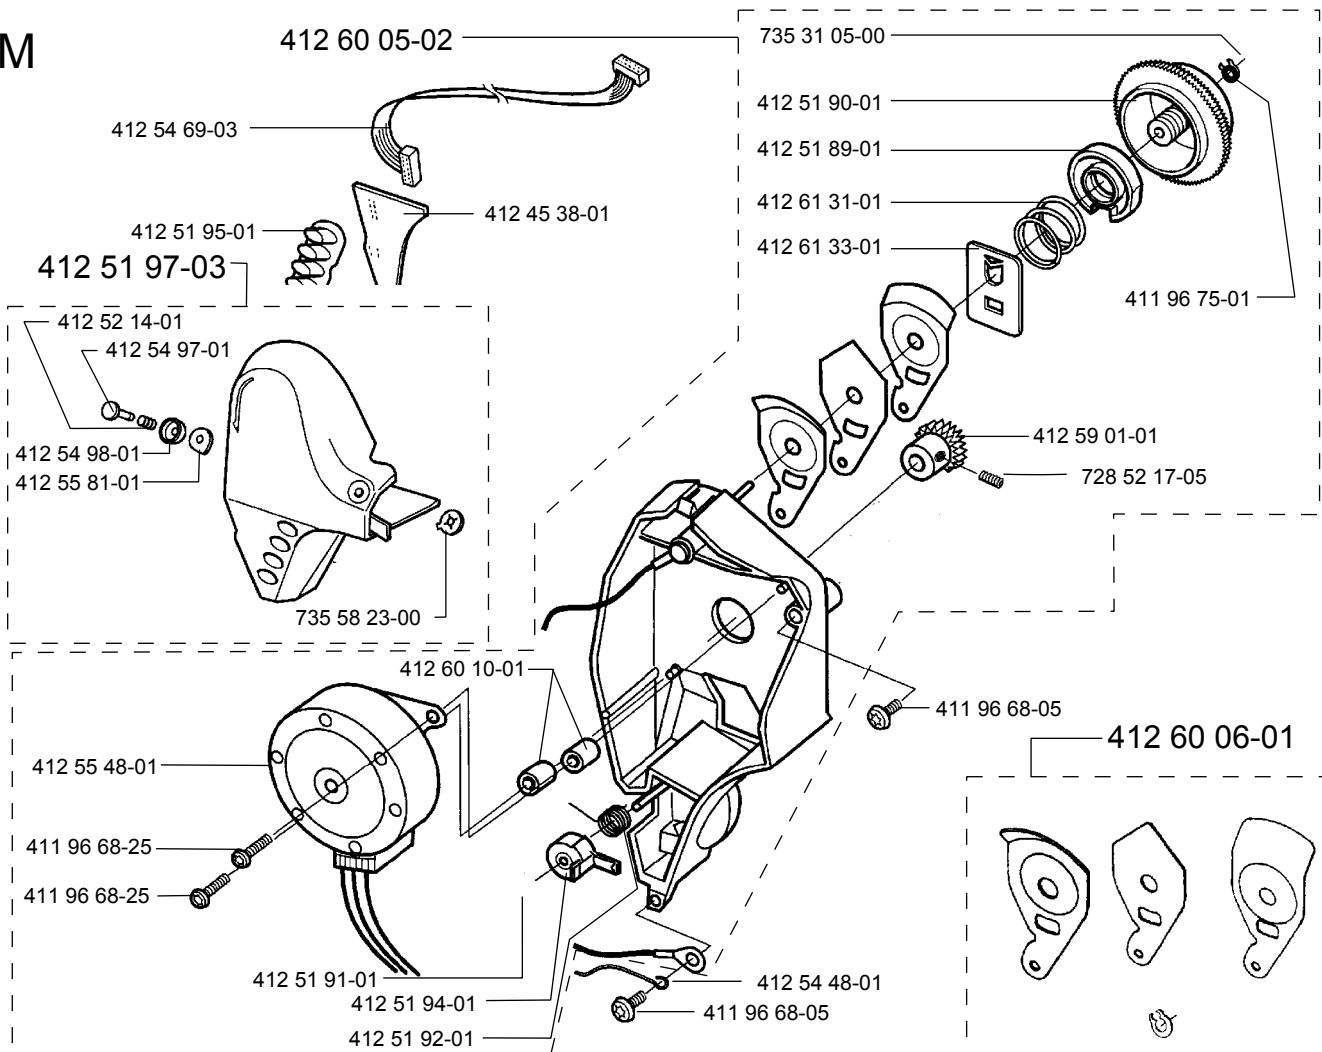 

412 49 25-01


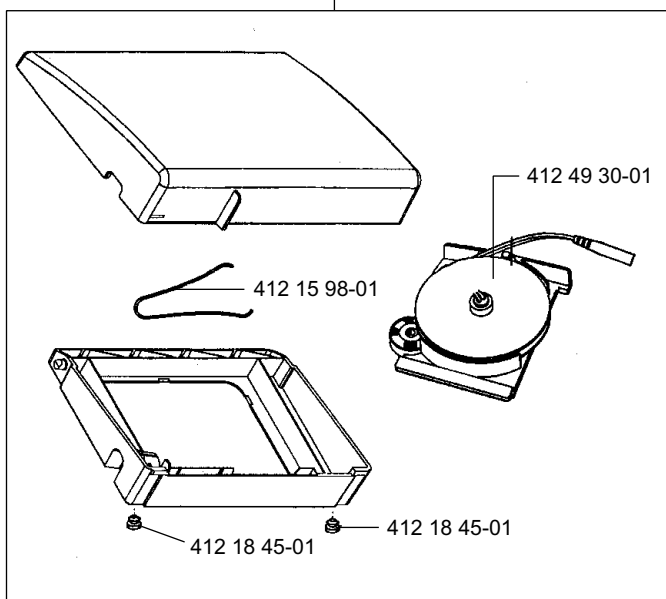 


412 74 61-01

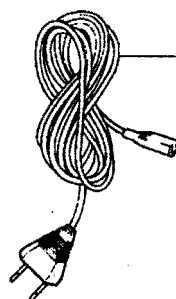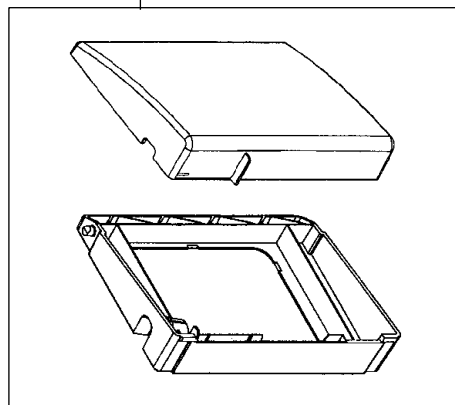  


412 15 78-01 220 V
 412 15 79-02 Japan
 412 15 79-03 120 V
 412 15 80-02 England
 412 15 81-01 Australia

  
412 51 76-01

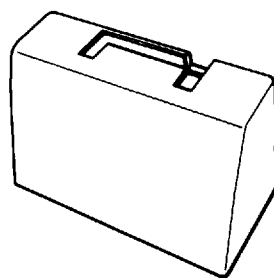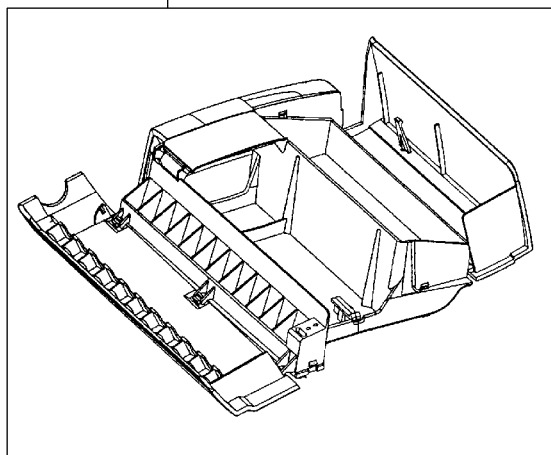

- 412 52 92-01

 


 
412 39 09-26
 Bruch, bobbins,
 Presserfeet etc

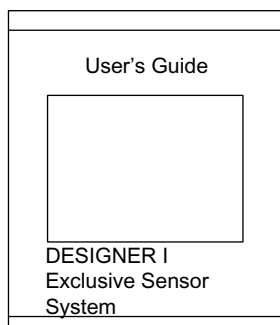

412 73 10-01 Users Guide Swe
 412 73 10-06 Users Guide Den
 412 73 10-11 Users Guide Fin
 412 73 10-21 Users Guide Nor
 412 73 10-26 Users Guide Eng
 412 73 10-31 Users Guide Fra
 412 73 10-36 Users Guide Dut
 412 73 10-41 Users Guide Ita
 412 73 10-46 Users Guide Spa
 412 73 10-51 Users Guide Ger
 412 73 10-56 Users Guide Rus

  
P

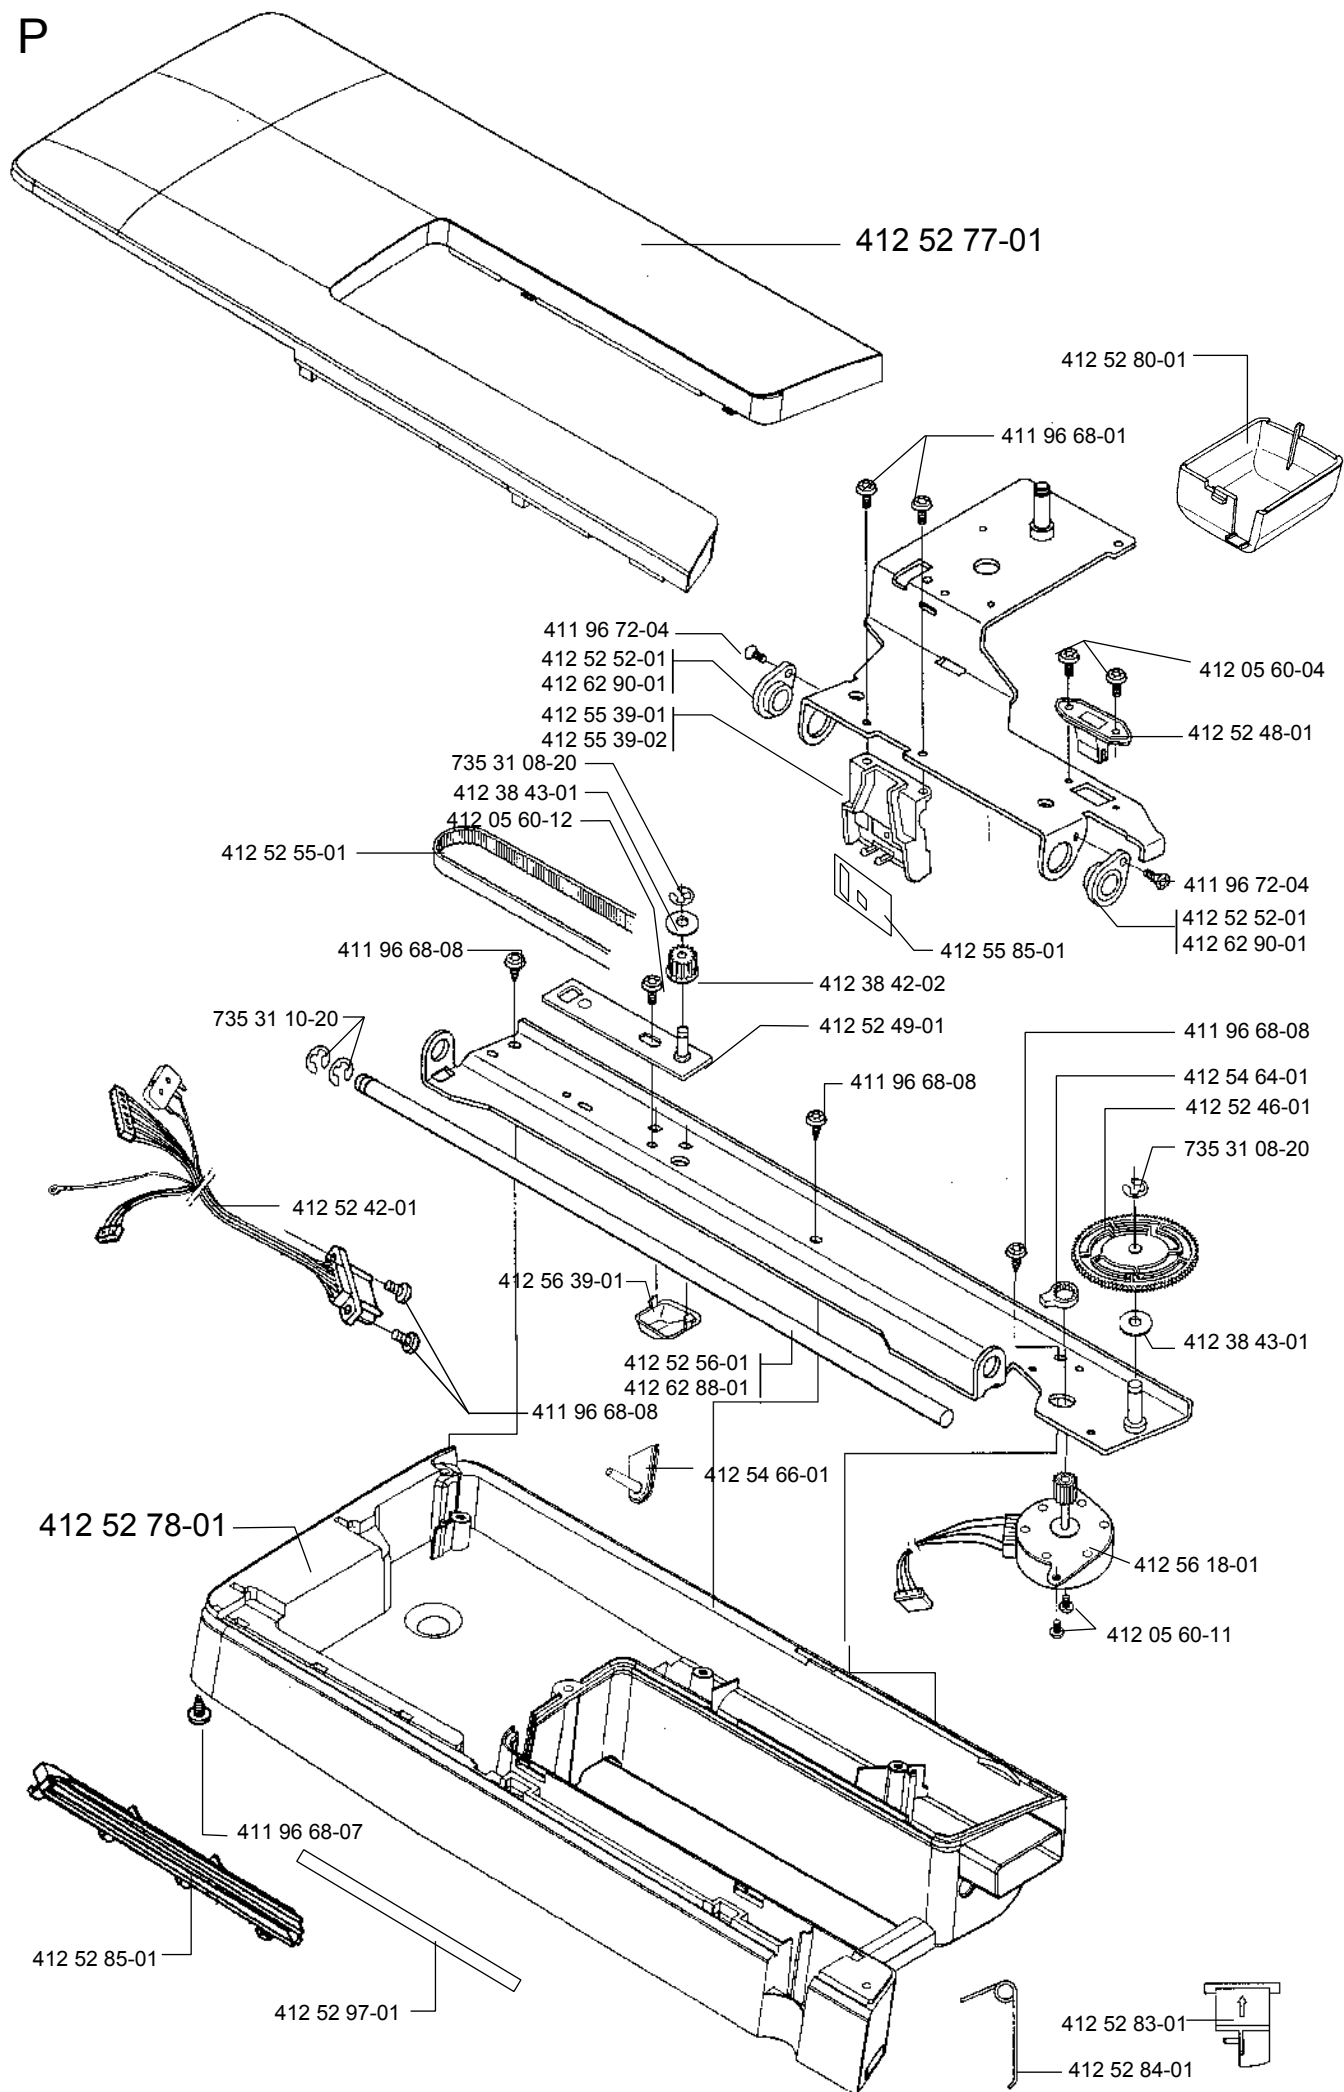

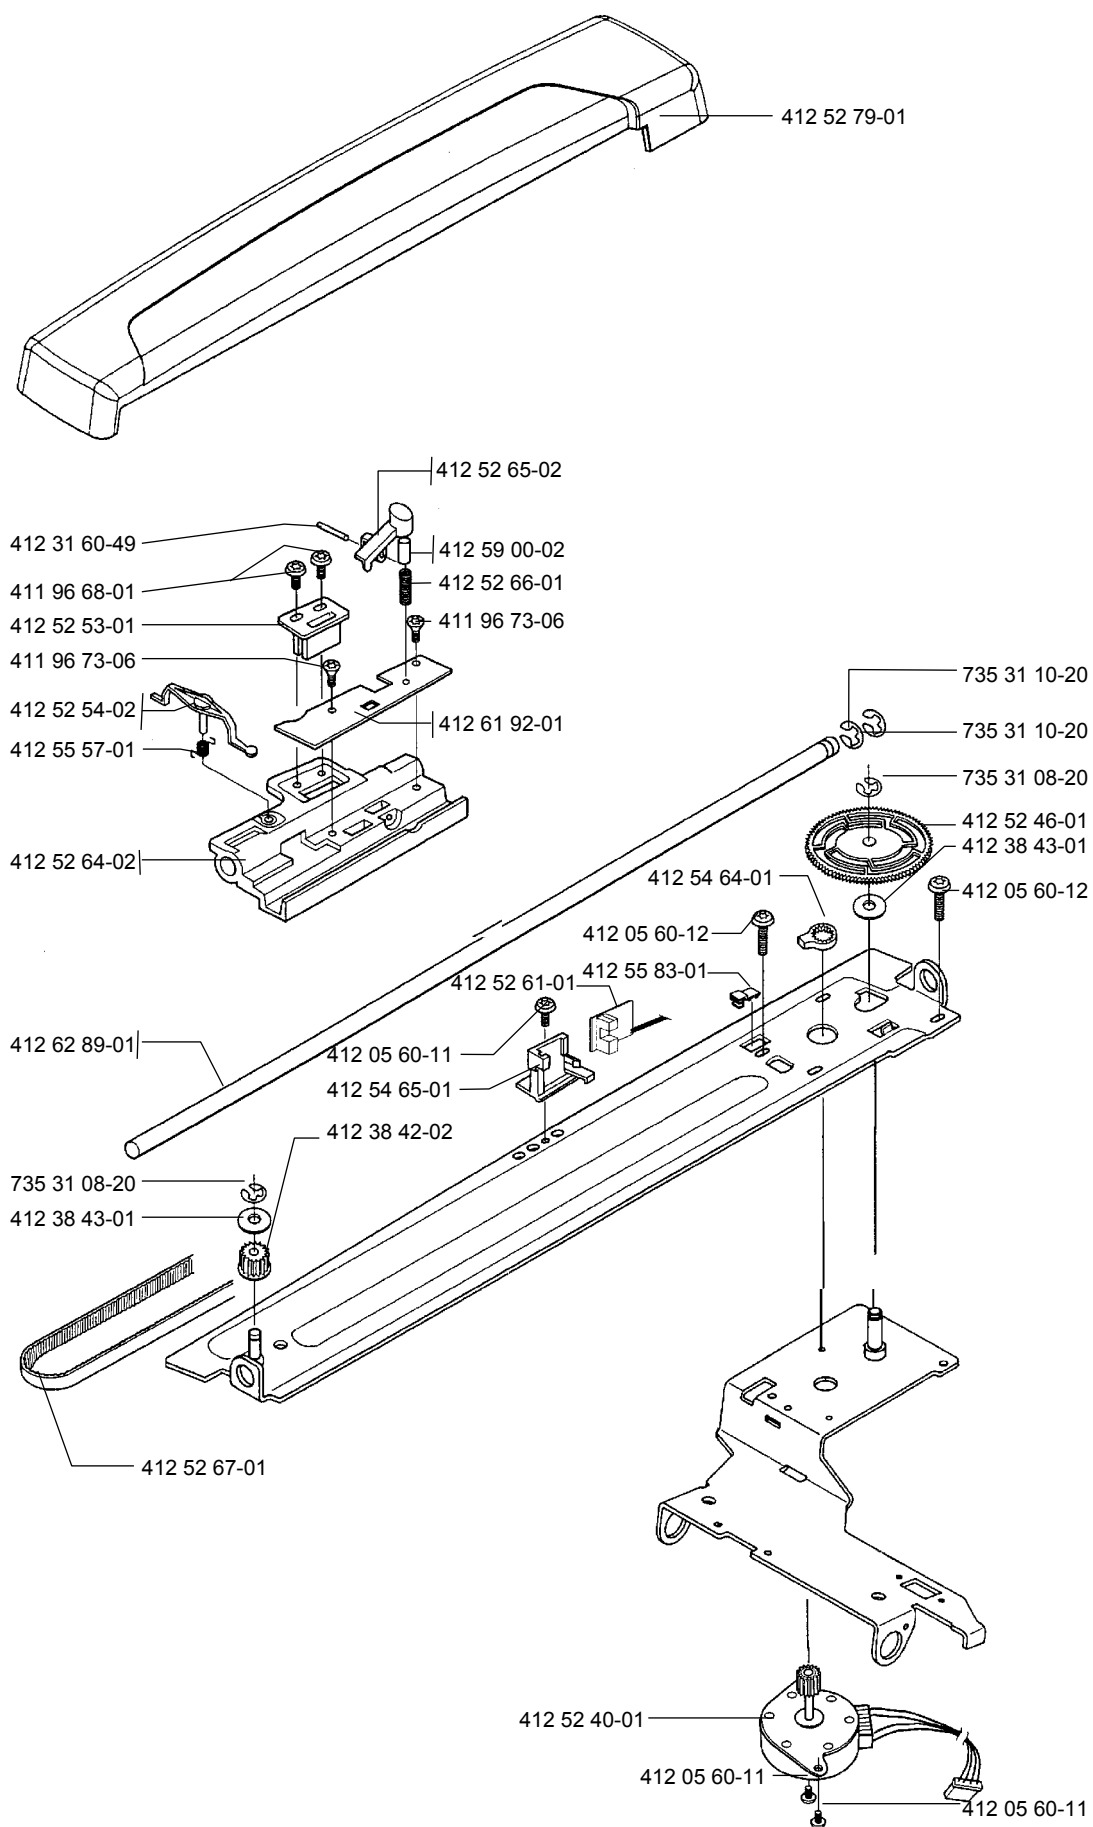


R

 150 X 240

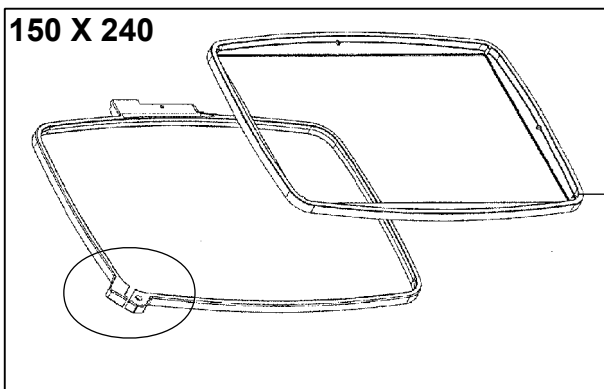

412 52 71-02

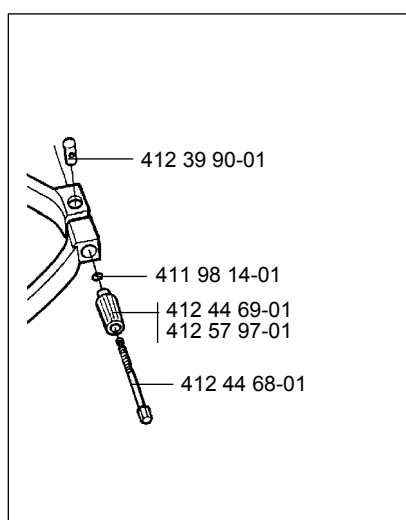 


412 39 90-01

411 98 14-01


412 44 69-01
412 57 97-01

 412 44 68-01

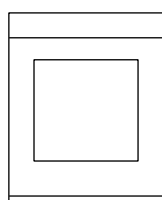


412 53 73-01

 Designer 1
Embroidery
Collection broshur

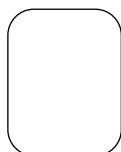

412 53 74-01

 Templet
100x100

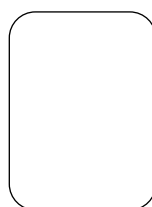


412 53 75-01

Templet
150x240




412 56 58-01

 Zipper bag



412 56 54-01

 Accessories
Siccer, Thread,
Fabrics , R - foot

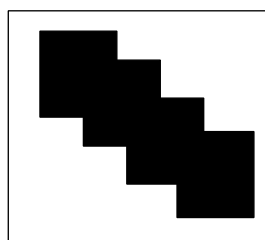


412 60 71-01

Embroidery Disc 113, 114
Palace script
Clarendon
Calligraphy
Sampler Disc 100



412 65 18-01

 Bag with 10 Hoop clips

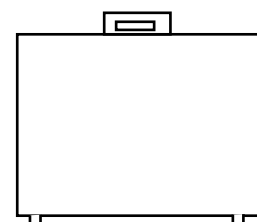

412 65 45-02

Embroidery box