


PFAFF

Performance Icon


Parts List

A

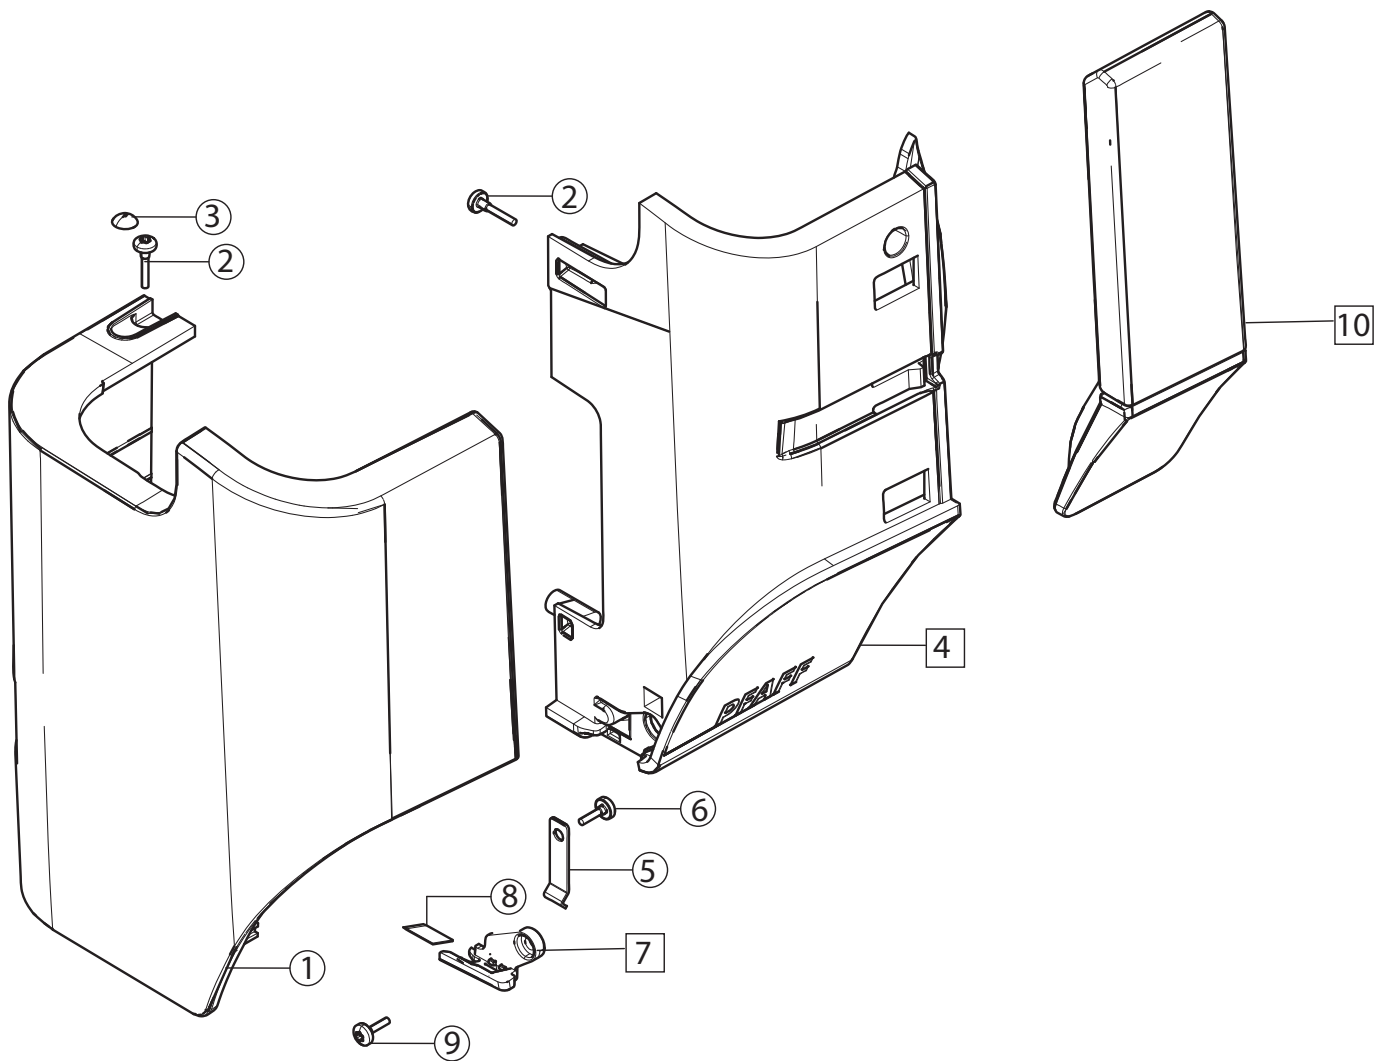


1	68006085	Decor Sewing Head
2	411966803	Screw PT 3x12 FZB
3	412569701	Damper
4	68003427	Cover Sewing Head Cpl
5	68008745	Plate Spring
6	411966801	Screw PT 3x7,7 FZB
7	68001886	Thread Cutter Cpl
8	412423701	Thread Cutter
9	411966801	Screw PT 3x7,7 FZB
10	68006131	Cover CSU Cpl

B

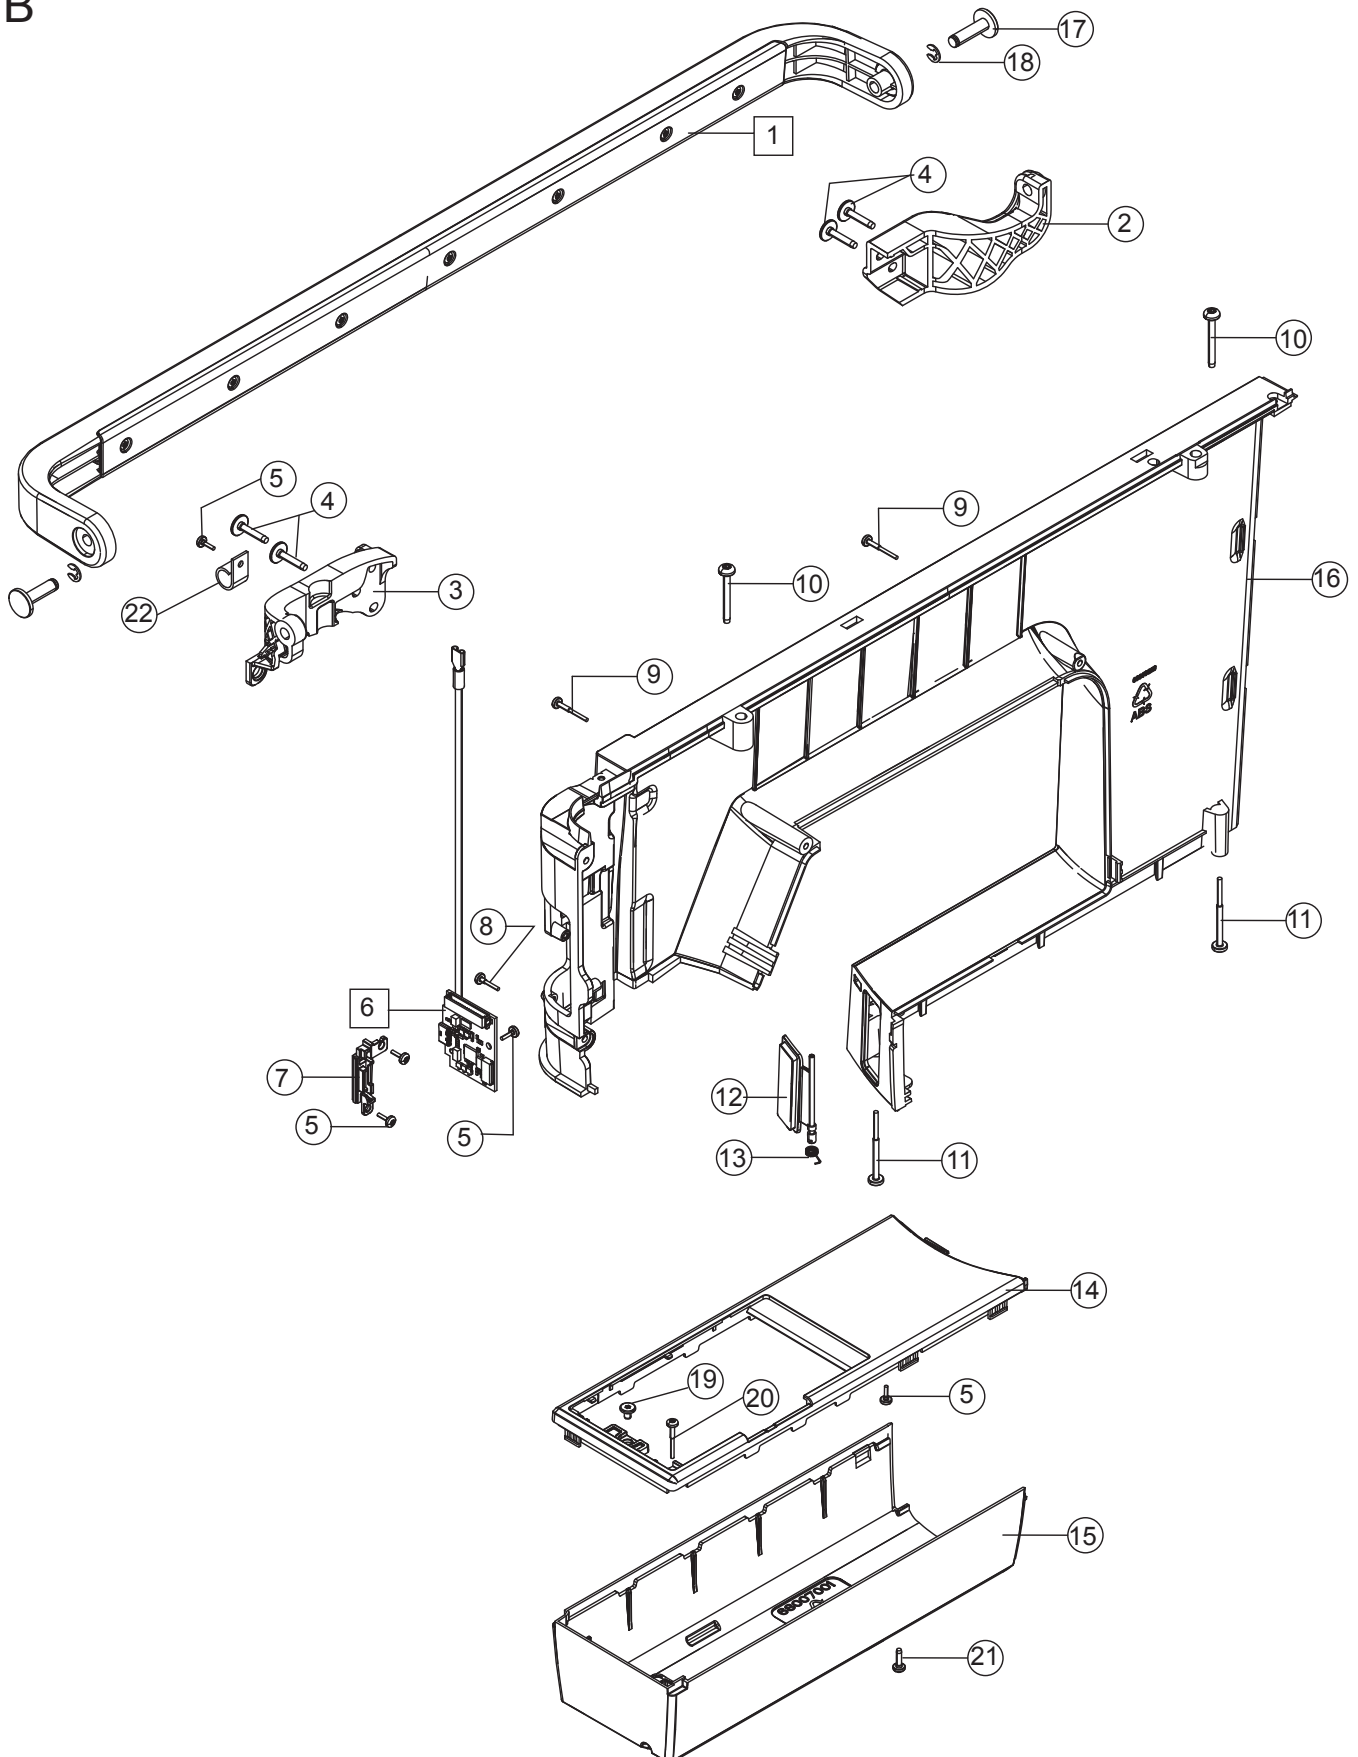


1	68006226	Handle Cpl
2	68002980	Bracket Handle Right
3	68002976	Bracket Handle Left
4	412281901	Screw Flange M4x18 TT Torx
5	411966801	Screw PT 3x7,7 FZB
6	68001620	Accessory Connector Board Cpl
7	68006140	Bracket PCB
8	411966803	Screw PT 3x12 FZB
9	411966805	Screw PT 3x20 FZB
10	412056009	Screw TT M4x30
11	411966812	Screw PT 4x40 FZB
12	68007012	Lid
13	413068601	Torsion Spring
14	68007000	Cover Free Arm Upper
15	68007001	Cover Free Arm Lower
16	68016826	Cover Rear
17	68003203	HCB Bolt
18	735310820	Lock Washer 4
19	412287903	Screw M4x5
20	411966805	Screw PT 3x20 FZB
21	412056010	Screw TT M3x10
22	68018081	Screw Mountable Wire Clip

C

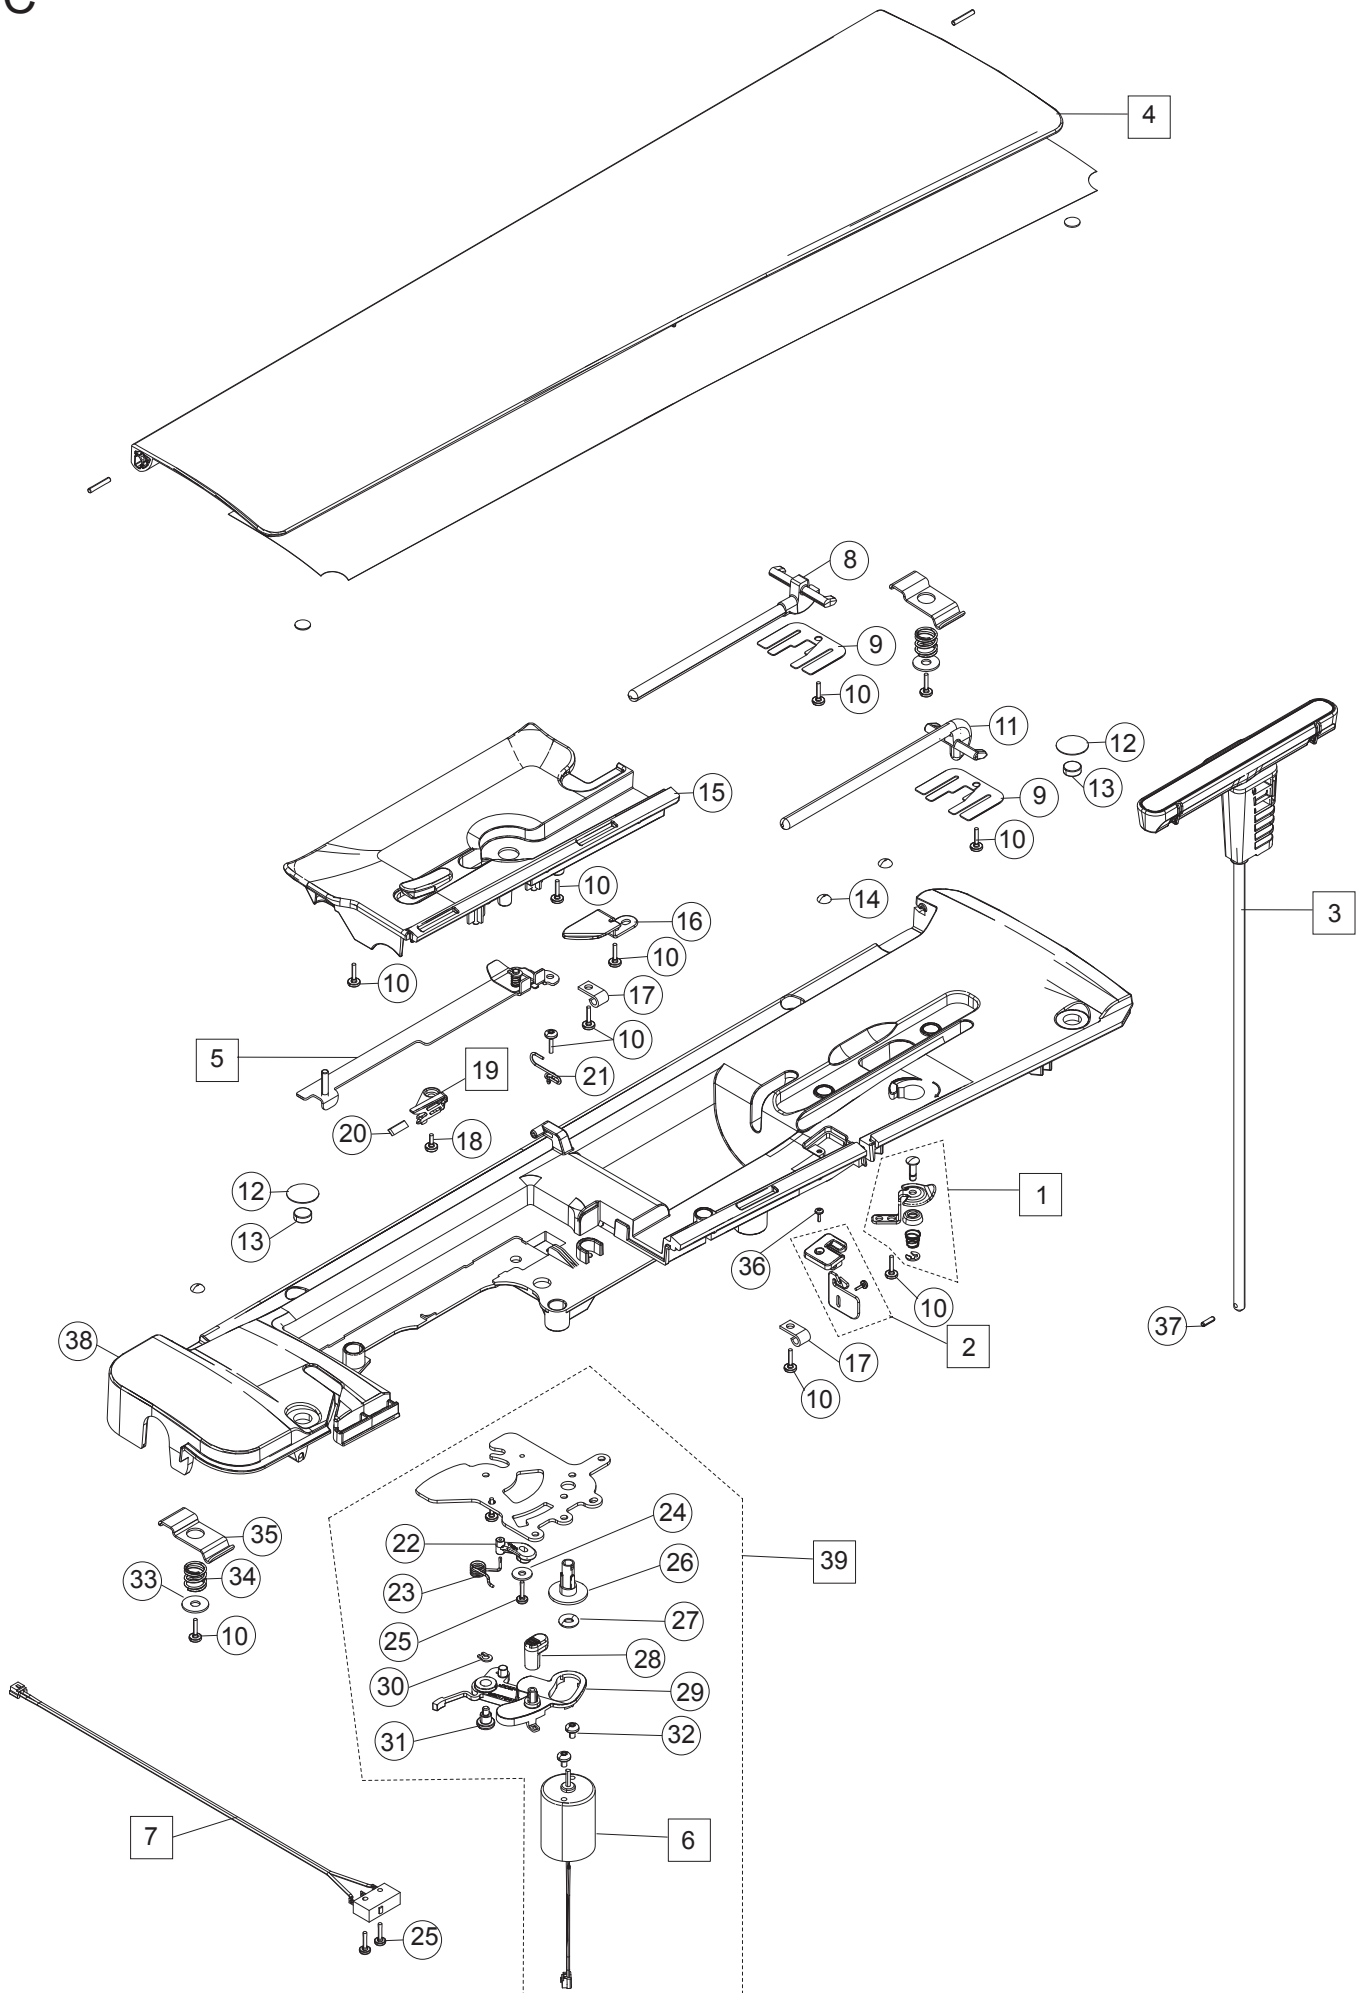


1	68004795	Pretension Bobbin winding Cpl
2	68003352	Thread Guide Cpl
3	68016346	Telescoping Thread Guide Cpl
4	68006127	Lid Cpl
5	68016890	Pretension Cpl
6	68002061	Bobbin Winding Motor Cpl
7	68002070	Microswitch Cpl
8	413064501	Reel Pin
9	68001905	Plate spring
10	411966820	Screw PT 3x10 FZB
11	68003992	Spool Pin
12	68003151	Damper for Lid
13	68003021	Magnet 8x3 N35
14	412569701	Damper
15	68016849	Cover Pretension
16	68004134	Thread Guide
17	68005075	Mountable Wire Clip
18	411966828	Screw PT 3x6 FZB
19	68001886	Thread Cutter Cpl
20	412423701	Thread Cutter
21	68003232	Thread Guide
22	68001908	Switch Lever Winder
23	412757701	Torsion Spring for Winding Stop
24	734112541	Washer 9x3,2x0,9 FZB
25	412211423	Screw M2,5x9 FZB 5.8 TORX
26	68002053	Topspole for bobbin winding
27	412305502	O-Ring
28	68001954	Bobbin Winding Stop
29	68017941	Lever Winding Stop
30	735612440	Compression Rings Ø 3
31	68003042	Shaft
32	412211401	Screw M3x4 TORX
33	68003197	Washer 4,3x12x0,9
34	68003284	Spring
35	68002992	Plate
36	411966823	Screw PT 1,8x5 FZB
37		Slotted Spring Pin Ø2x7
38	68016845	Cover Spool Area
39	68003774	Bobbin Winding Cpl

D

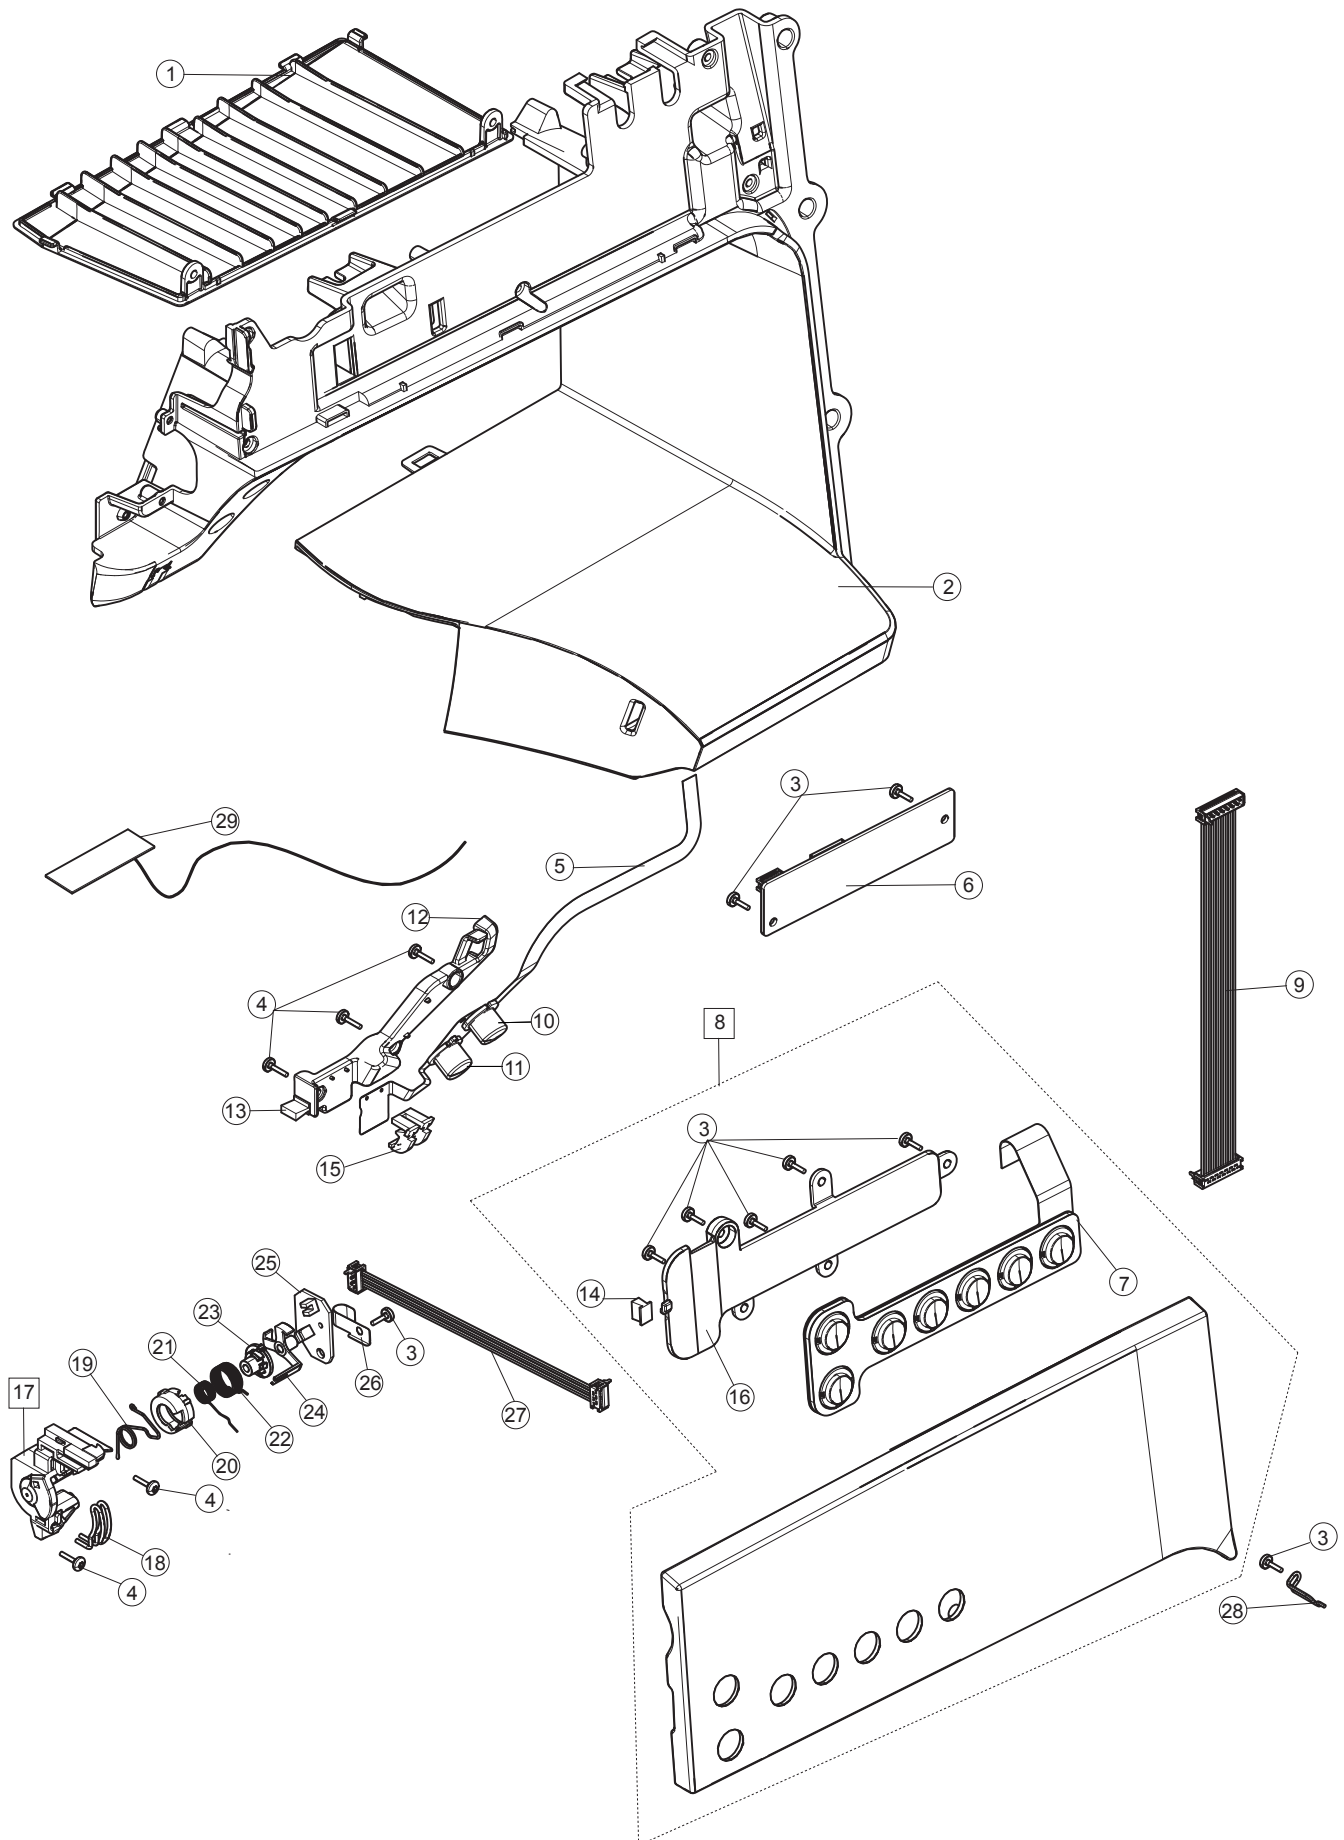


1	68016919	Light Diffuser
2	68001930	Cover Front
3	411966801	Screw PT 3x7,7 FZB
4	411966820	Screw PT 3x10 FZB
5	68003120	FPC Indicator/Button
6	68001617	Right Panel Connector Board
7		Keyboard Cpl
8	68006160	Decor Front Cpl (Incl. 7, 8, 16)
9	68003013	Cable Assembly 14 Pin, Base board-Application board
10	68003297	Start/Stop Button
11	68003299	Reverse Button
12		Bracket Indicators and Buttons
13	68002540	Brush Pile Seal
14	413233501	Brush Pile Seal
15	68016915	Light Diffuser Indicator
16		Bracket Keyboard
17	68008650	Thread Sensor Cpl
18	413176701	Thread Guide Lower
19	413177301	Safety Spring
20	413176902	Adjusting Sleeve Outer Part
21	68002465	Check Spring 1
22	413177201	Check Spring 2
23	413177001	Adjusting Sleeve Inner Part
24	413177401	Sensor Thread Take-Up Device
25	413202101	Thread Sensor Board Cpl
26	68002476	EMI Shield
27	68003027	Cable Assembly, Right panel - Upper thread sensor
28	68002930	Thread Guide
29	68001638	Wifi Antenna Board Cpl

E

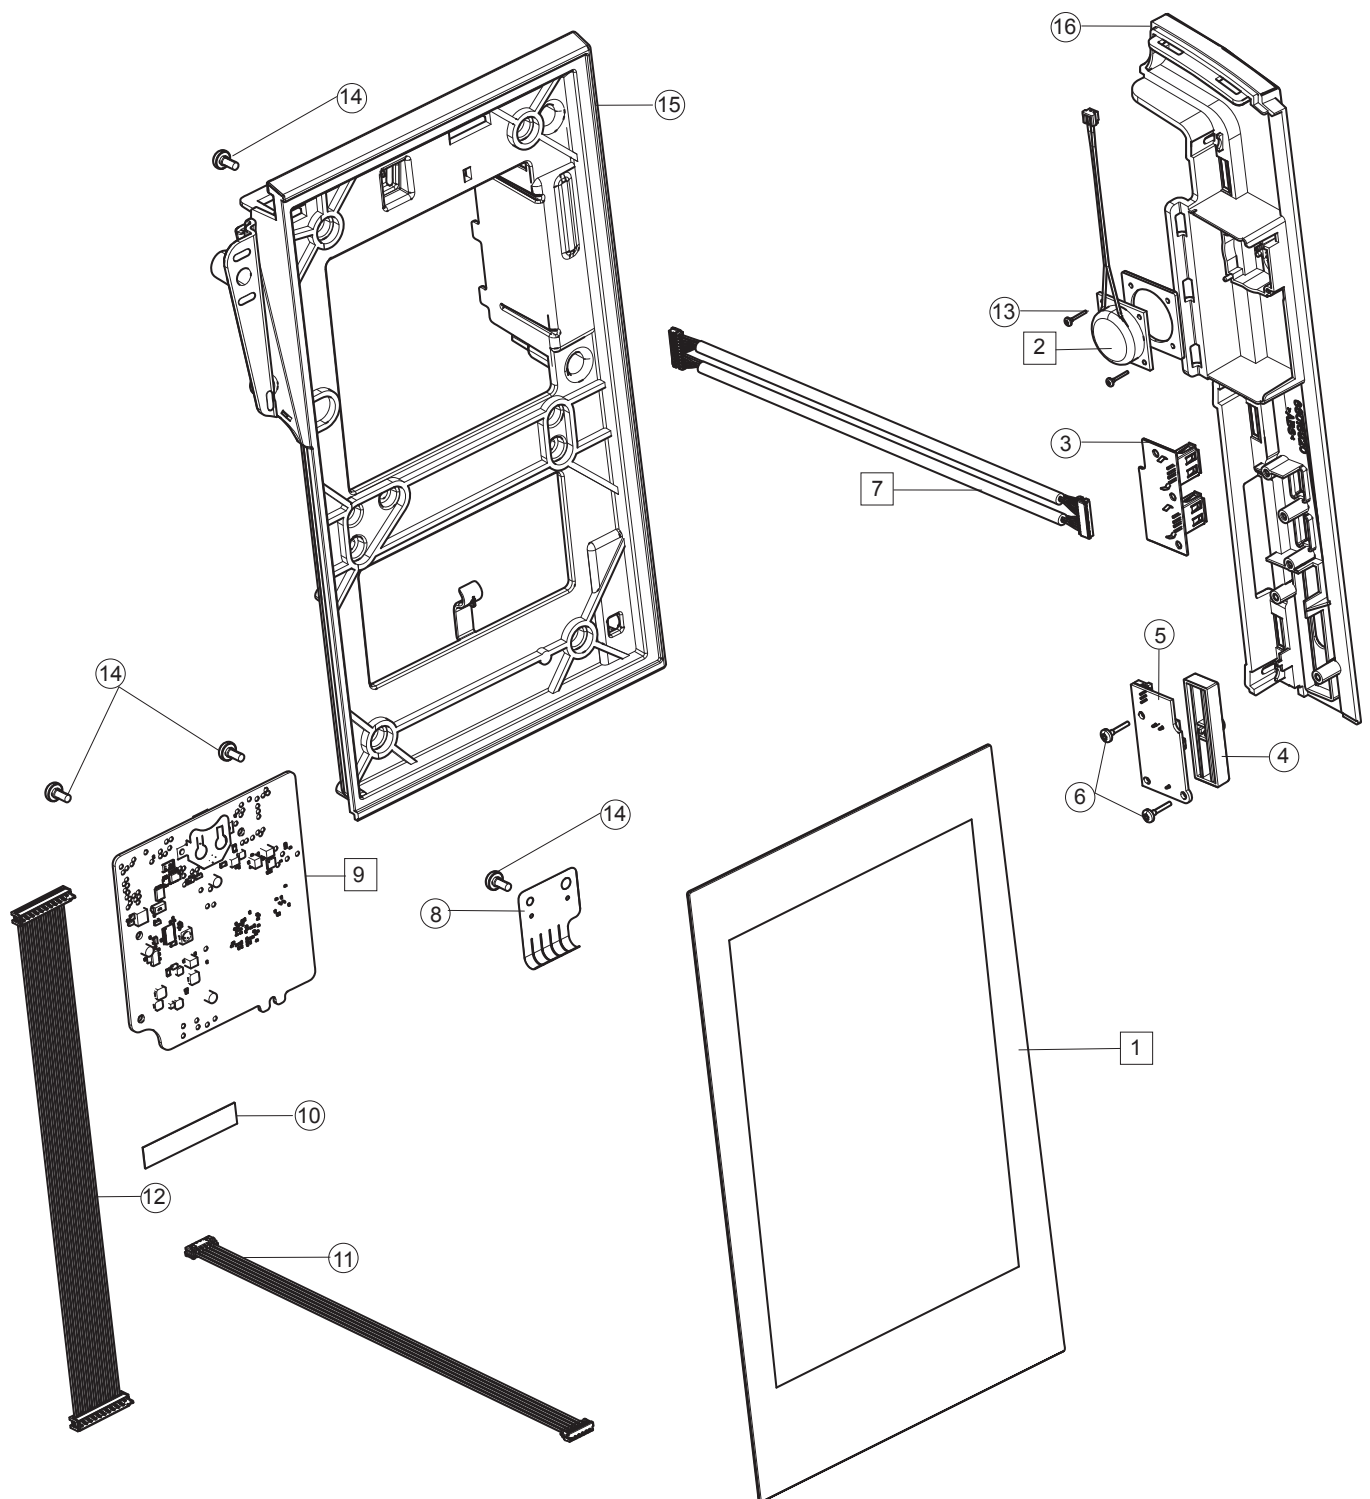



1	68006182	Display Cpl
2	68003915	Loudspeaker Cpl
3	68000165	USB Connector Board
4	68001927	Slider Lever
5	68018087	Speed Slider Cpl
6	411966803	Screw PT 3x12 FZB
7	68001937	Cable USB Cpl
8	68018229	EMI Shield
9	68008239	Application Board Cham High Cpl
10	68009762	Cable Assembly
11	68009757	Cable Assembly Application Board
12	68009756	Cable Assembly 20 pin Base board - Application board
13	411966821	Screw PT 1,8x10 FZB
14	412211411	Screw M4x8 TORX
15	68006087	Decor Display FPF393
16	68001918	Side Panel

F

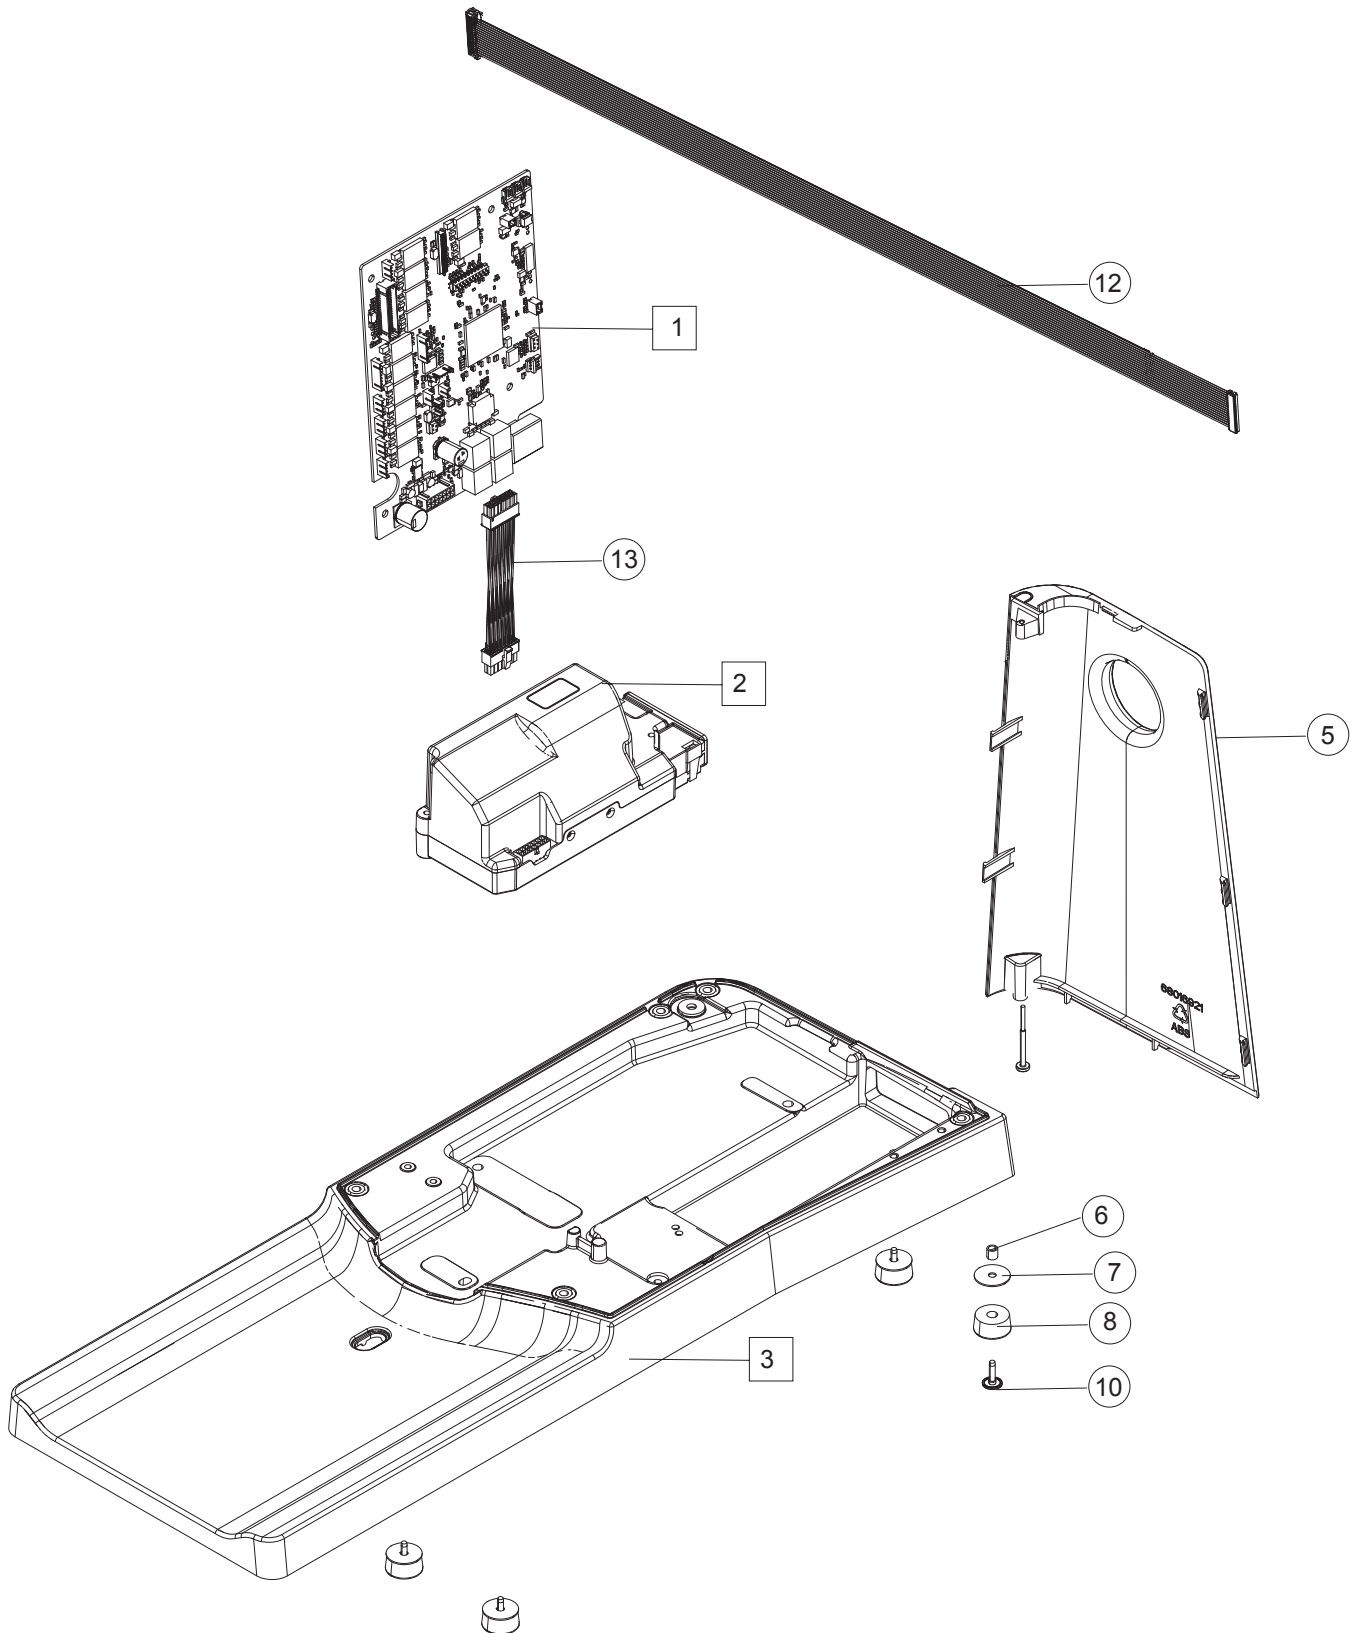


1	68003293	Base Board
2	68012563	Power Supply Unit
3	68001976	Base Plate Icon
6		Distance Foot
7	68004733	Washer
8	68002022	Foot
10	413169401	Collar Screw TT 4x14
11		
12	68009755	Cable base bord-sewing head
13	68003014	Cable base board-power supply

G

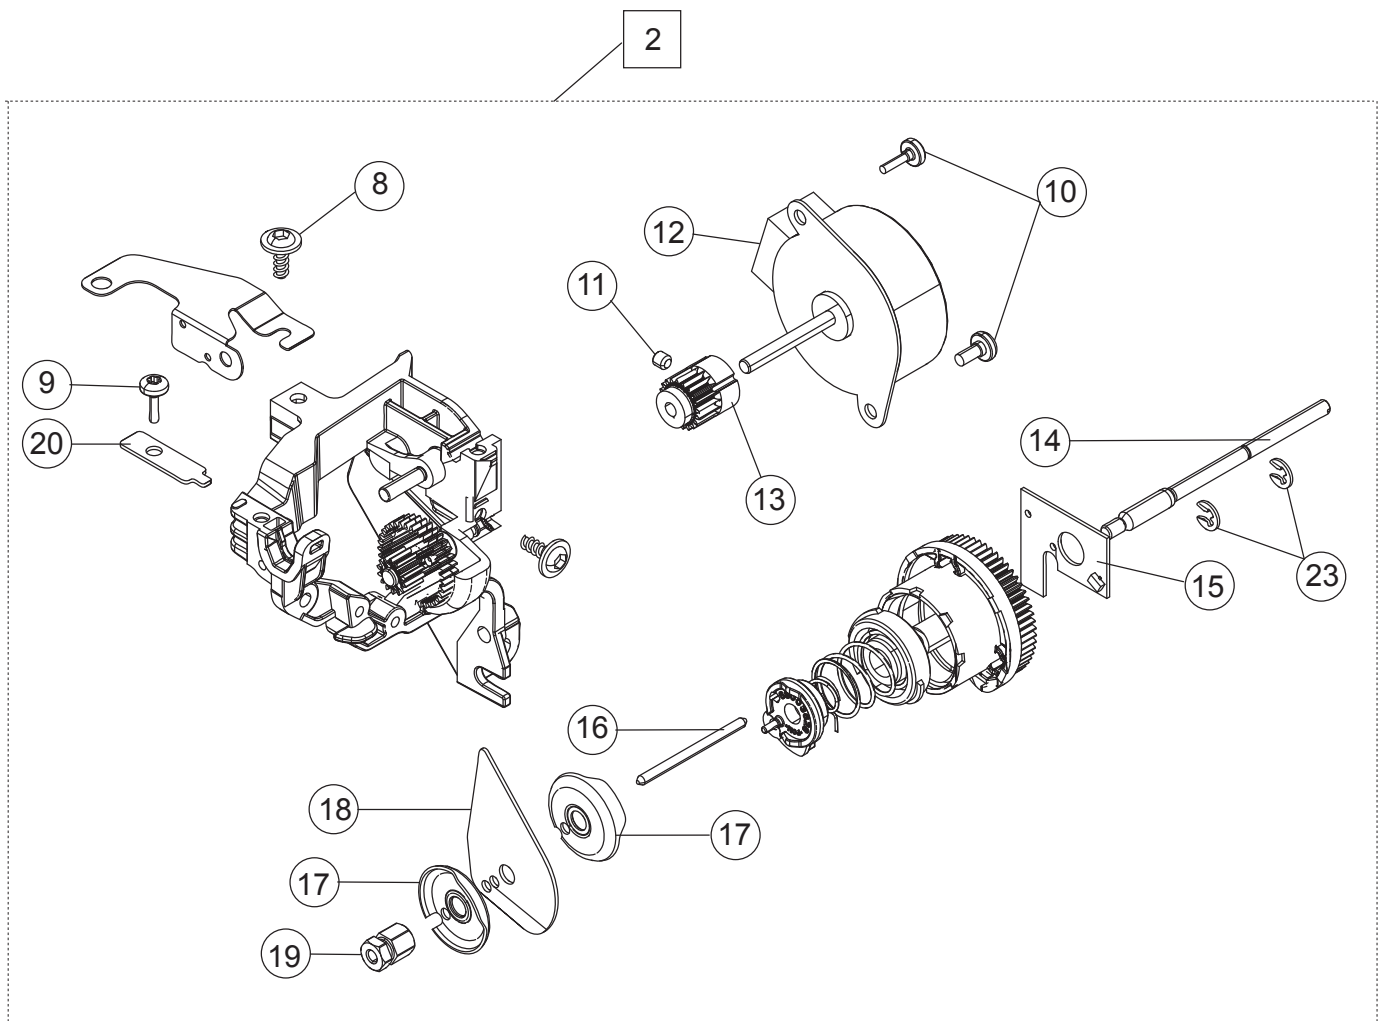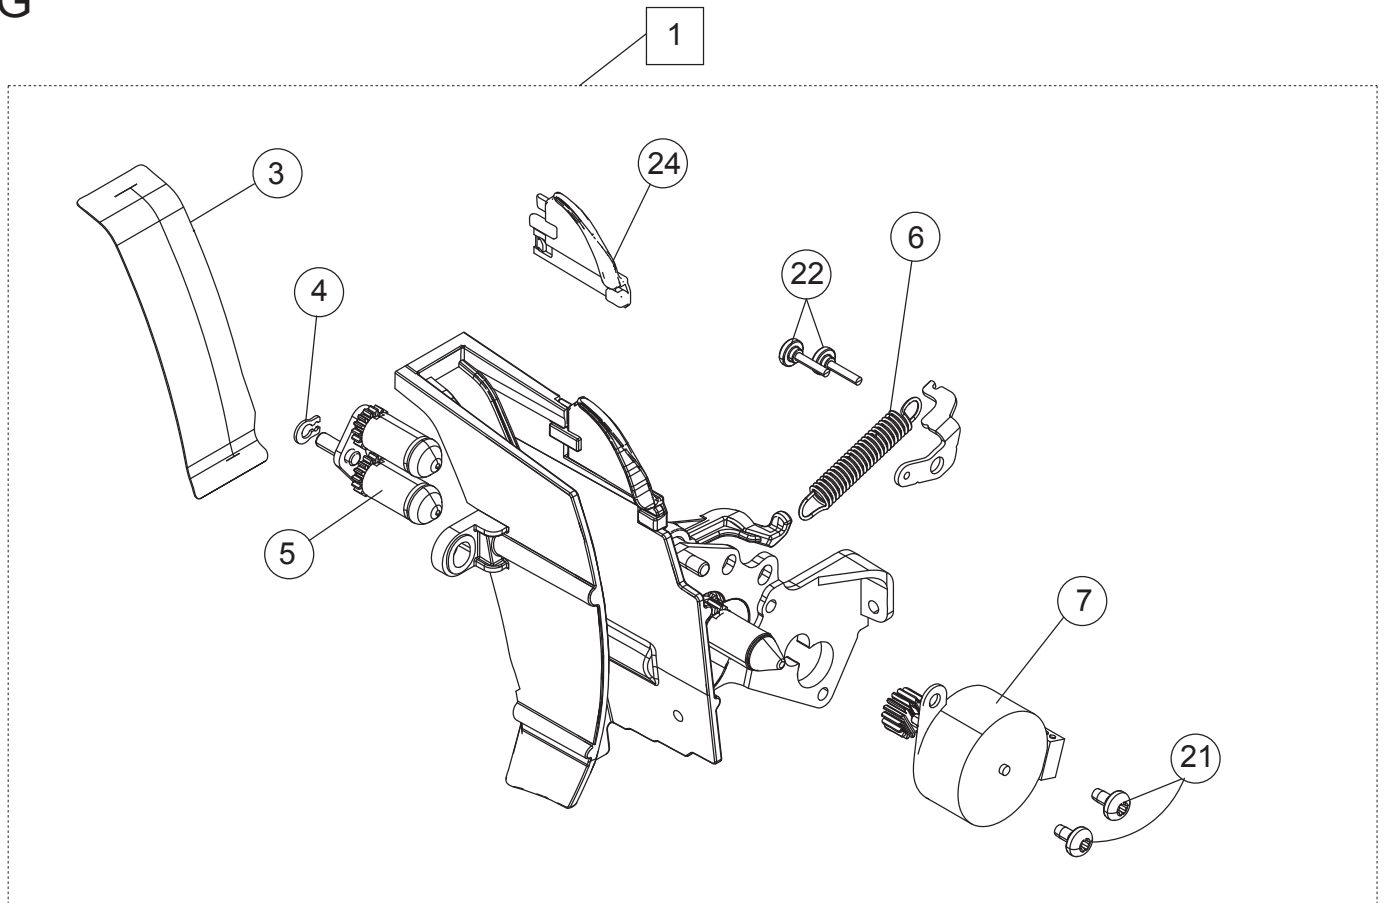


1	68004949	Shield Unit
2	68004948	Thread Tension Unit
3	68005160	Sealing Shield
4	735612440	Compression Rings Ø 3
5	68016879	Rocker Cpl
6	413055501	Tension Spring
7	68003132	Stepping Motor
8	9303311855000	Screw torx T15x8
9	411966801	Screw PT 3x7,7 FZB
10	412211402	Screw M3x6 TORX
11	411968703	Set Screw Flat M3x3 Torx
12	68004946	Stepping Motor
13	68009475	Gear
14	68003616	Shaft Thread Tension
15	68008707	Calibration Sensor
16	413113201	Pin
17	68005172	Disk Outer Thread Tension
18	68005173	Disk Center Thread Tension
19	68003621	Nut
20	68003623	Clamp
21	412056011	Screw TT M3x5
22	413314901	Screw PT 3x10 with Guide
23	735310620	C-Washer 2.3x0.6
24	68000109	Thread Guide

H

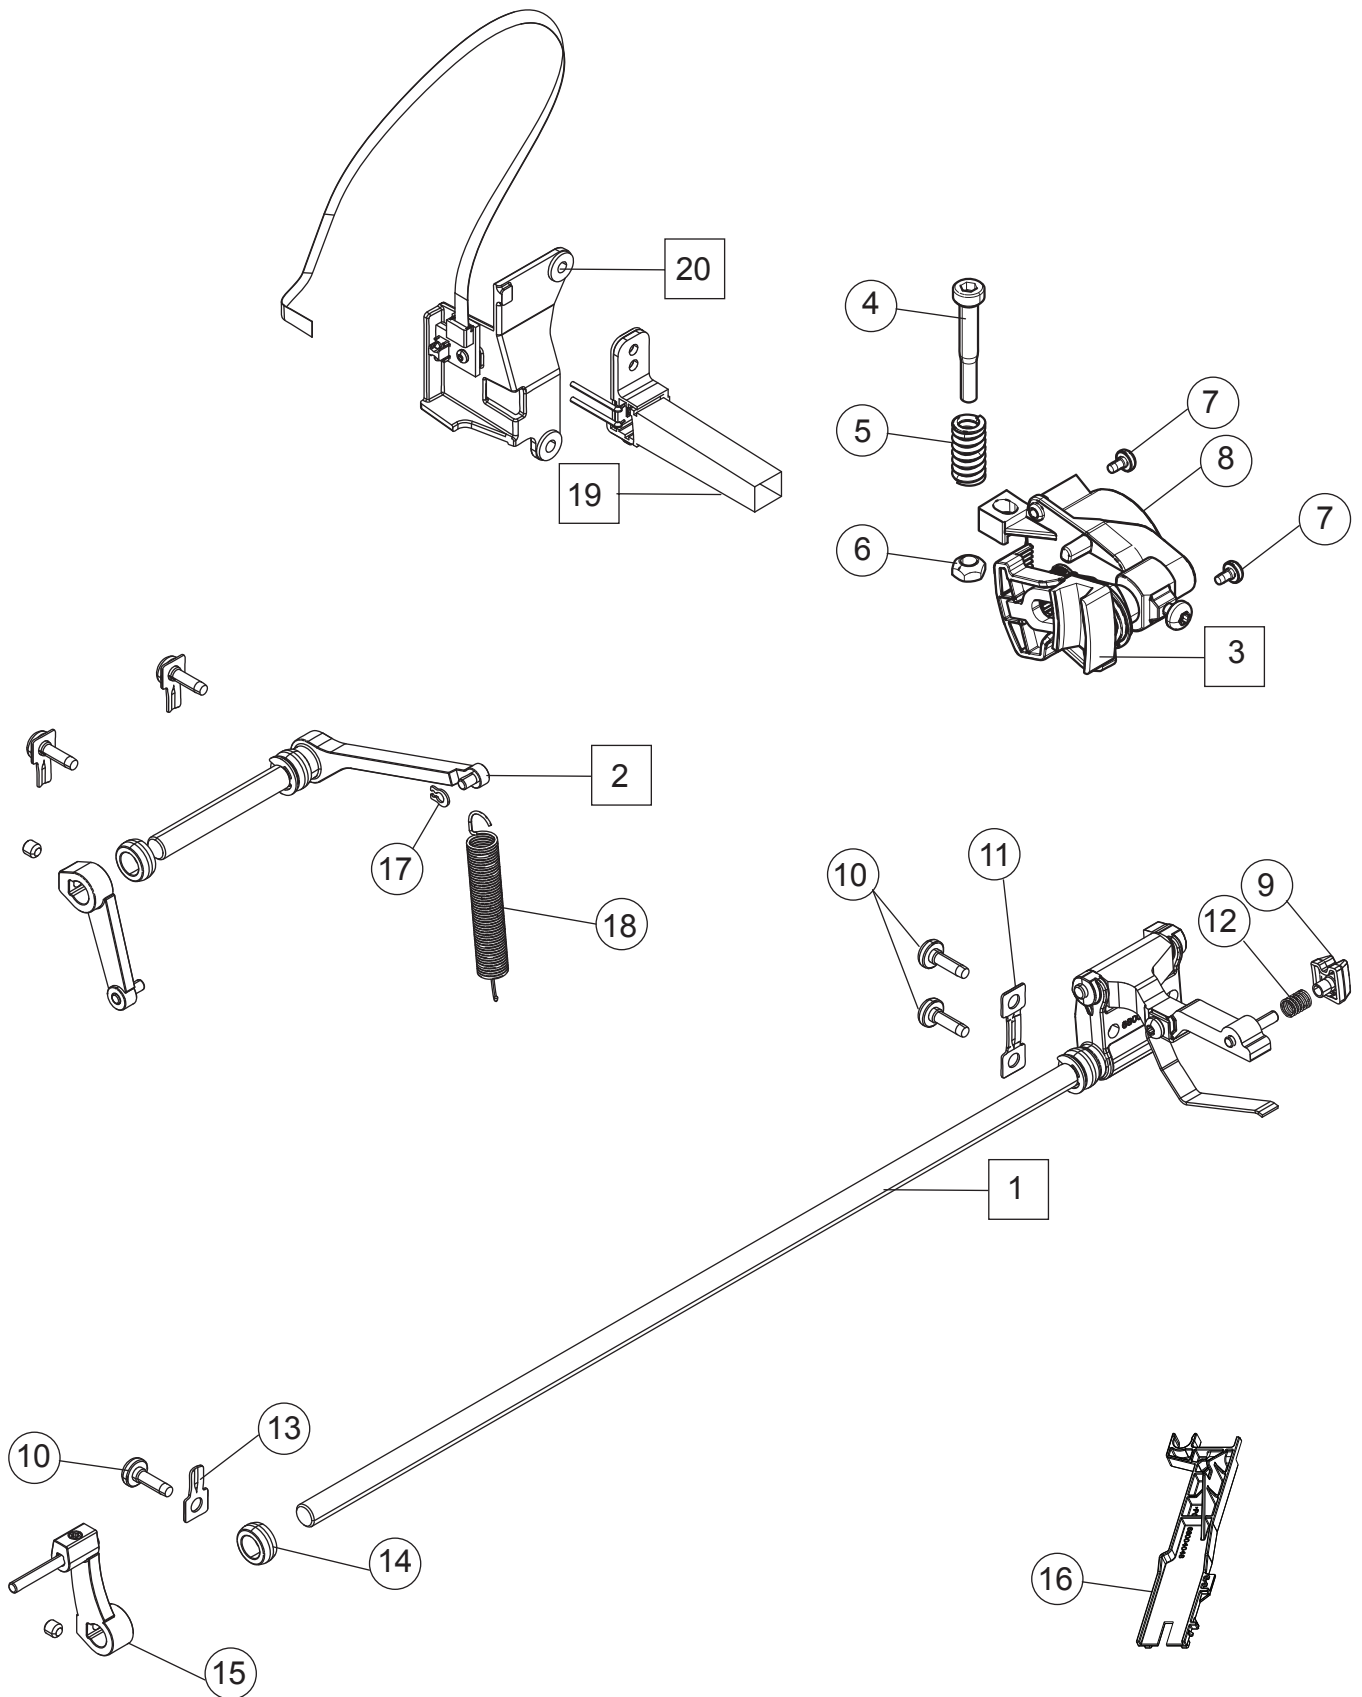


1	68005064	Feeding Length IDT Cpl
2	68004742	IDT Height Feeding Cpl
3	68007017	Guide Unit IDT
4	68005004	Screw Balance Adjustment
5	412963601	Spring
6	68005005	Nut Balance Adjustment
7	412056011	Screw TT M3x5
8		Stepping Motor Cpl
9	68001955	Block Guide IDT
10	412056006	Screw TT M4x12
11	68003274	Clamp
12	68008681	Compressor Spring
13	413042901	Clamp IDT
14	413042601	Bearing IDT
15	68000036	Front Crank Cpl
16	68004048	IDT Adjustment Tool Focus
17	735612440	Compression Rings Ø 3
18	68003037	Spring
19	68009767	Light Guide Cpl
20	68000053	IDT Sensor Cpl

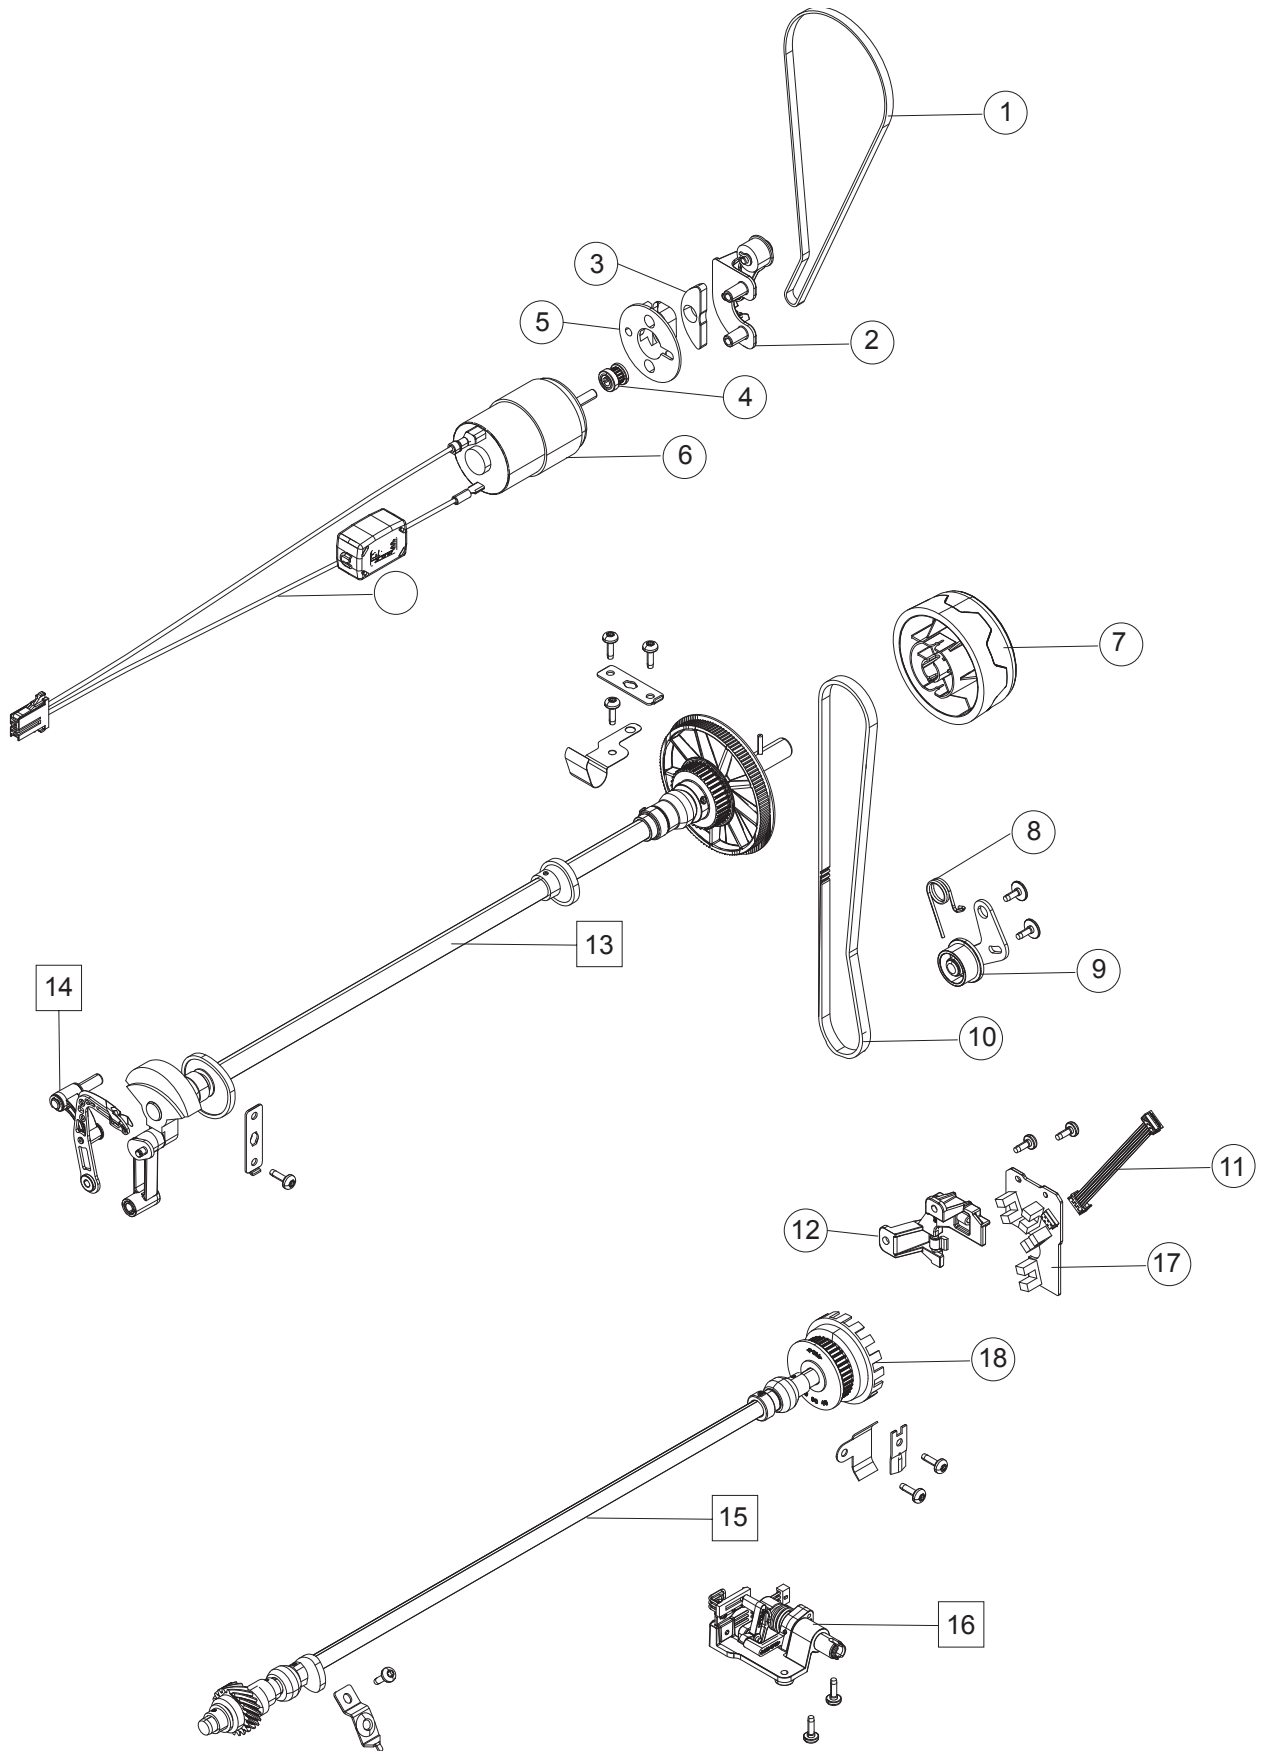


1	413416101	Cog Belt
2	412971902	Belt Tensioner Cpl
3	68005148	Rubber Damper
4	68005176	Spacer Block
5	412353302	PULLEY CPL
6	68001153	Motor with Connector
7	68006092	Hand Wheel
8		Spring Belt Tension
9	68000114	Timing Belt Tension Cpl
10	413416001	Cog Belt
11	68009761	Cable Assembly 6 Pin
12	68004951	Bracket Sector Sensor
13	68016833	Upper Shaft Part Cpl
14	68000100	Take Up Lever Cpl
15	68008234	Lower Shaft Cpl
16	413050201	Knee Lift Cpl
17	68001641	Sector Sensor Board Cpl
18	68000112	Shield Revolution Indicator

J

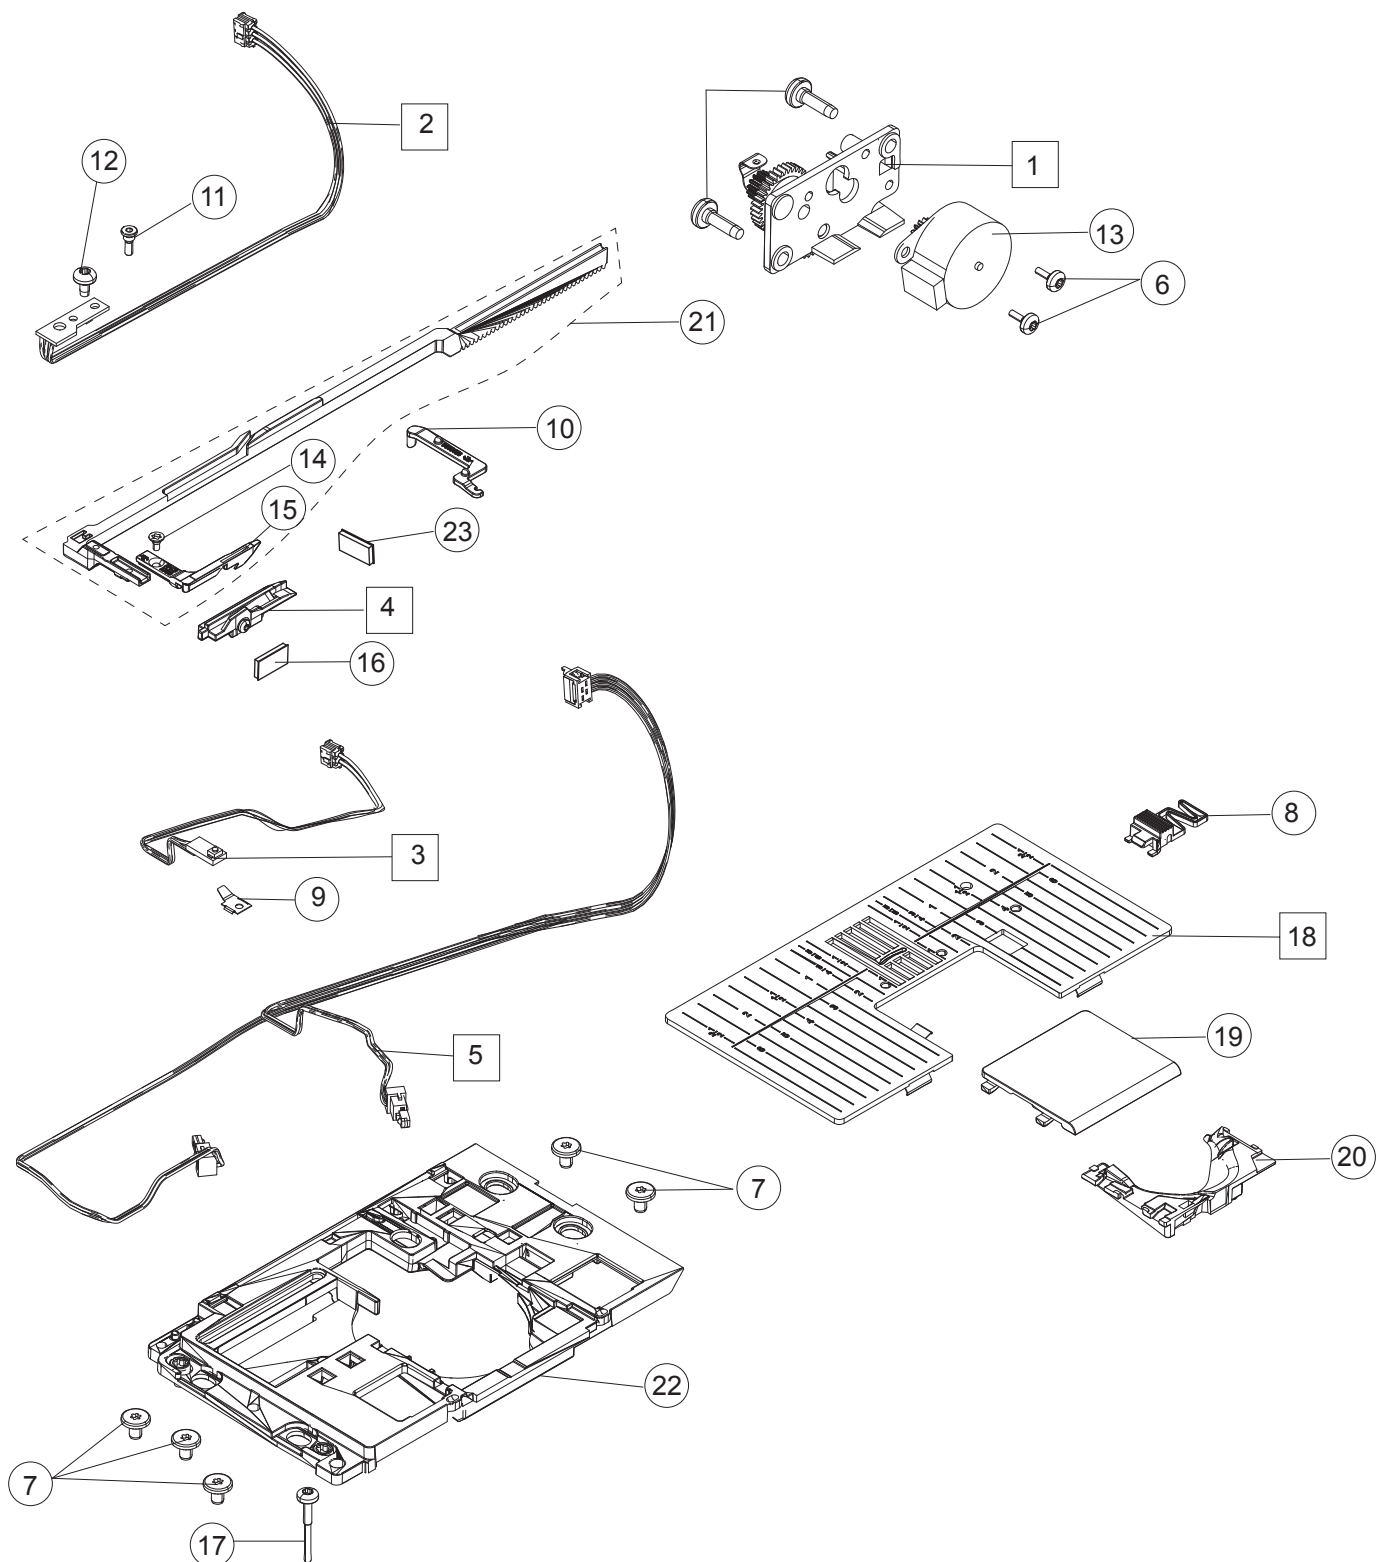


1	68016200	Cut Motor Cpl
2	68008157	Cut Sensor Cpl
3	68012605	Stitch Plate Sensor
4	68005146	Knife Holder cpl
5	68012606	Cable Assembly Bobbin Sensor
6	411966828	Screw PT 3x6 FZB
7	412287903	Screw M4x5
8	68008219	Button
9	413287301	Spring Stitch Plate Sensor
10	68009116	Fetcher Upper Thread
11	68008759	Guide Pin
12	412056011	Screw TT M3x5
13	413004601	Stepping Motor 25mm
14	412280501	Screw, Countersunk
15	68016241	Fetcher
16	68002843	Thread Brake
17	411966805	Screw PT 3x20 FZB
18	68008712	Stitch Plate Cpl
19	68003968	Bobbin Cover
20	68005144	Retainer Cpl
21	68017542	Feather, Gear Rack Cpl
22	68008746	Hook Cover
23	68002750	Brush Pile Seal

K

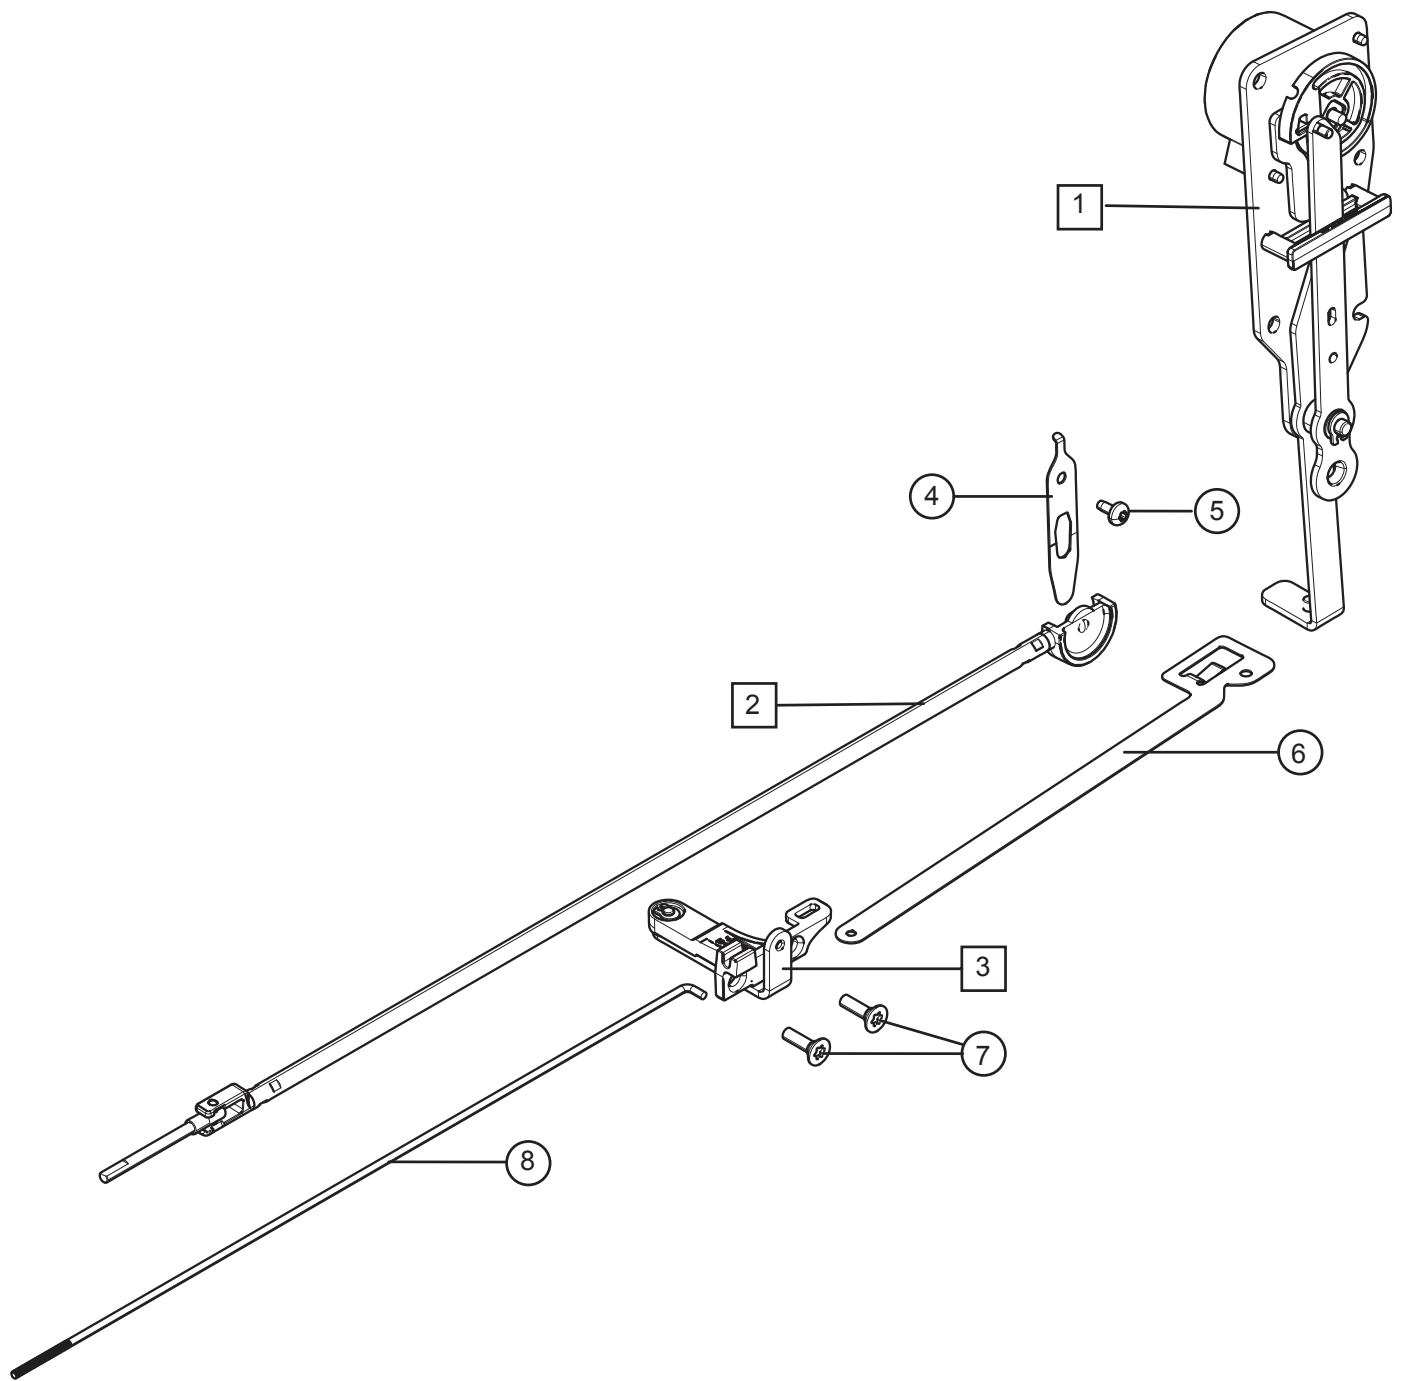


1	68005909	Feed Dog Drop Cpl
2	68004953	Pull Rod Side Feeder Cpl
3	413034501	Linkage Feed Dog Drop Cpl
4		Clamp
5	412056004	Screw TT M3x6
6	68005033	Transmission Linkage
7	411967212	Screw FS TT M4x12 Torx
8	68005034	Pull Wire

L 1

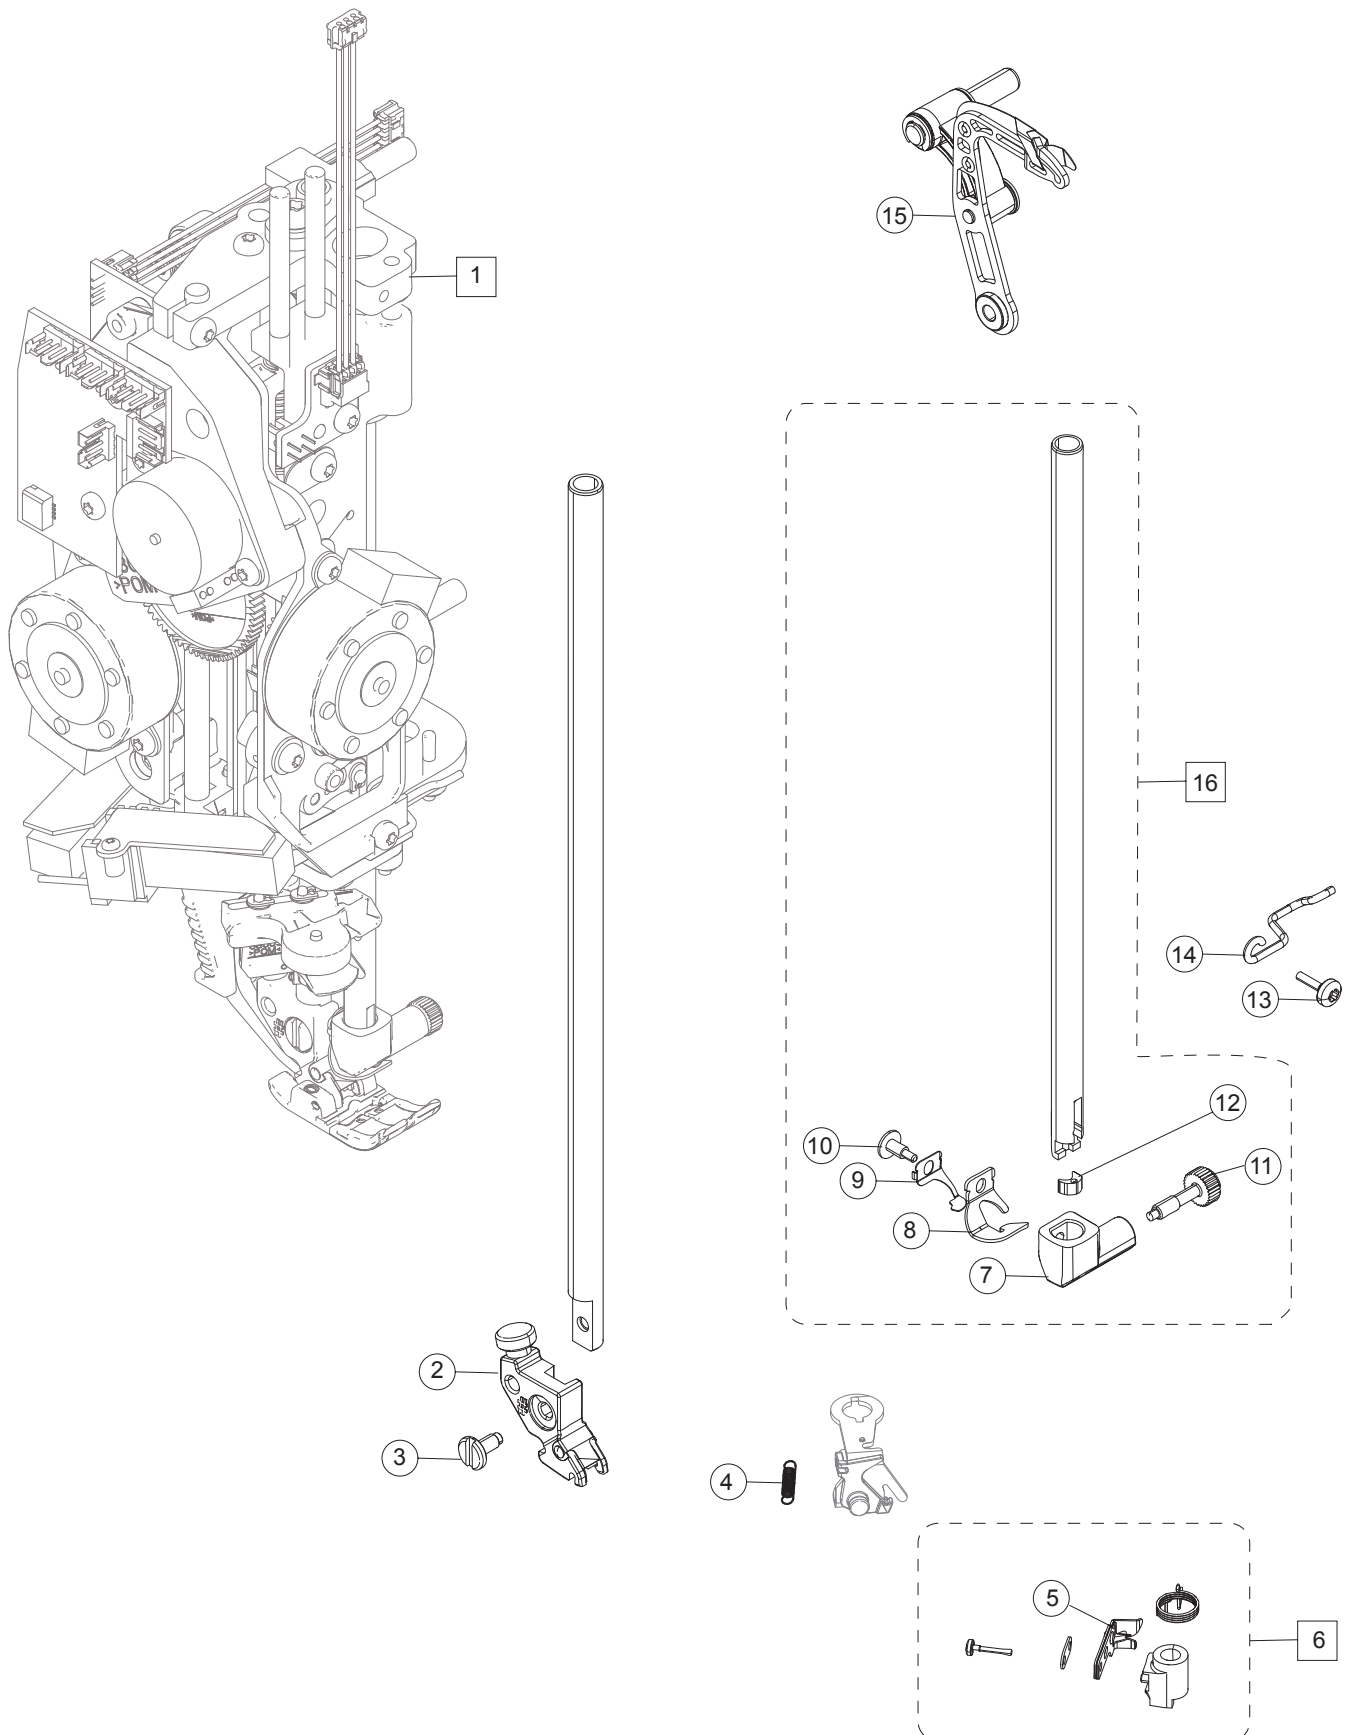


1	68001375	Sewing Head Cpl
2	68005972	Holder Presser Foot Cpl
3	413040401	Screw Holder Presser Foot
4	68008152	Spring
5	68012541	Hook Cpl
6	68012540	Hook Bracket Cpl
7	68002088	Needle Holder
8	68016390	Thread Guide
9	68007100	Thread Lock
10	68002284	Screw Thread Leader
11	413372901	Screw Needle Holder PF
12	68016246	Clamping Piece
13	411966801	Screw PT 3x7,7 FZB
14	68003081	Thread Guide
15	68000100	Take Up Lever Cpl
16	68001960	Needle bar Cpl.

L 2

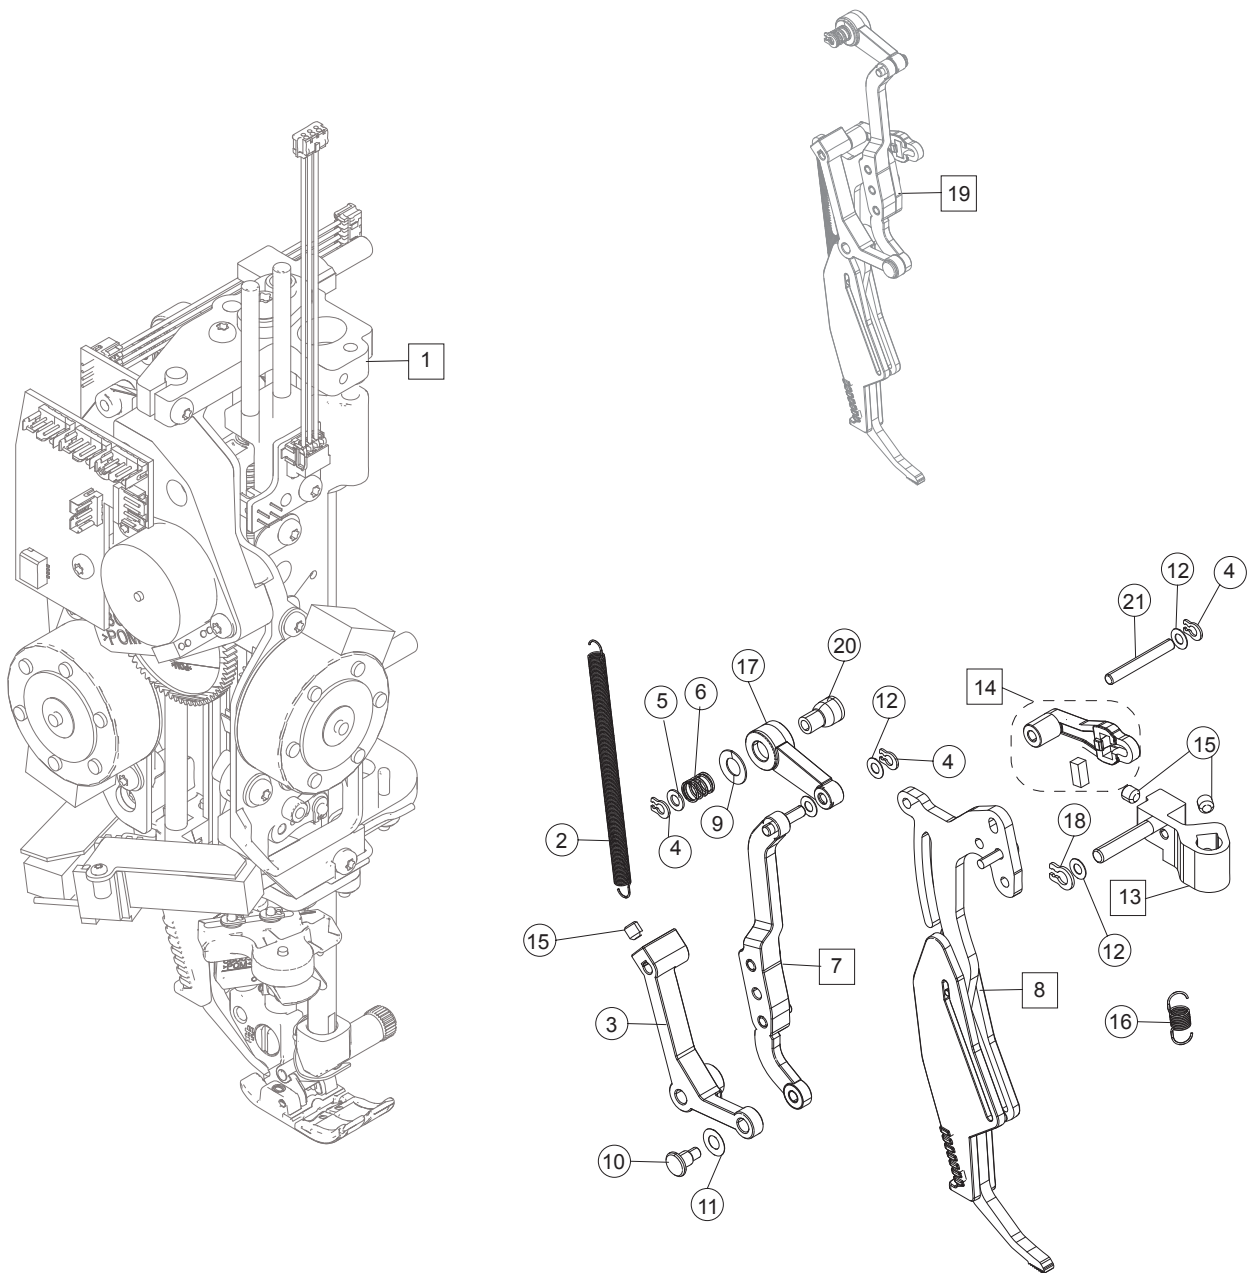




1	68001375	Sewing Head Cpl
2	68004980	Spring
3	68004759	Toggle Link
4	735612440	Compression Rings Ø 3
5	411981401	Washer 6x3,2x0,5
6	413043101	Compression Spring
7	68003219	Lower Link Cpl
8	68003200	Transport Foot Cpl
9	413095401	Cup Spring 10x5,2x0,4
10	68001893	Pin
11	412877001	Washer 4x8x0,1
12	411967501	Washer 3x6x0,2
13	68009073	Presser Bar Guide Cpl
14	68003906	Lower Slewing Bracket Cpl
15	411968706	Set Screw Flat M4x4 Torx
16	68005179	Spring
17	68004757	Upper Slewing Bracket
18	735613640	Compression Ring Ø4
19	68004987	IDT Link Package
20	413042801	Toggle Joint, IDT
21	412316060	Needle Bearing Pin NRB 3x23,8

M

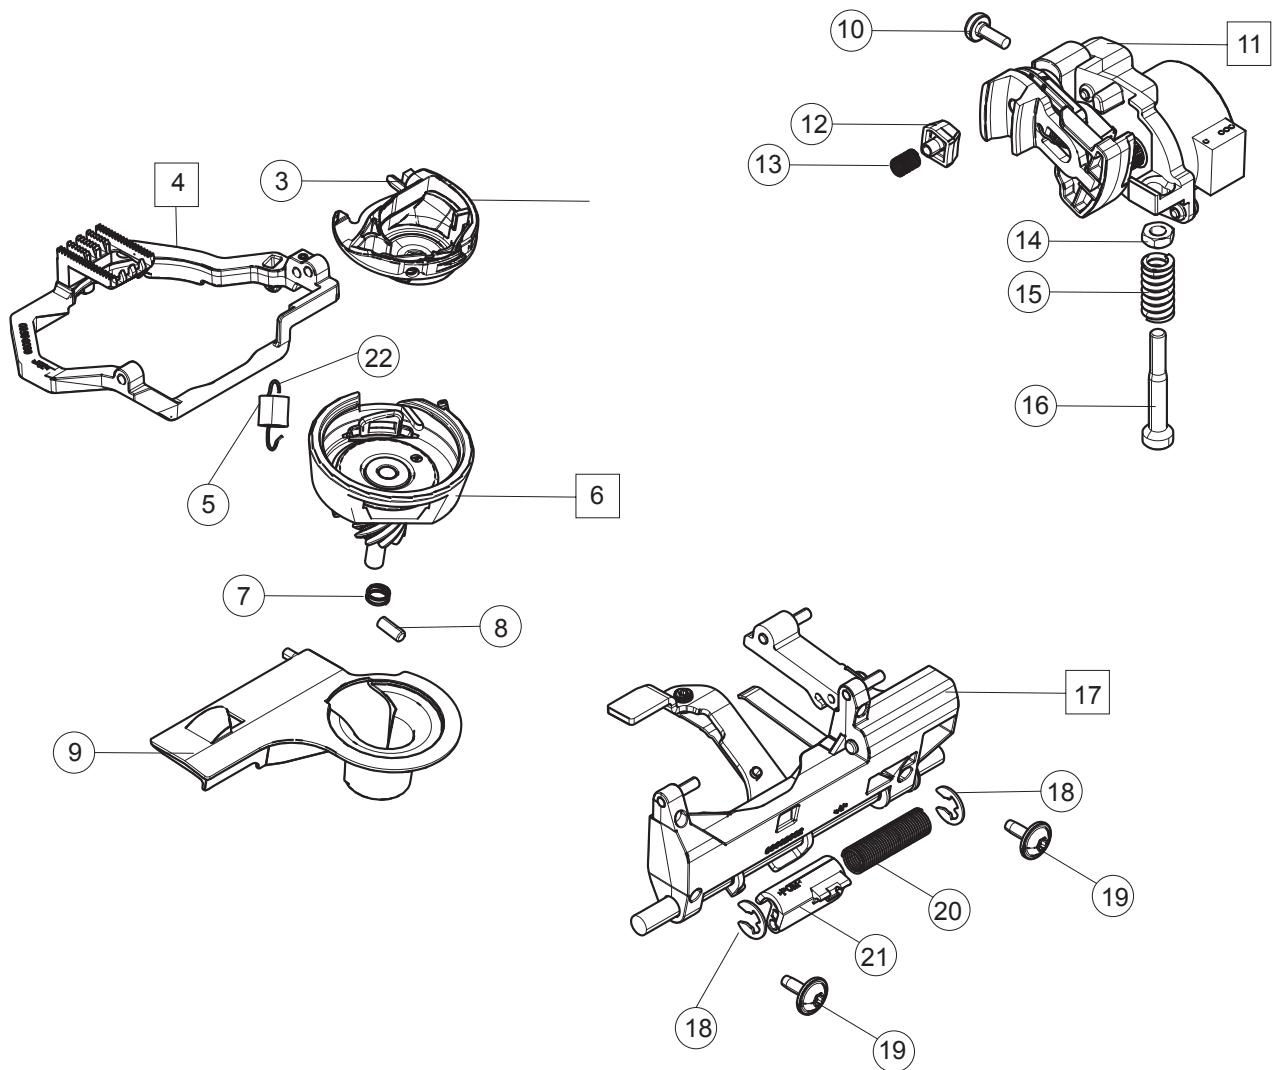

3	68003696	Bobbin Case Cpl
4	68008448	Frame Feed Dog Cpl
5	413112601	Buffer
6	68016090	Hook Cpl With Shaft
7	412930101	Spring, hook
8	728528705	Set Screw M4x8 Insex
9	68003307	Dust Cover
10	412211412	Screw M4x10 TORX
11	68004643	Guide Unit
12	68017303	Block Guide
13	68008681	Compressor Spring
14	68005005	Nut Balance Adjustment
15	412963601	Spring
16	68005004	Screw Balance Adjustment
17	68016641	Feeding Unit
18	735310920	Lock Washer 5
19	412281904	Screw Flange M4x10 TT Torx
20	412908901	Spring Feed Dog Drop
21	68003579	Insert
22	413006802	Feed Frame Spring
23	68007870	Bobbin

N

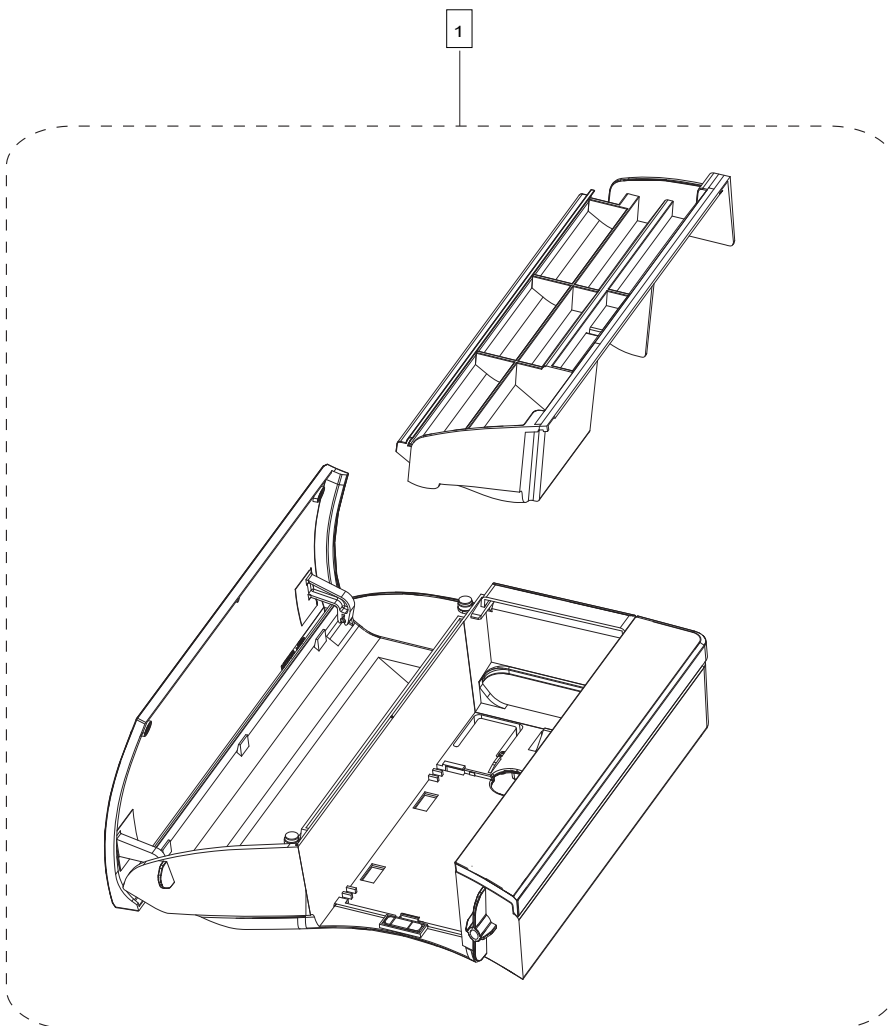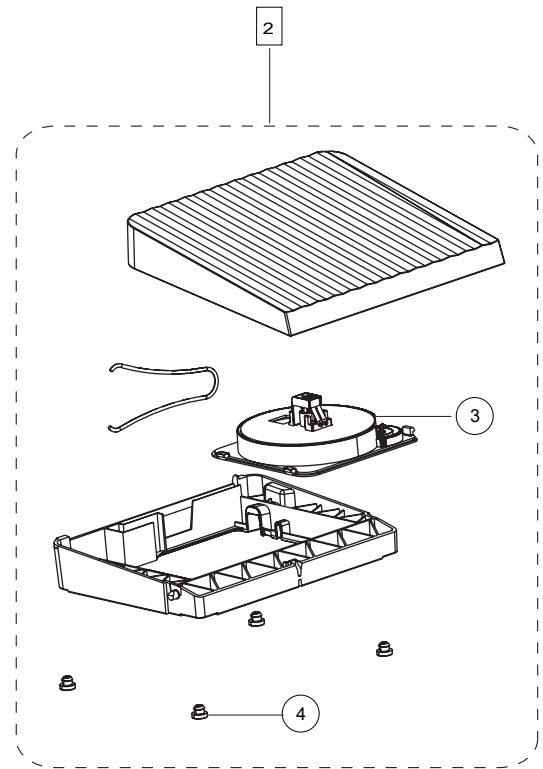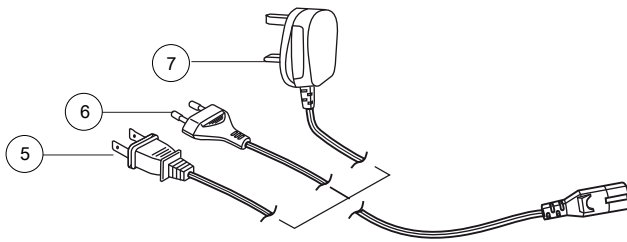


PFAFF Performance Icon

1	68006186	Accessory Box Cpl
2	412991405	Foot Controller CPL.
3	412493002	Control Unit with Winder
4	412184501	Foot
5	412157903	Net Cable 120V
6	412157801	Net Cable 220V
7	412158002	Net Cable GB
8		Net Cable AU
9	68003664	Softcover Machine

N

O

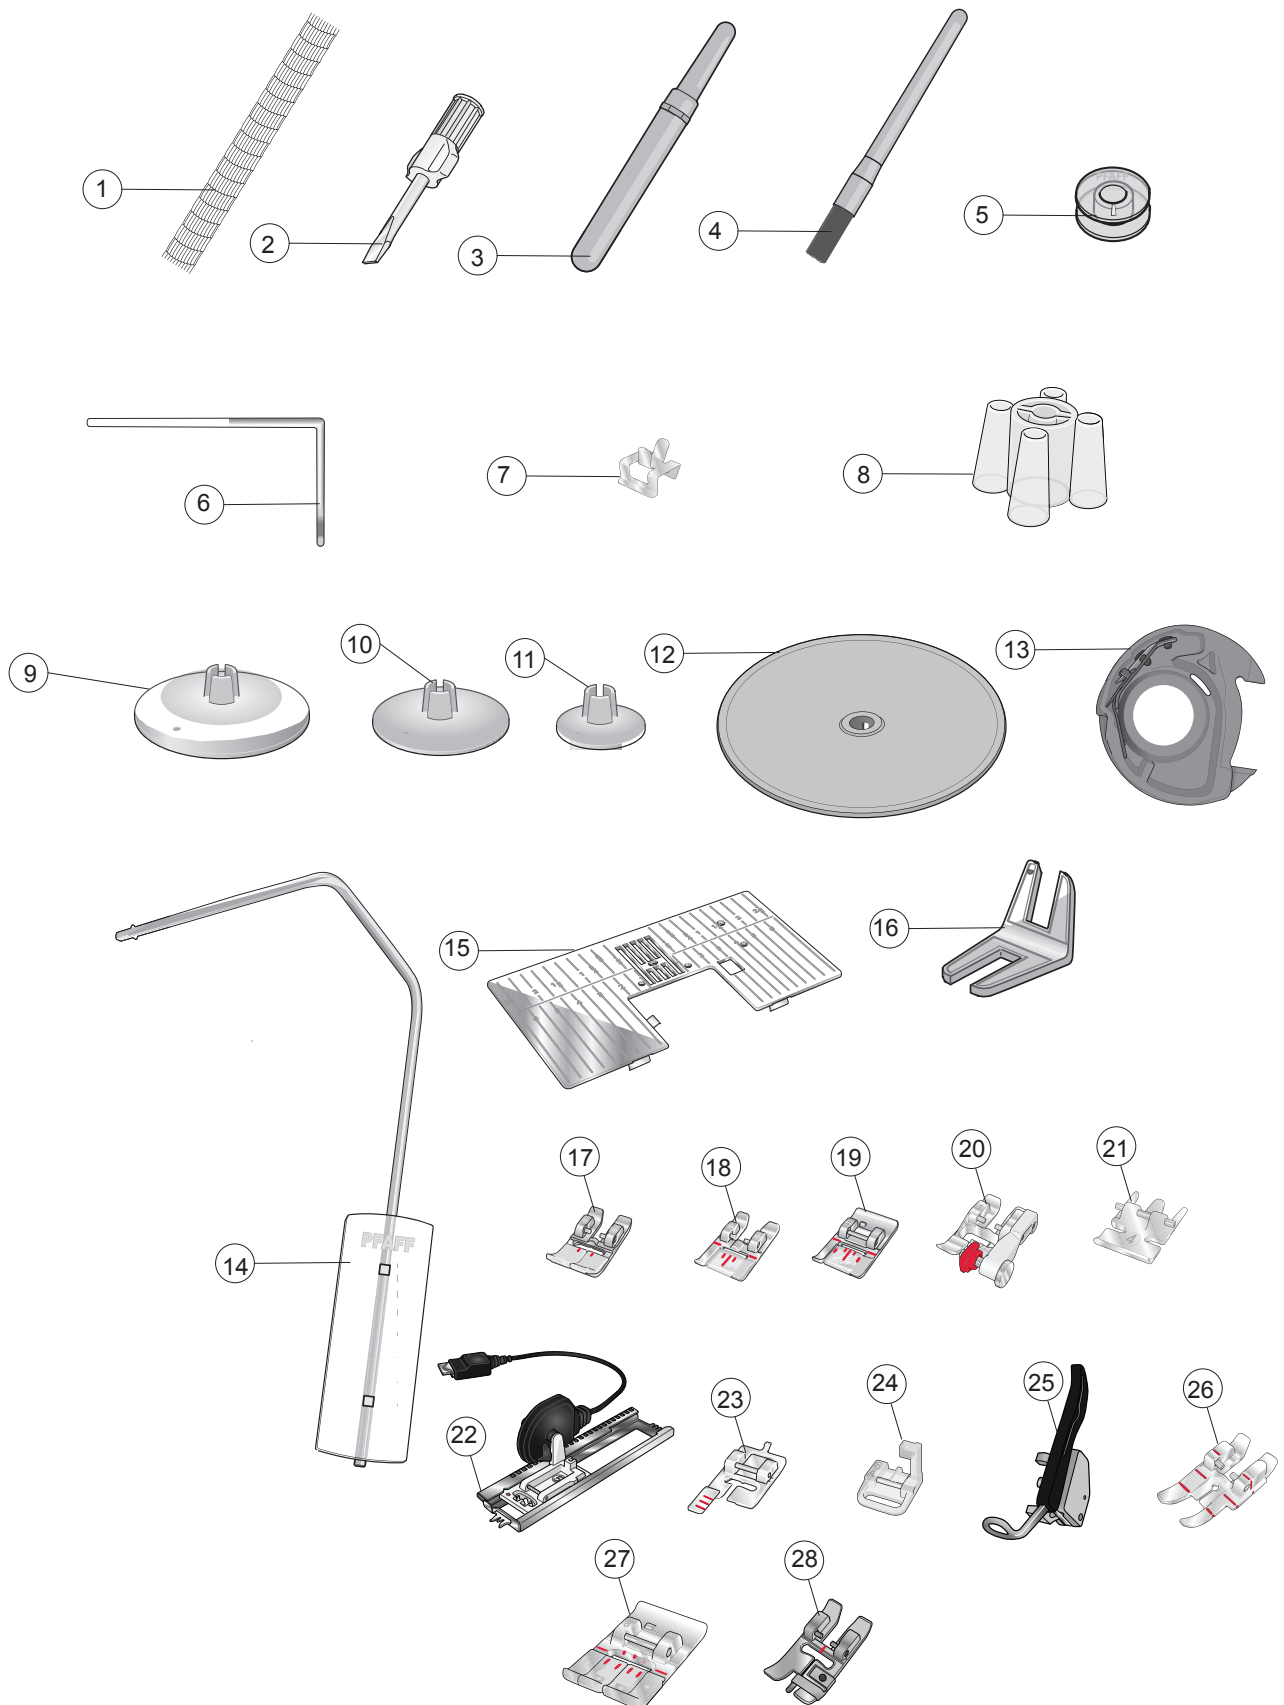

Accessories

1	412397701	THREAD NET 15x100
2	412381501	Screw Driver,
3	401539901	SEAM RIPPER
4	413190401	Brush
5	68007870	Bobbin 1 pcs
6	820251096	Edge Ruler
7		Set of Clips
8	68002445	Spool cone
9	413051603	SPOOL HOLDER 45 MM
10	413051602	SPOOL HOLDER 35 MM
11	413051601	SPOOL HOLDER 22 MM
12	68000130	Spool Holder
13	68005213	Bobbin case
14	68002258	Lever Knee
15	68008711	Scant Stitch Plate
16	413105601	CLEARANCE PLATE
17	820773096	Standard Presser Foot OA
18	413059801	Fancy Stitch Foot 1A
19	413060501	Fancy Stitch Foot 2A
20	820256096	Blindhem Foot 3
21	820248096	Zipper Foot 4
22	68003184	Buttonhole Sensor Foot
23	413005502	BUTTON HO. FOOT 5M
24	820671096	EMBROIDERY FOOT 6A
25		EMBROIDERY FOOT 6D CPL
26	412864906	QUILT FOOT
27	413037101	MAXI-STITCH FOOT 8 CPL
28	68003085	Bi level Guide Foot

Tools

6310260018000	Spacer
6111160002000	Feeler gauge 2.5
413102201	Needle clamp
471018796	Accessory Connector Tester
68004048	Gauge for presser foot and IDT

