


PARTS LIST

Sewist 521


PARTS LIST

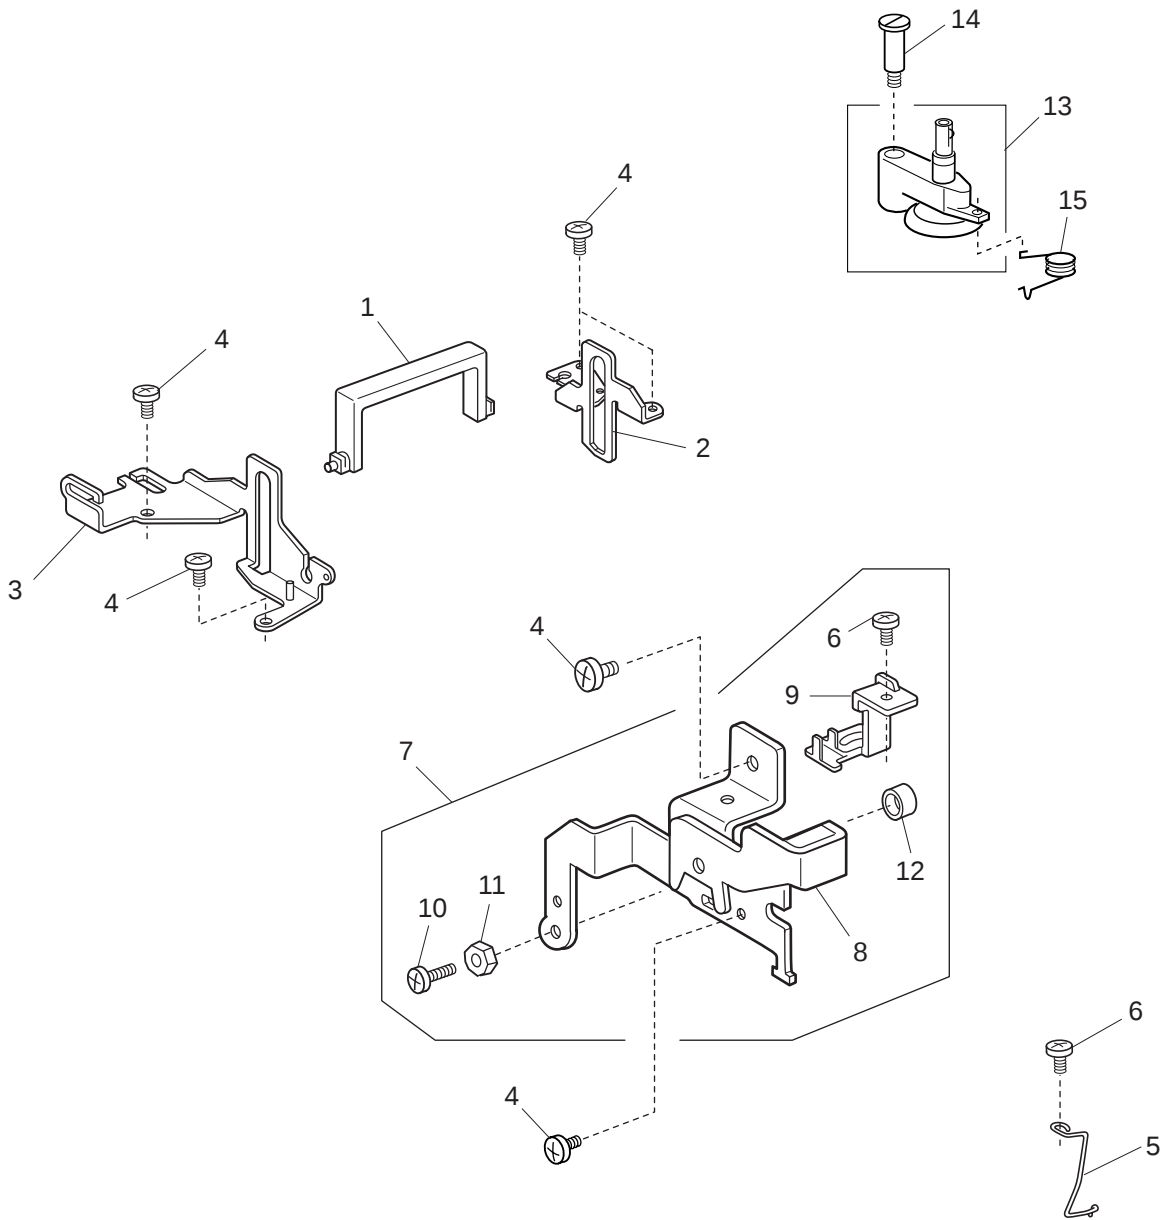

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	751100000	Carrying handle
2	507150002	Carrying handle supporter (right)
3	751077029	Carrying handle supporter (left)
4	000081005	Setscrew 4x8
5	652137006	Arm thread guide (2)
6	000101404	Setscrew 4x6
7	507605100	Face plateset plate (unit)
8	507161006	Face plateset plate
9	751020027	Threader shaft guide (upper)
10	000105419	Setscrew 4x16
11	000160102	Adjustable lock nut 4
12	685042005	Supporter stopper
13	652506000	Bobbin winder (unit)
14	652093009	Setscrew
15	659034003	Spring


PARTS LIST

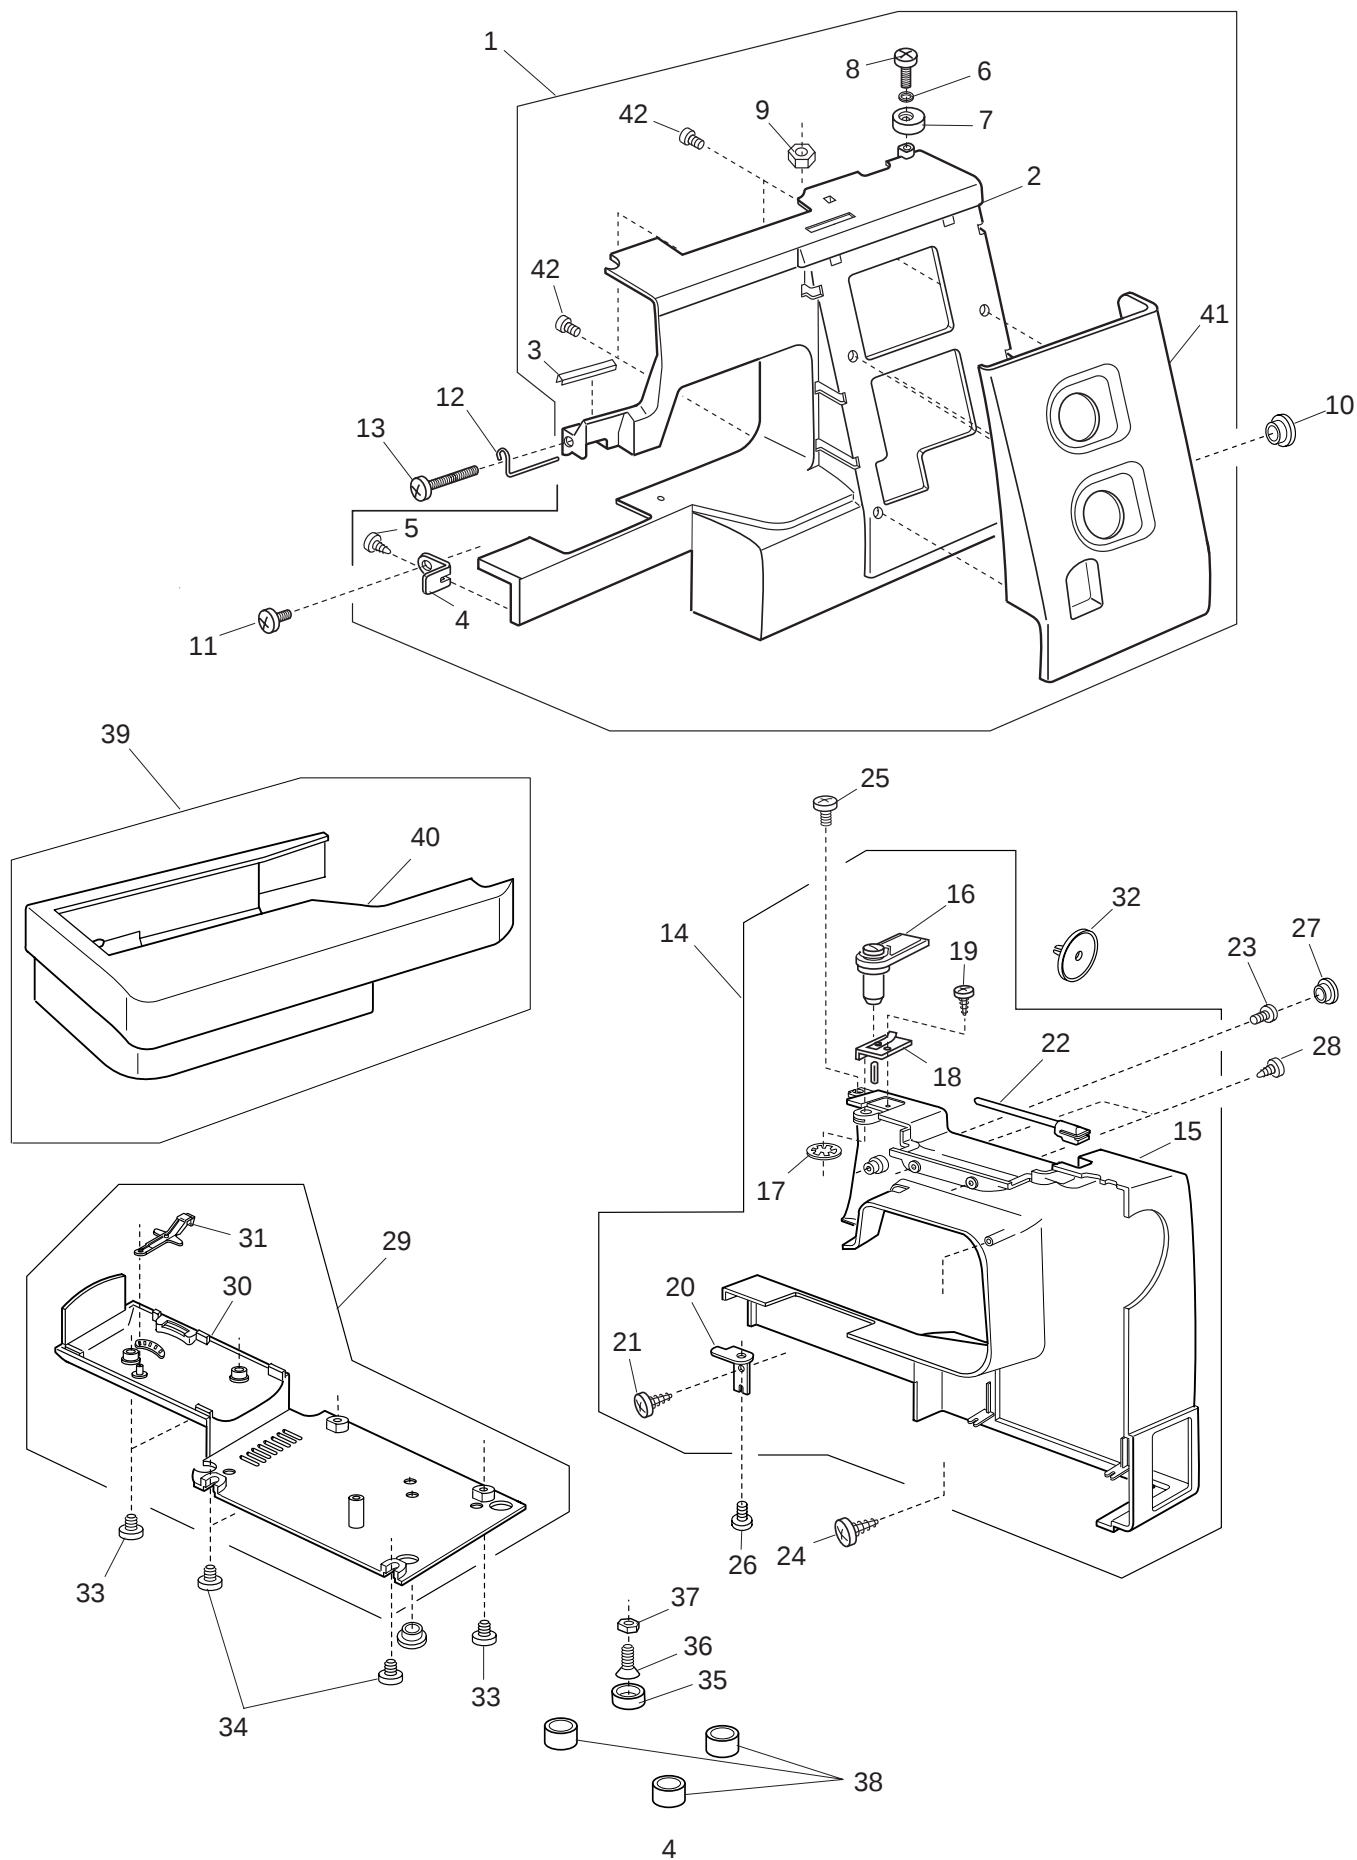

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	507634050	Front cover (unit)
2	507110114	Front cover
3	753125007	Thread guide
4	827069004	Front cover set plate (lower)
5	000120203	Setscrew 3x8
6	000071013	Washer 4
7	735016307	Bobbin winder stopper
8	000103107	Setscrew 4x14
9	000061205	Nut
10	745033002	Cap
11	000101404	Setscrew 4x6
12	753126008	Arm thread guide
13	000092917	Setscrew 3.5x27
14	507631127	Rear cover (unit)
15	507102102	Rear cover
16	650503067	Thread guide (unit)
17	000014409	Snap ring CS8
18	827503005	Top cover thread guide (unit)
19	000162001	Setscrew 2.6x5 (B)
20	827006003	Rear cover set plate
21	000161103	Setscrew 3x6 (B)
22	659067005	Additional spool pin
23	000101817	Setscrew 4x16
24	000121905	Setscrew 4x12 (B)
25	810220003	Setscrew
26	000081119	Setscrew 4x6
27	653006101	Cap
28	000161310	Setscrew 3x12 (B)
29	507601003	Base cover (unit)
30	507001007	Base cover
31	753005000	Drop feed lever
32	822020503	Spool holder (large)
33	000101703	Setscrew 4x12
34	000103509	Setscrew 4x10
35	735002001	Rubber foot
36	000097808	Setscrew 5x25
37	000061412	Nut
38	647009002	Bed rubber cushion
39	507637008	Extension table (unit)
40	507503004	Extension table (unit)
41	507111311	Ornamental panel
42	000161402	Setscrew 2.3x8 (B)


PARTS LIST

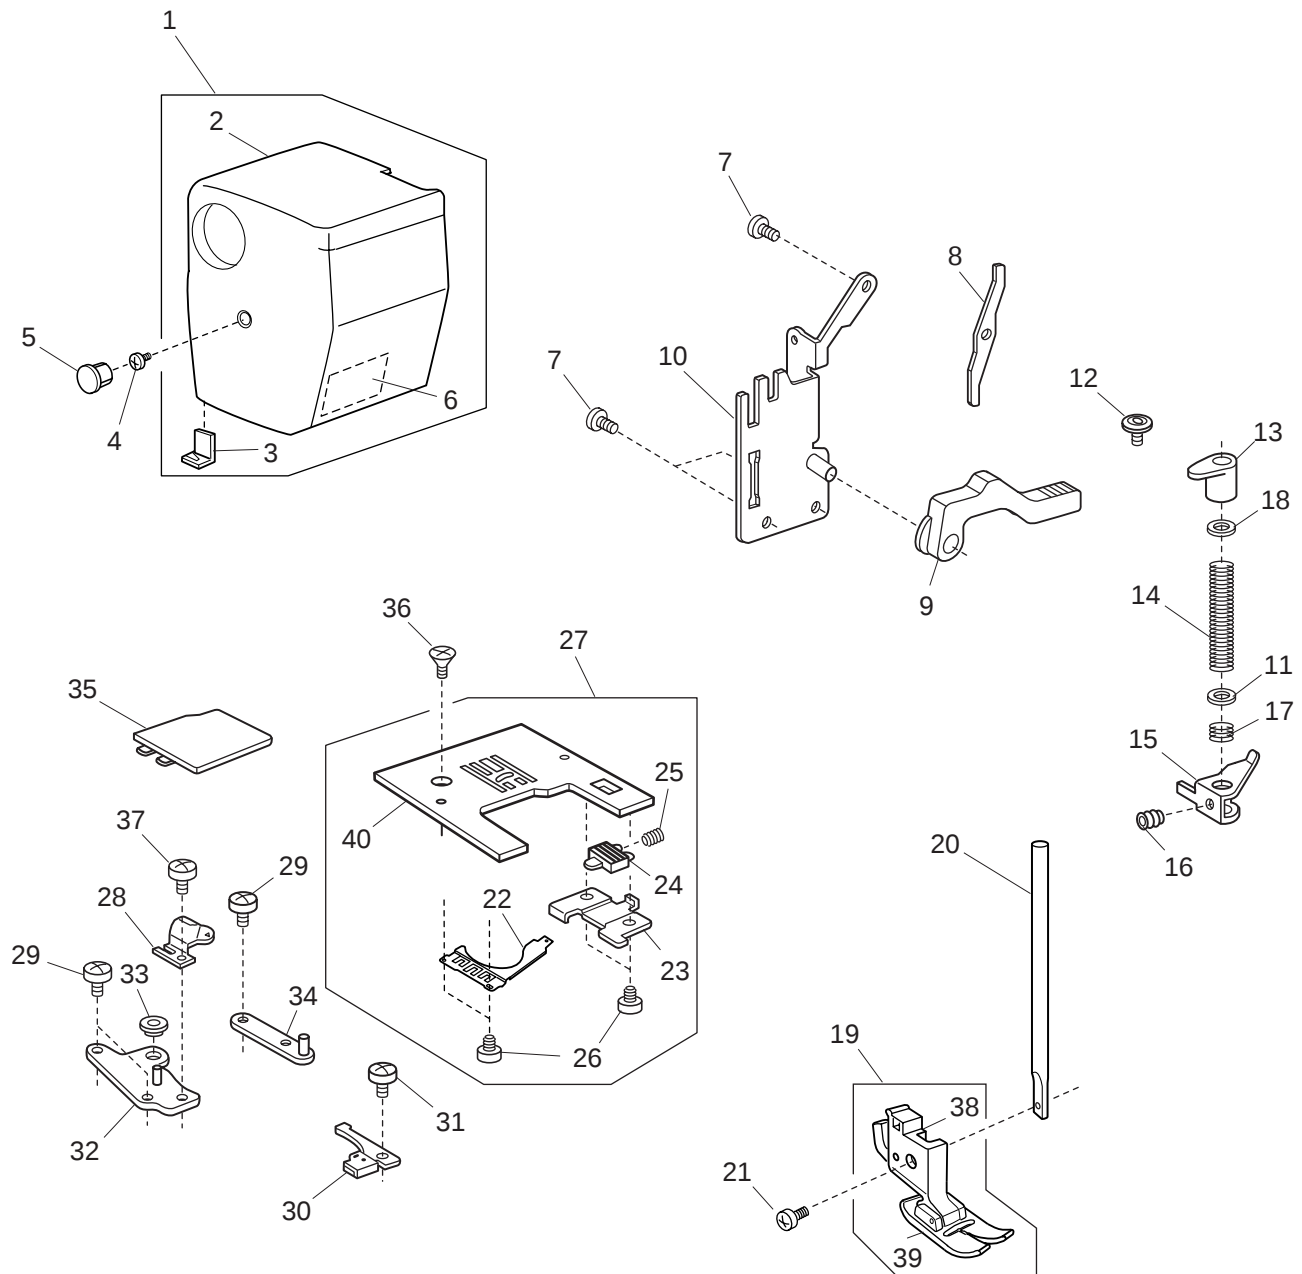

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	507632173	Face plate (unit)
2	507105105	Face plate
3	840602006	Thread cutter (unit)
4	000101703	Setscrew 4x12
5	653006101	Cap
6	724025006	Reflecting sticker (2)
7	000081005	Setscrew 4x8
8	751142004	Thread tension release lever
9	735029004	Presser foot lifter
10	507156008	Presser bar base plate
11	826055004	Washer
12	000193001	Thin-head setscrew TP4x6
13	652104004	Presser bar bushing
14	826006000	Presser bar spring
15	735028003	Presser bar supporter
16	000111500	Hexagonal socket screw 4x8
17	826056005	Presser foot support spring
18	652201002	Washer
19	660508007	Presser foot (unit)
20	827021004	Presser bar
21	660106001	Thumb screw
22	832235010	Hook cover plate supporter (left)
23	825015010	Hook cover plate supporter (right)
24	825016000	Hook cover plate release button
25	825017001	Spring
26	820374004	Setscrew 2x2.3
27	751603400	Needle plate (unit)
28	822011109	Bobbin holder stopper
29	000066705	Setscrew 3x8
30	751502006	Bobbin holder stopper (unit)
31	810220003	Setscrew
32	751008007	Needle plate adjusting plate (left)
33	822314002	Nut
34	751009008	Needle plate adjusting plate (right)
35	750036012	Hook cover plate
36	820390109	Needle plate setscrew
37	000103808	Setscrew 3x5
38	660806008	Presser foot holder
39	685502019	Zigzag foot
40	653179003	Needle plate (unit)


PARTS LIST

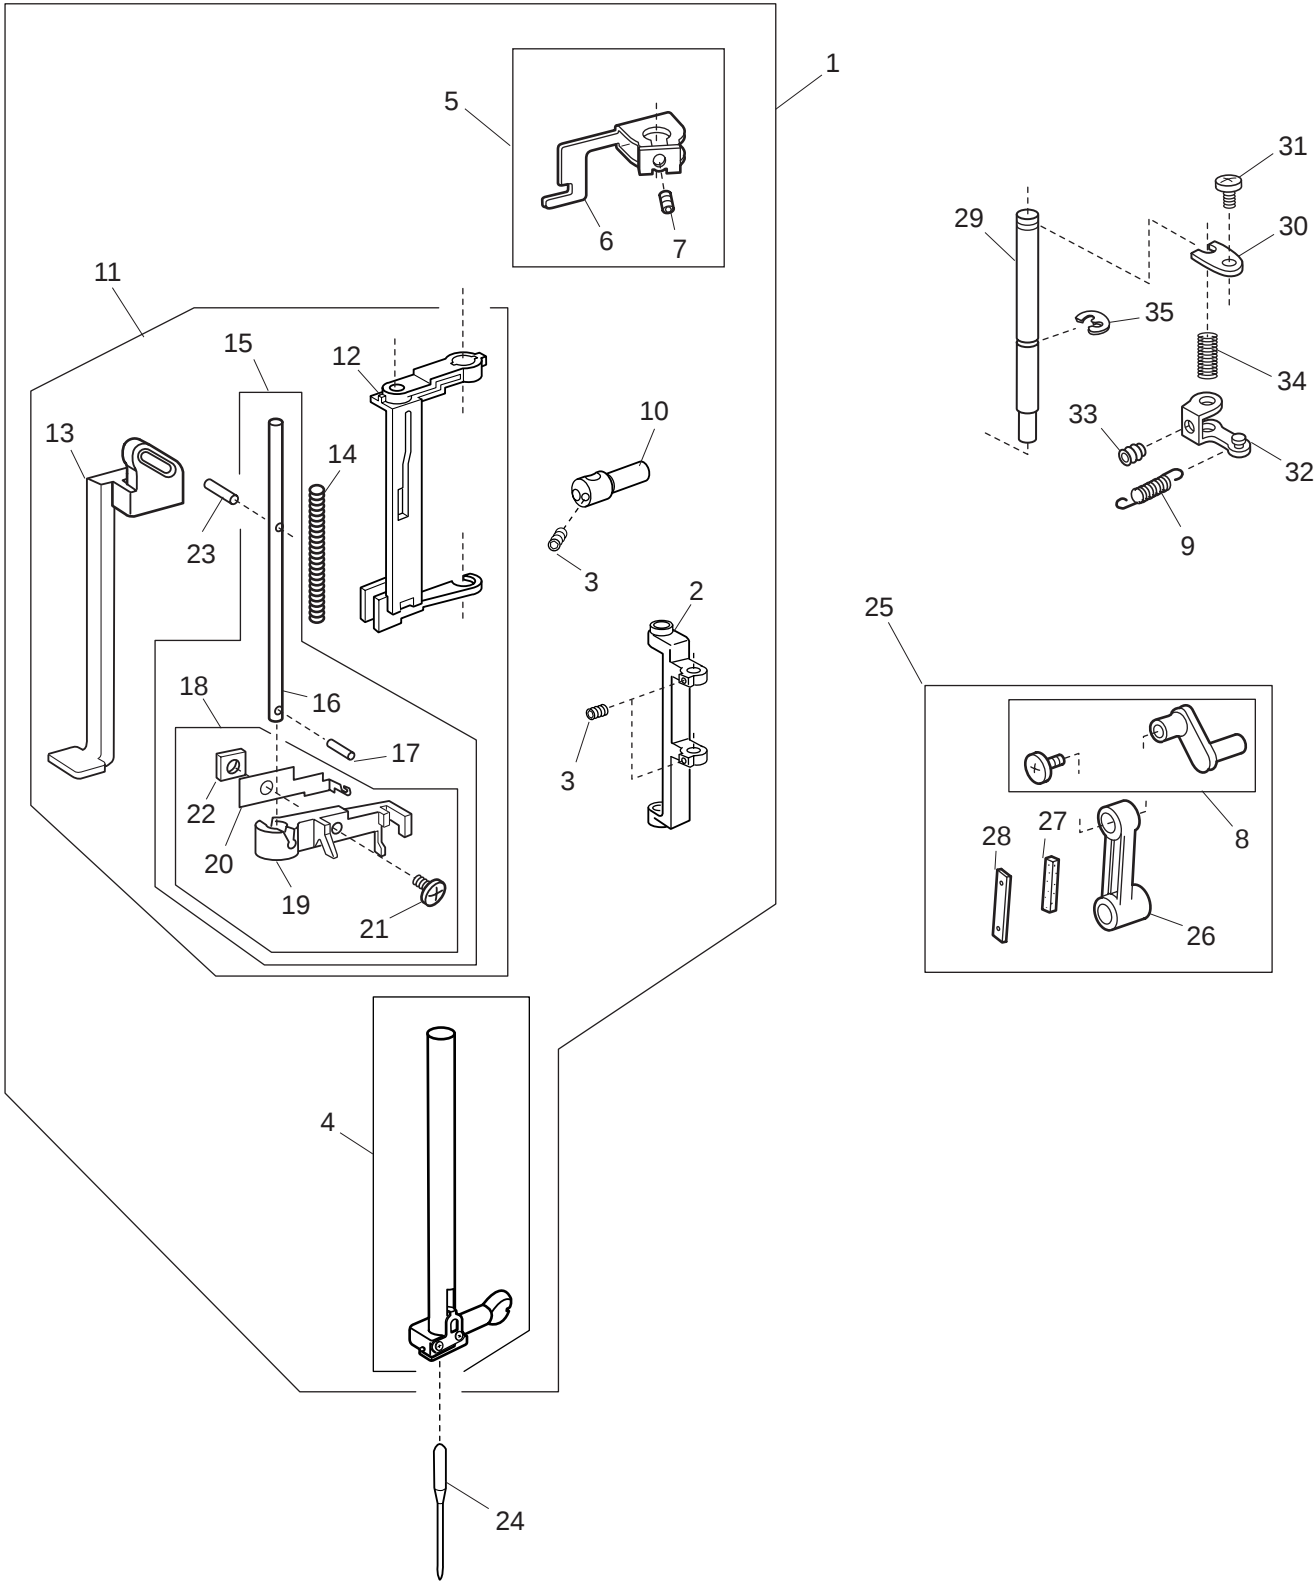

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	755627103	Needle bar supporter (unit)
2	751014006	Needle bar supporter
3	000111201	Hexagonal socket screw 4x4
4	751630015	Needle bar (unit)
5	807607019	Threader positioning setting plate (unit)
6	807018109	Threader positioning setting plate
7	000111902	Hexagonal socket screw 3x4
8	652512009	Needle bar crank pin (unit)
9	507094007	Needle bar supporter spring
10	751047008	Needle bar connecting stud
11	853509002	Needle threader (unit)
12	755062001	Threader frame
13	853026000	Threader lever
14	755067006	Needle threader spring
15	755625008	Threader shaft (unit)
16	755066005	Threader shaft
17	000003508	Knock pin 2x8
18	755643002	Threader plate (unit)
19	755064003	Threader guard plate
20	755065004	Threader plate
21	755096004	Setscrew
22	755095003	Nut
23	000125105	Pin E2x16-CH
24	102408089	Needle HA-14
25	846615000	Needle bar crank (unit)
26	650039001	Needle bar crank rod
27	650040005	Felt
28	650041006	Spring
29	650033005	Supporter shaft
30	650034006	Supporter shaft stopper plate
31	000101404	Setscrew 4x6
32	650035007	Zigzag width arm
33	000111108	Hexagonal socket screw 4x6
34	650036008	Spring
35	000001609	Snap ring E5


PARTS LIST

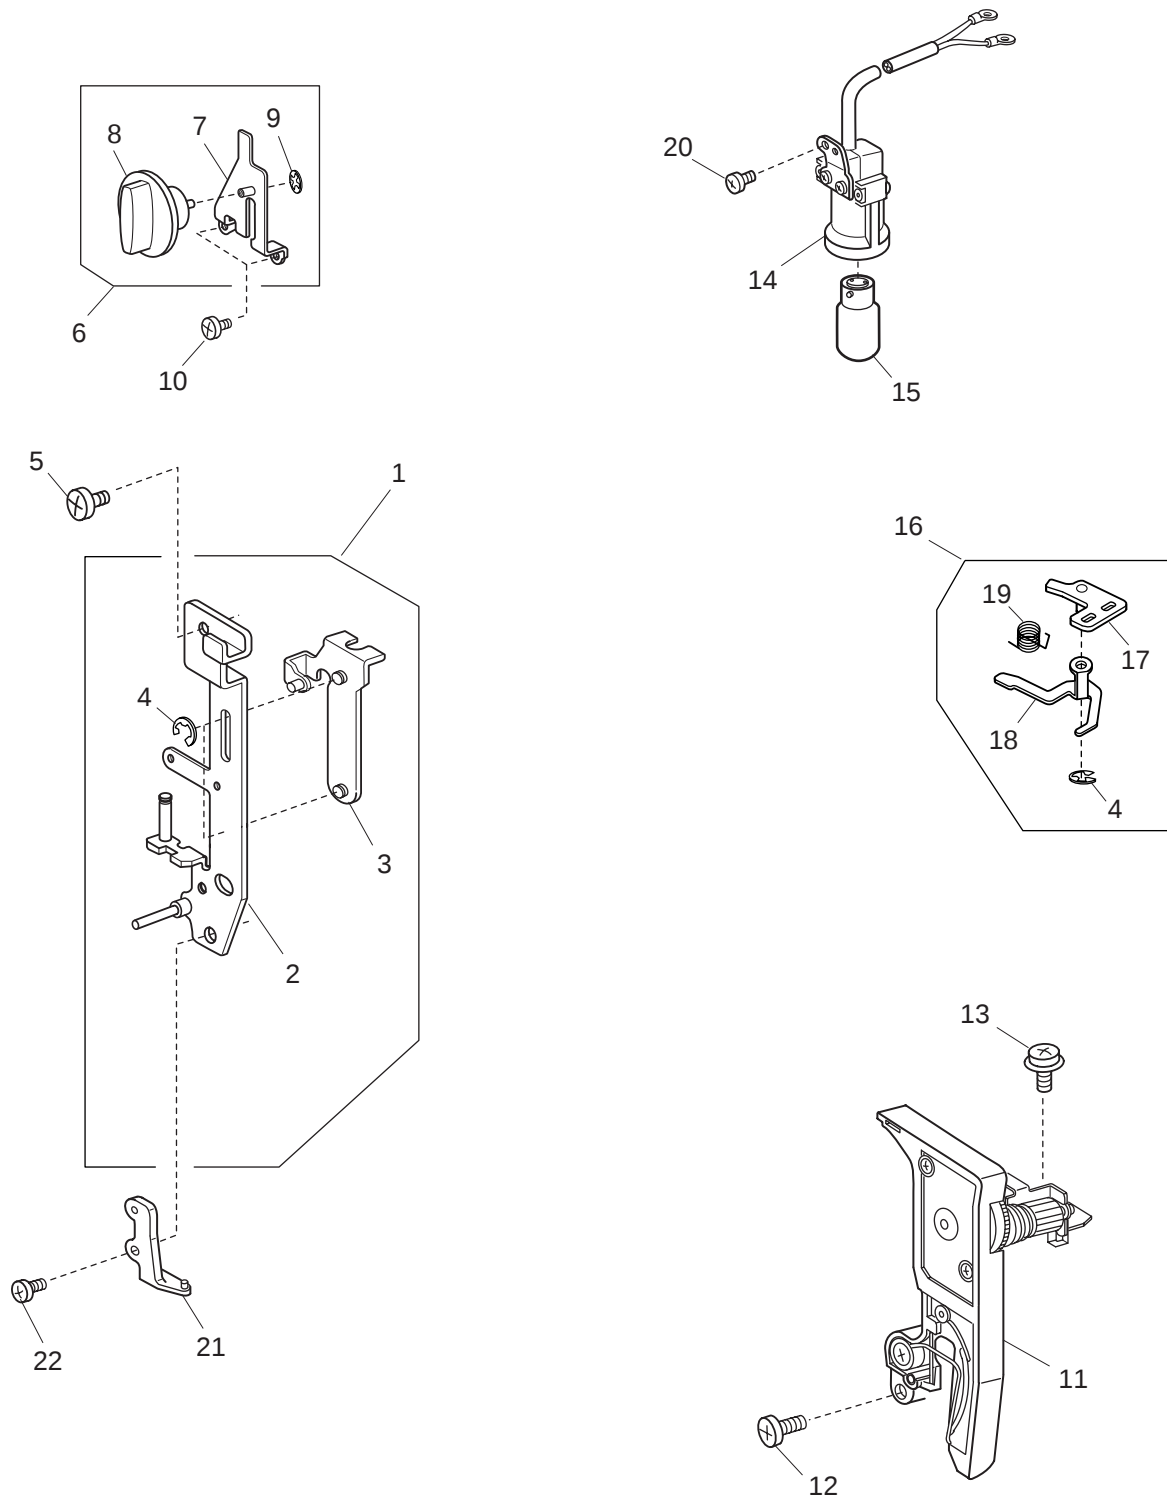

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	507615000	Front bracket (unit)
2	507007117	Front bracket
3	501009007	Presser foot pressure adjusting plate
4	000002105	Snap ring E3
5	000081005	Setscrew 4x8
6	507607009	Presser foot pressure dial (unit)
7	501008109	Dial set plate
8	507008004	Presser foot pressure dial
9	000014007	Snap ring CS-4
10	000106203	Setscrew 3.5x4
11	507504108	Thread tension (unit)
12	000101703	Setscrew 4x12
13	000115205	Setscrew TP 4x6
14	507611006	Lamp socket (unit)
15	000009009	Lamp 240V 15W
16	507638009	Thread tension release arm (unit)
17	752055002	Thread tension release arm base
18	751215009	Thread tension release arm
19	752056003	Thread tension release spring
20	000120203	Setscrew 3x8 (B)
21	755074006	Threader guide plate
22	000103509	Setscrew 4x10


PARTS LIST

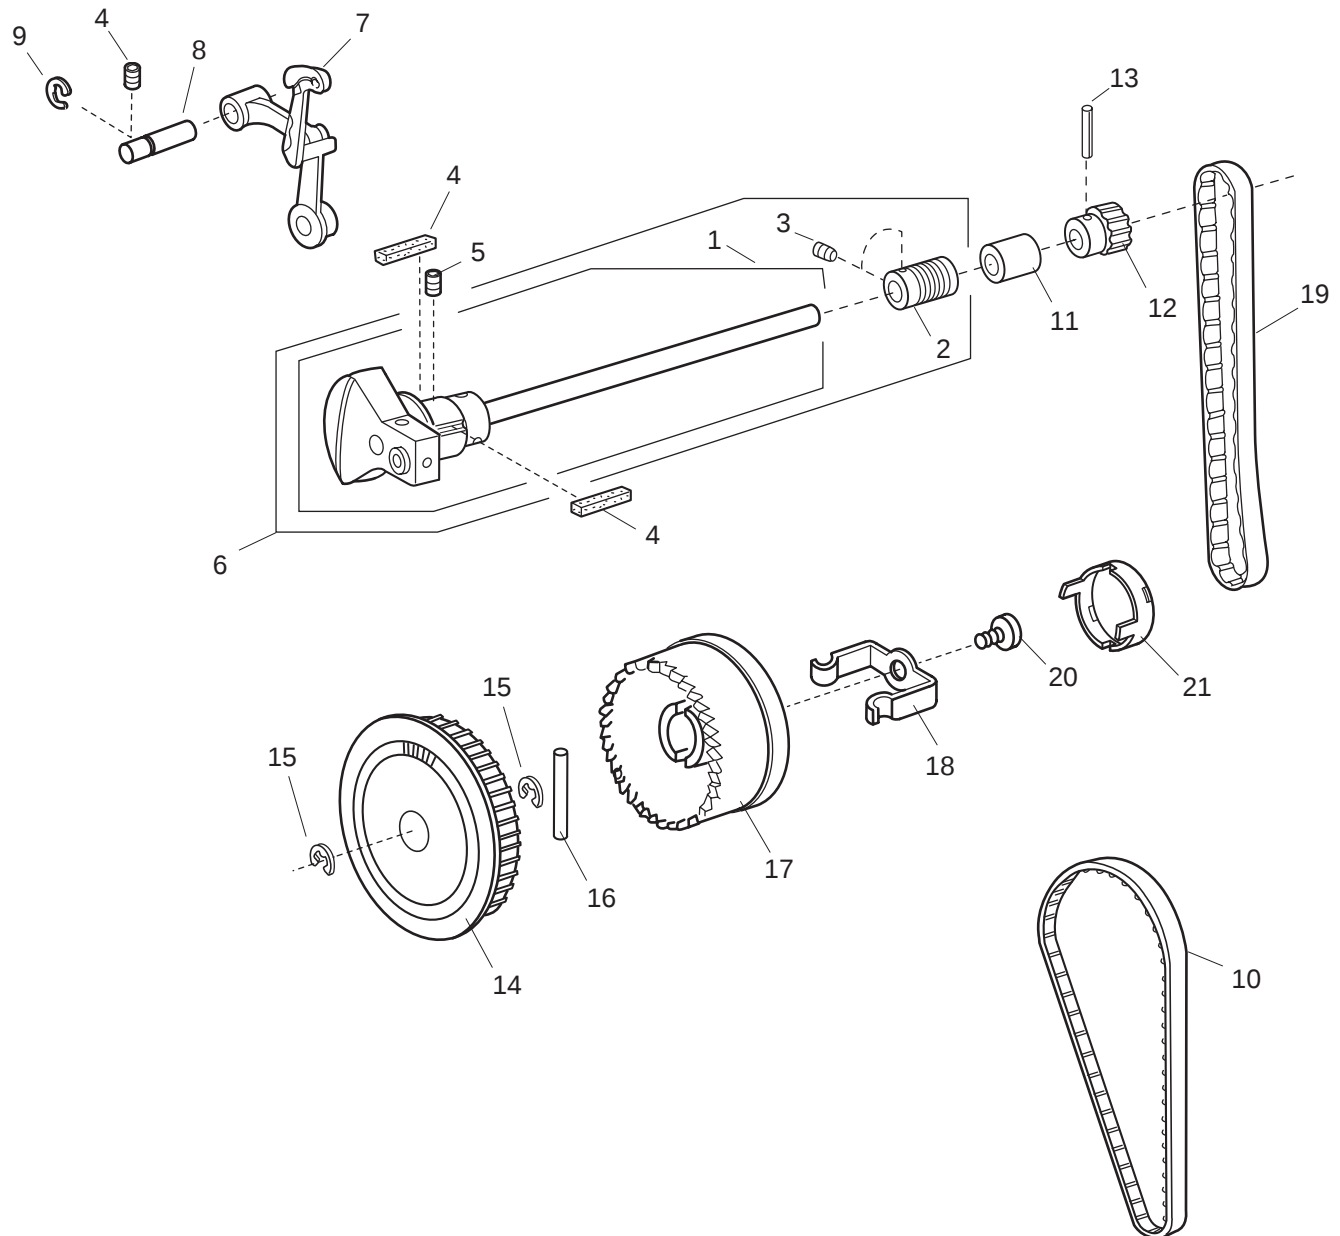

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	756504003	Upper shaft (unit)
2	507059000	Worm
3	000111201	Hexagonal socket screw 4x4
4	731384008	Felt
5	000111304	Hexagonal socket screw 5x5
6	756607100	Upper shaft (unit)
7	820511108	Thread take-up lever (unit)
8	650062003	Thread take-up lever pin
9	000002806	Snap ring E-6
10	653139012	Timing belt
11	673062004	Upper shaft rear bushing
12	756017004	Upper shaft gear
13	000020501	Knock pin 3x22
14	756018005	Belt wheel
15	000030205	Snap ring E-8
16	000023803	Knock pin 4x40
17	639097127	Handwheel
18	639113016	Clutch spring
19	650071005	Timing belt
20	000081005	Setscrew 4x8
21	650070370	Clutch cap


PARTS LIST

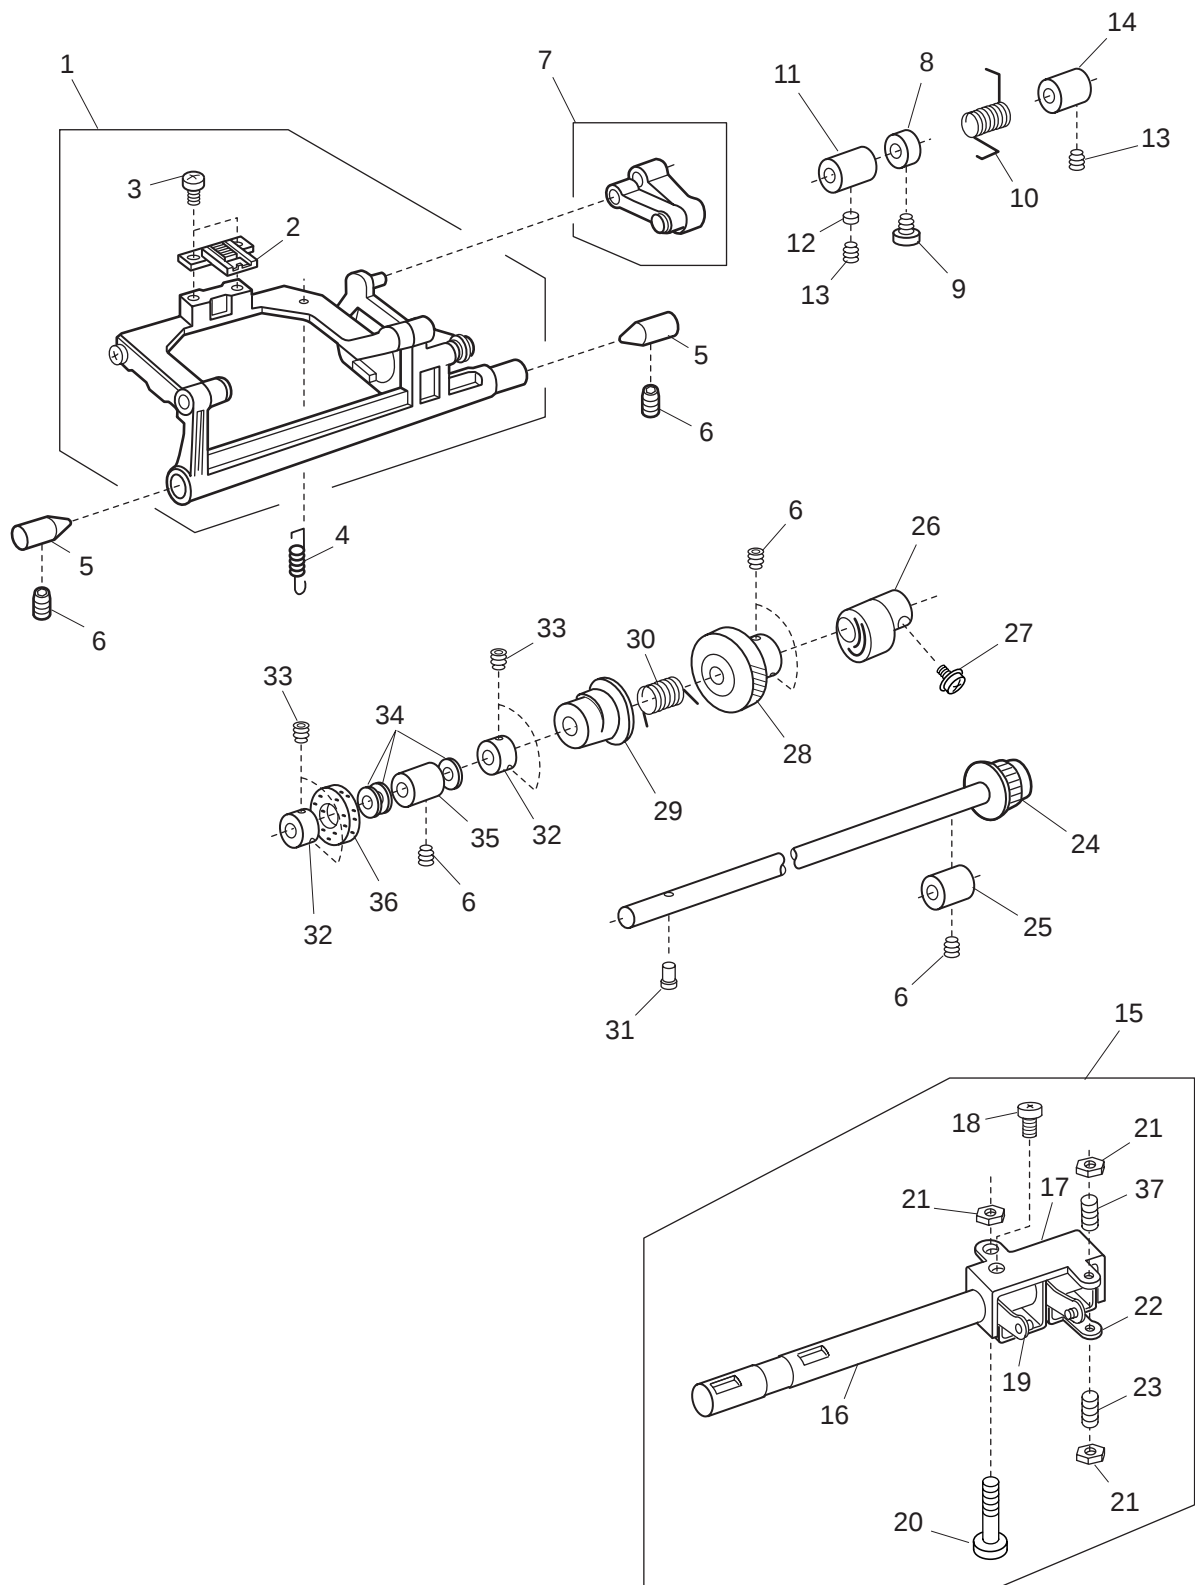

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	751666009	Feed lock shaft (unit)
2	653193003	Feed dog
3	000104005	Setscrew 3.5x8
4	650085002	Feed base spring
5	738055008	Straight pin
6	000111304	Hexagonal socket screw 5x5
7	650612004	Feed regulator (unit)
8	820387000	Ring
9	000081005	Setscrew 4x8
10	507095008	Feed regulator spring
11	625144002	Feed shaft bushing (front)
12	650175000	Cushion
13	000111108	Hexagonal socket screw 4x6
14	650092002	Feed shaft bushing (rear)
15	507608103	Feed regulating plate (unit)
16	507062006	Feed shaft
17	507011103	Feed shaft set plate
18	000081500	Setscrew 3x12
19	507064101	SS adjusting plate
20	507087007	Setscrew
21	000160102	Adjustable lock nut 4
22	507063007	Feed regulating plate
23	648010009	Setscrew
24	751612206	Lower shaft (unit)
25	650079003	Lower shaft bushing (rear)
26	751148000	Feed cam
27	000115009	Setscrew TP 3x8
28	650955002	Lower shaft gear
29	753183025	Feed lifting cam
30	686035008	Feed lifting cam spring
31	820161006	Feed lifting pin
32	820166001	Lower shaft ring
33	000111201	Hexagonal socket screw 4x4
34	000038502	Washer
35	650078002	Lower shaft bushing (front)
36	735143005	Felt
37	000159201	Setscrew 4x12


PARTS LIST

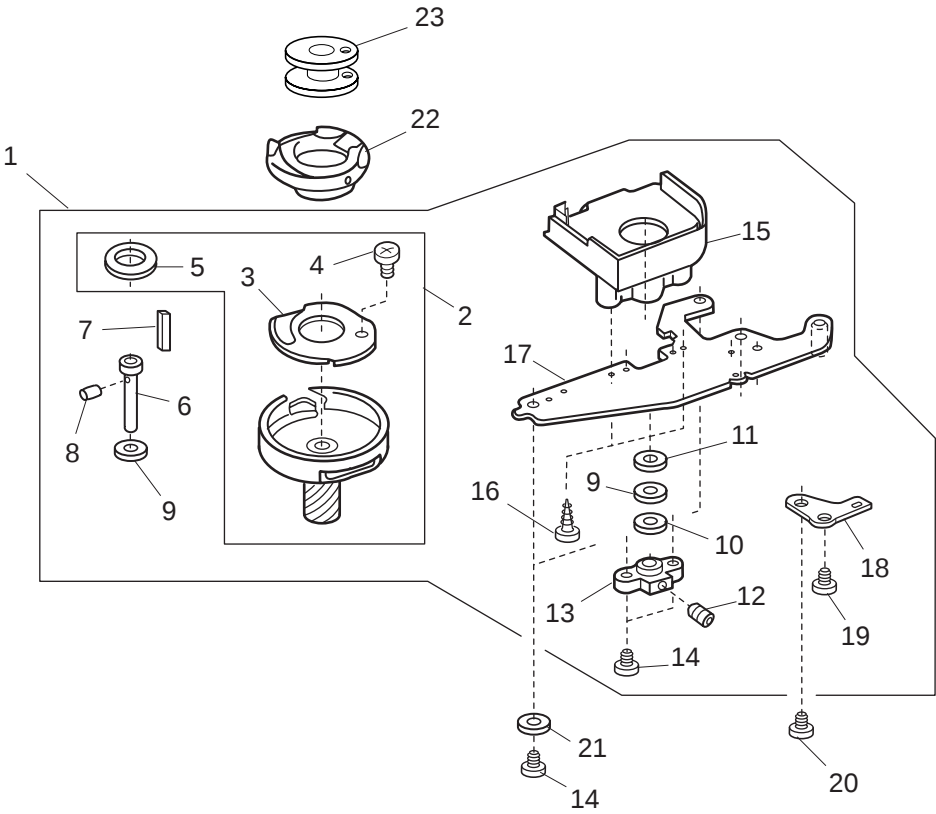

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	827614022	Hook race (unit)
2	652623004	Hook body (unit)
3	627191000	Hook bottom plate
4	820374004	Setscrew 2x2.3
5	627190010	Magnet
6	820123006	Hook race shaft
7	820124007	Oil string(1)
8	820125008	Oil string(2)
9	000038409	Washer 6x0.5
10	625102008	Washer
11	627192001	Hook race shaft washer
12	000111304	Hexagonal socket screw 5x5
13	650094004	Hook race shaft base
14	000081005	Setscrew 4x8
15	827040009	Cover
16	000107204	Setscrew 3x12 (B)
17	823106002	Hook race set plate
18	650171006	Position set plate
19	000101404	Setscrew 4x6
20	650172007	Setscrew
21	000070506	Washer 4
22	627569106	Bobbin holder (unit)
23	102261000	Bobbin


PARTS LIST

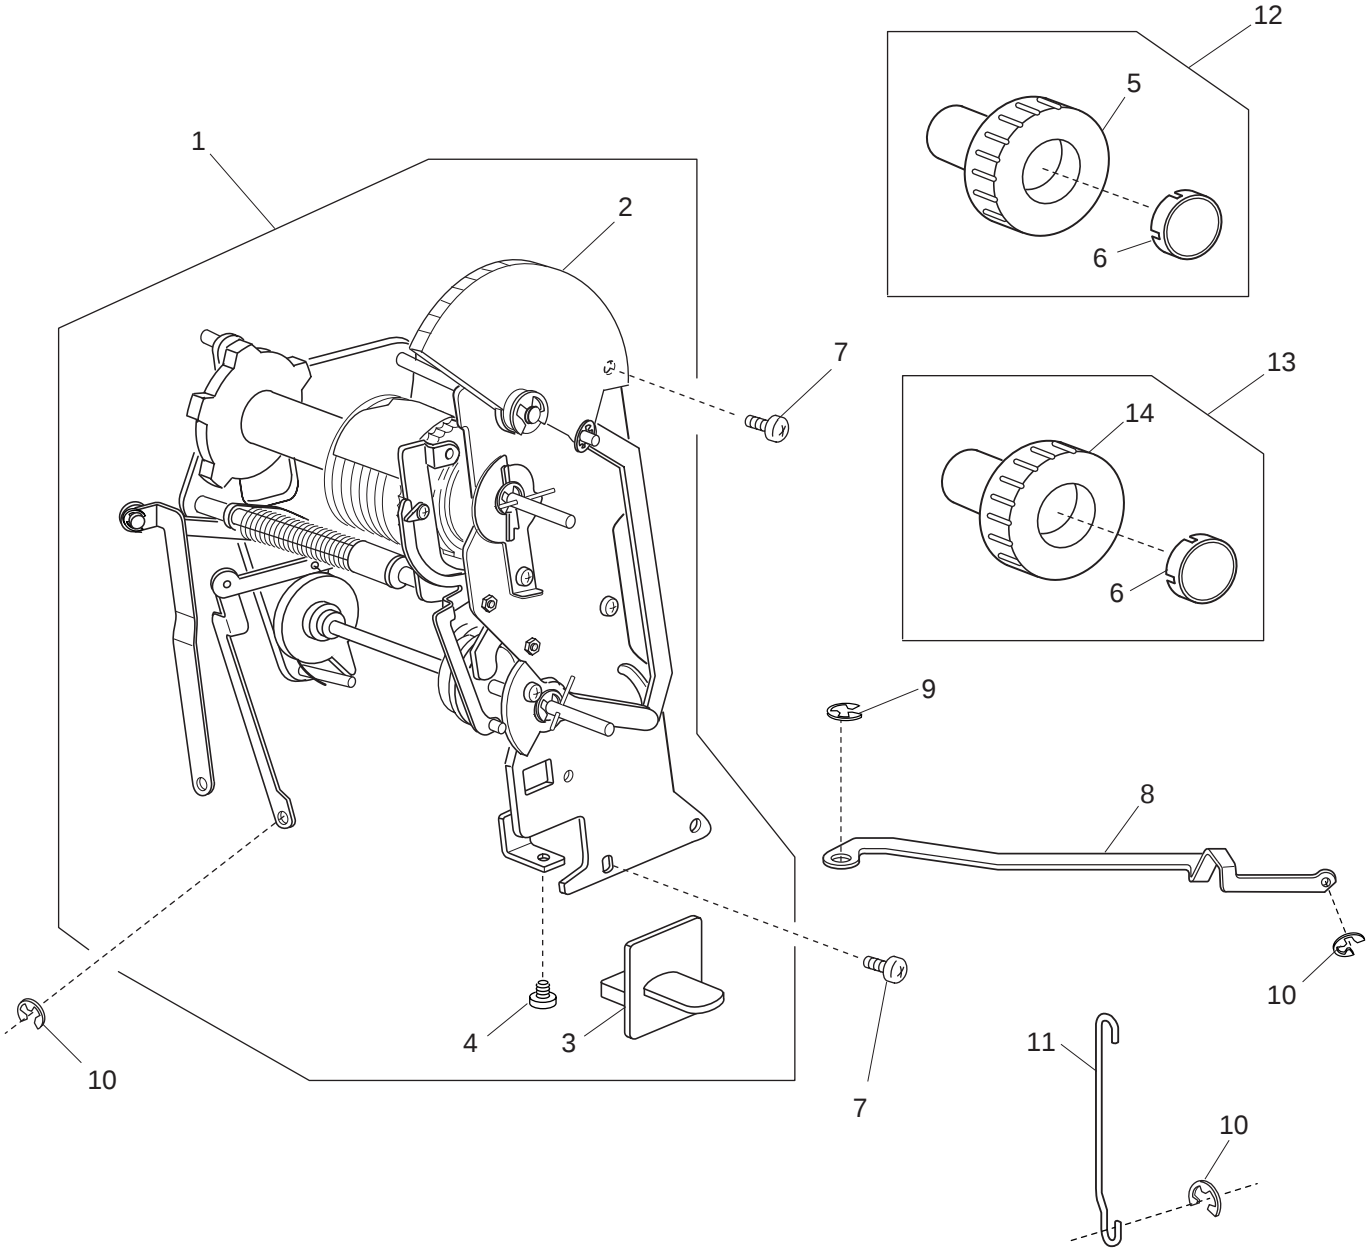

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	507633004	Cam block (unit)
2	507041205	Zigzag width dial
3	507109109	R lever
4	000107307	Setscrew 3x8 (B)
5	507112482	Pattern selector dial
6	507113003	Dial cover
7	000081005	Setscrew 4x8
8	507066000	Zigzag width rod
9	000002507	Snap ring E-4
10	000002105	Snap ring E-3
11	507047005	BH Rod
12	507635338	Pattern selector dial (unit)
13	507635349	Feed dial (unit)
14	507112493	Feed dial

PARTS LIST

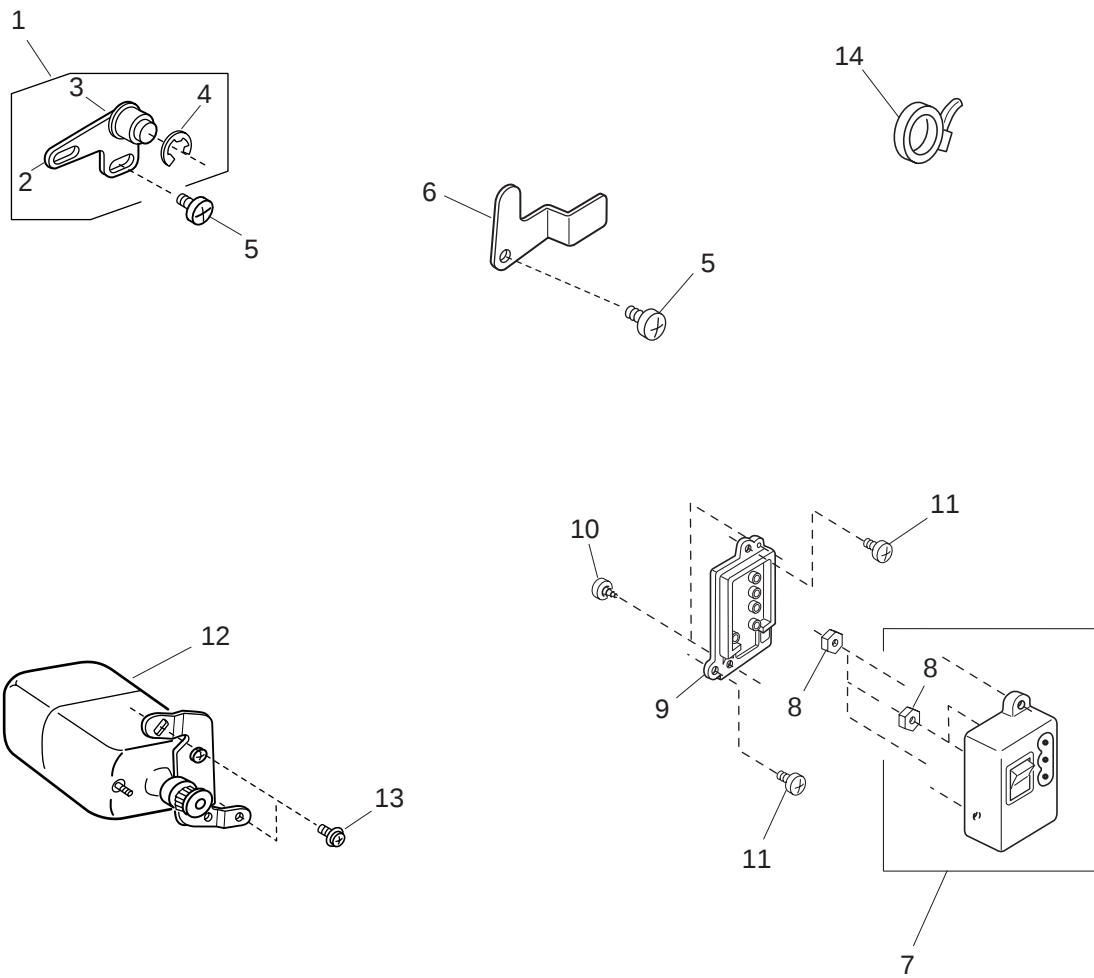

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	753619003	Idler (unit)
2	753119008	Idler base
3	625217100	Idler
4	000002806	Snap ring E-6
5	000081005	Setscrew 4x8
6	507067001	Set plate
7	739503308	Machine socket (unit)
8	000060802	Nut
9	505064002	Machine socket cover
10	000107802	Setscrew 3x10
11	000103509	Setscrew 4x10
12	752671309	Motor (unit)
13	000115504	Setscrew TP 5x10
14	000053709	Cord binder


PARTS LIST

1


2




3




4




5

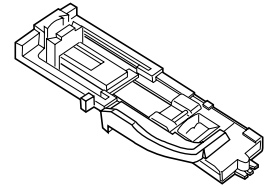


6

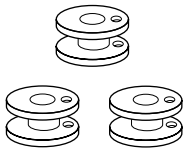


7



8




9




10




11




12




13




14



15

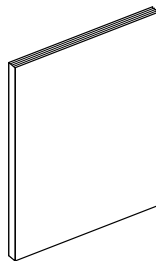

16

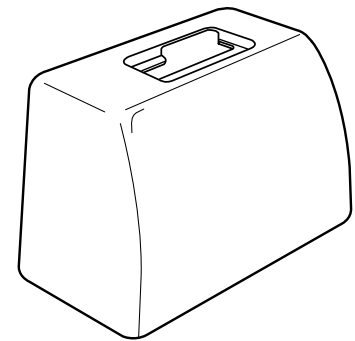

PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION
1	507873008	Standard accessories (unit)
2	820801016	BH foot (unit)
3	820817015	Blind hem foot (unit)
4	829801002	Zipper foot (unit)
5	825813016	BH foot (unit)
6	102261000	Bobbin
7	540401026	Needle case (unit)
8	822019509	Spool holder (small)
9	625031500	Additional spool pin (2)
10	102403109	Felt
11	647808009	Seam ripper (buttonhole opener) (unit)
12	820832005	Screwdriver (large)
13	802424004	Lint brush
14	C-2037-1	Foot control (unit)
15	507800532	Instruction book
16	479713205	Cover